

Trainings ▾

Cylinder Block


Tool Number

3823495

Depth Gauge Assembly

Used to measure cylinder liner protrusion and cylinder liner counterbore ledge angle.

©Cummins Inc

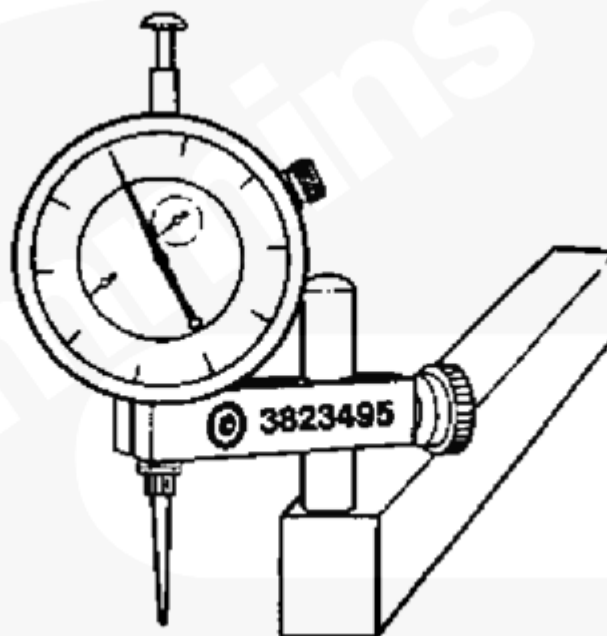

3823495


Tool Number

ST-647

Puller

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

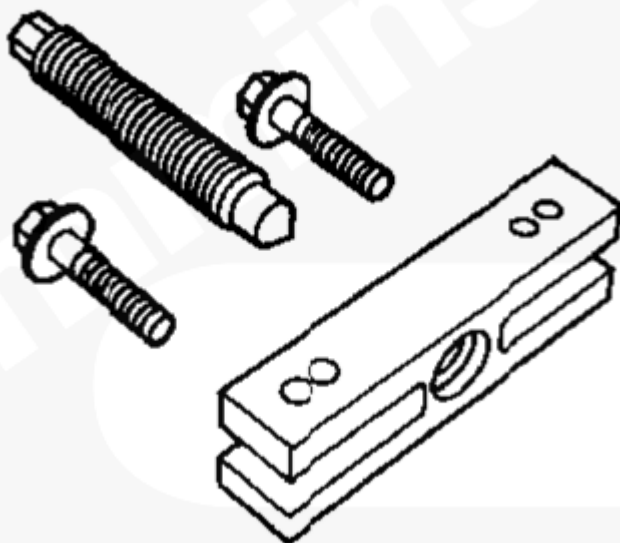

ad8toga

Tool Number


ST-1134

Dowel Pin Extractor

Used to remove dowel pins and crosshead guides.

© Cummins Inc.

© Cummins Inc.

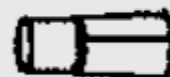

ck8toge


Tool Number

ST-1178

Main Bearing Cap Pulley

Used to remove the main bearing caps from the cylinder block.

©Cummins Inc

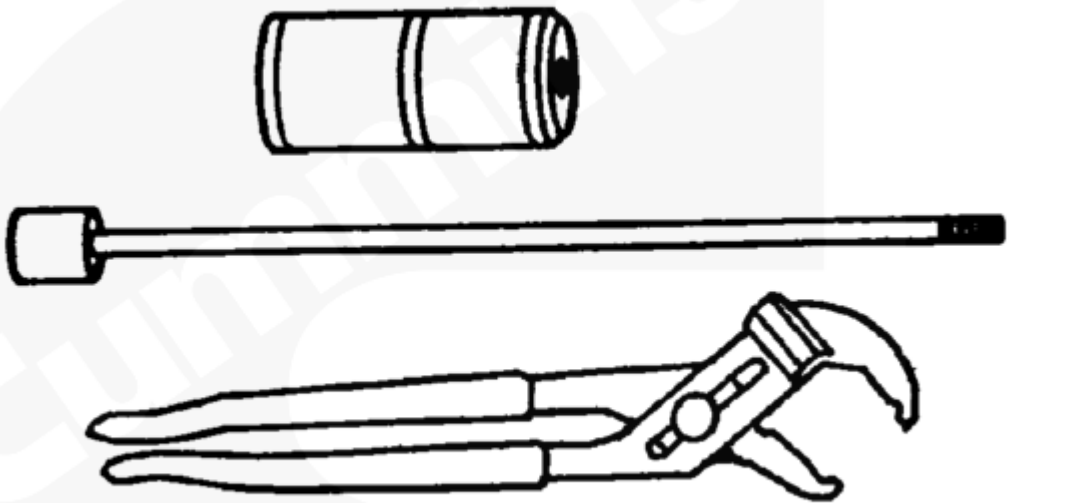

mb8toga



Tool Number

ST-1232

Drill Ream Fixture

Machine dowel hole to install oversize dowels in cylinder block and flywheel housing. Use with a drill, reamer, and the appropriate drill/ream bushing set.

©Cummins Inc

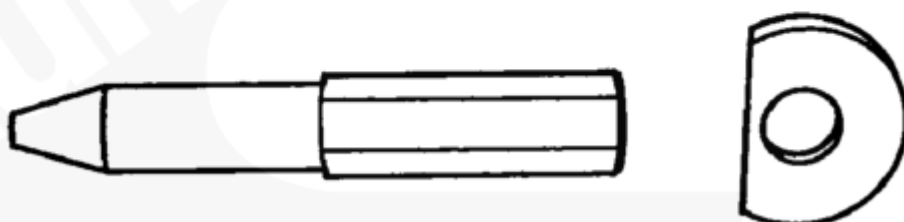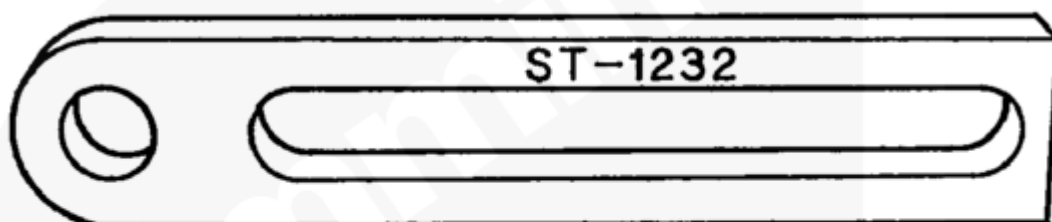

st-1232


Tool Number

ST-1269

Piston Ring Expander

Designed to install piston rings on the piston without damaging or distorting the rings.

©Cummins Inc

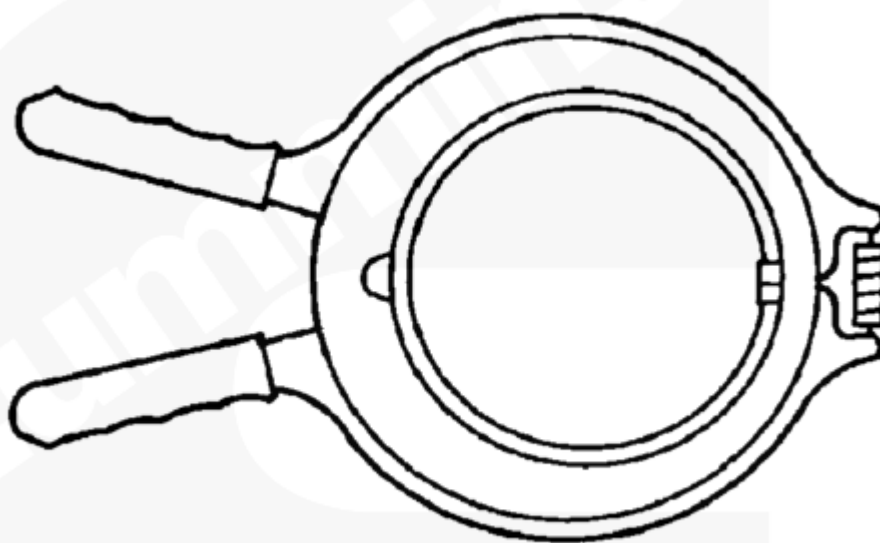

pi8togd


Tool Number

4918898

Piston Ring Compressor

Designed to compress piston rings for piston installation.

©Cummins Inc

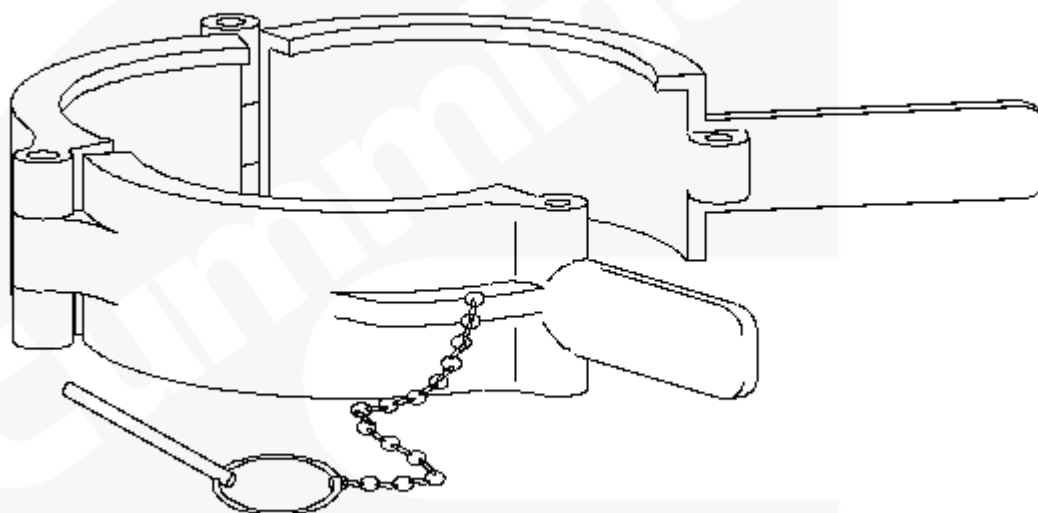

3163158


Tool Number

3375098

Connecting Rod Guide Pins

Special nylon pins used to protect the crankshaft journal by guiding the connecting rod during installation or removal.

©Cummins Inc

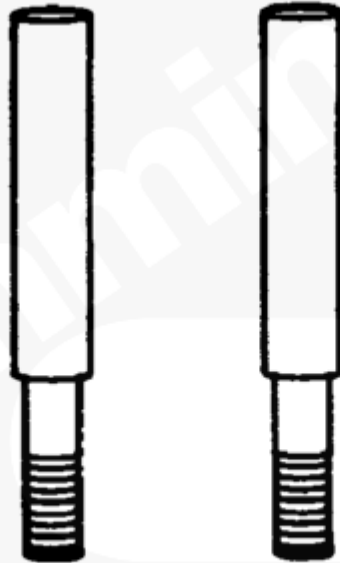


cx8togg

Tool Number

3375252

Engine Support Bracket Kit

Used to support the front of the engine to allow the front support or oil pan adapter to be removed.

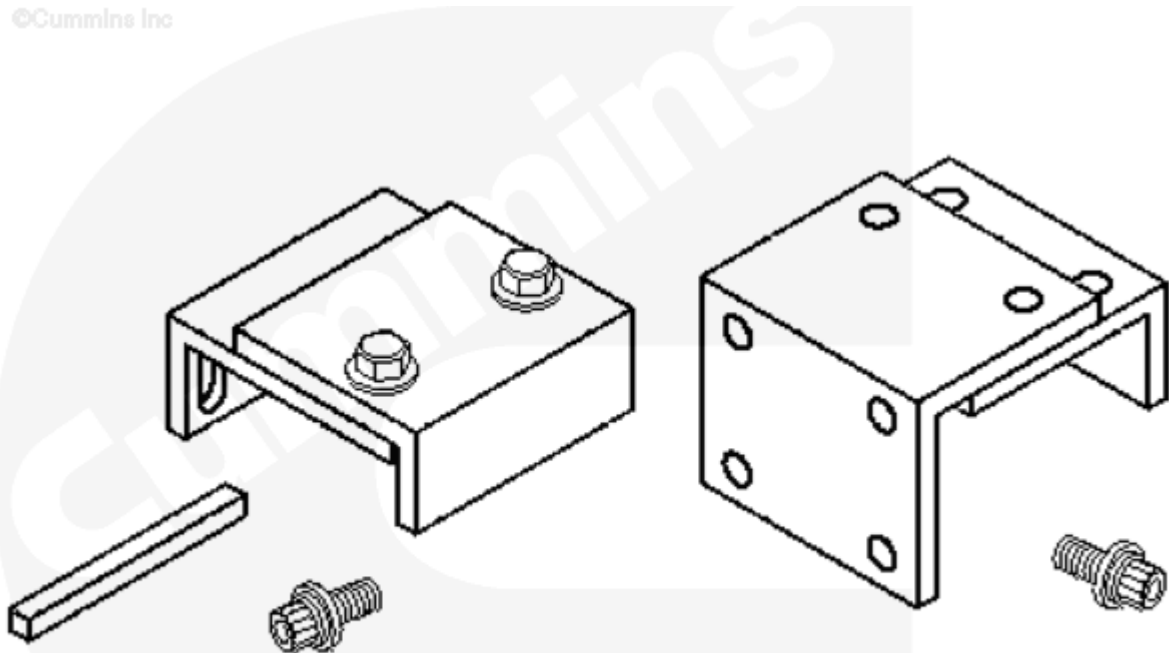

22800428


Tool Number

3375422

Liner Installation Tool

Used to install cylinder liner in engine.

©Cummins Inc

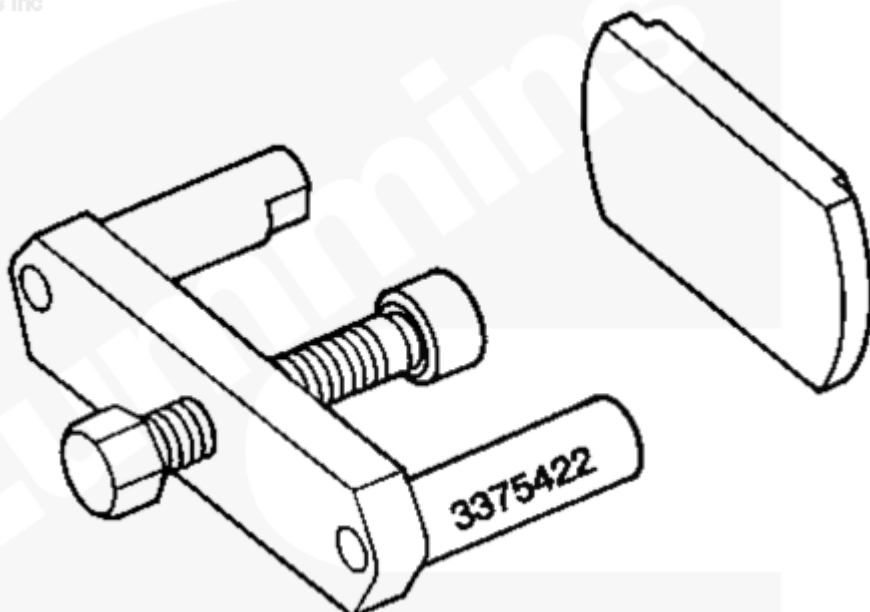

3375422


Tool Number

3375432

Crack Detection Kit

Used to check for cracks in any engine component. Contains cleaner, developer, and penetrant.

©Cummins Inc

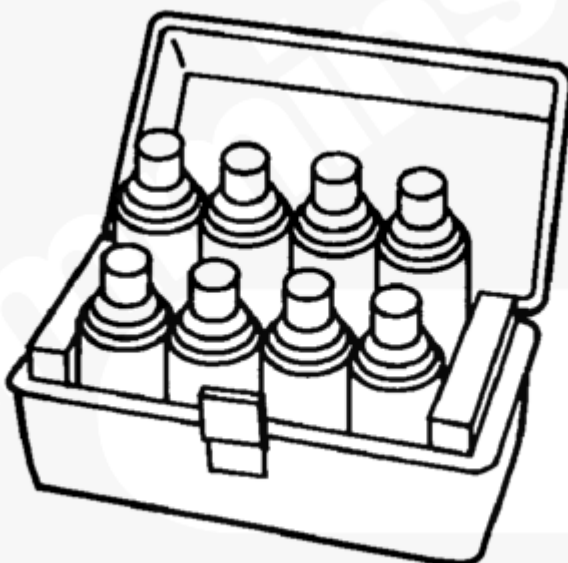

bp8togj


Tool Number

3824942

Injection Timing Tool

Used to check injection timing. The timing fixture is designed to determine the push tube travel in relation to the piston travel.

©Cummins Inc

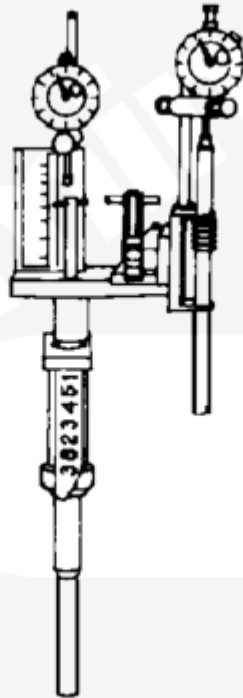

3823451


Tool Number

3824946

Universal Timing Tool Adaptor Kit

This kit includes the hardware needed to upfit the Universal Injector Timing Fixture, Part Number 3823451, to the QSK19 engine.

©Cummins Inc

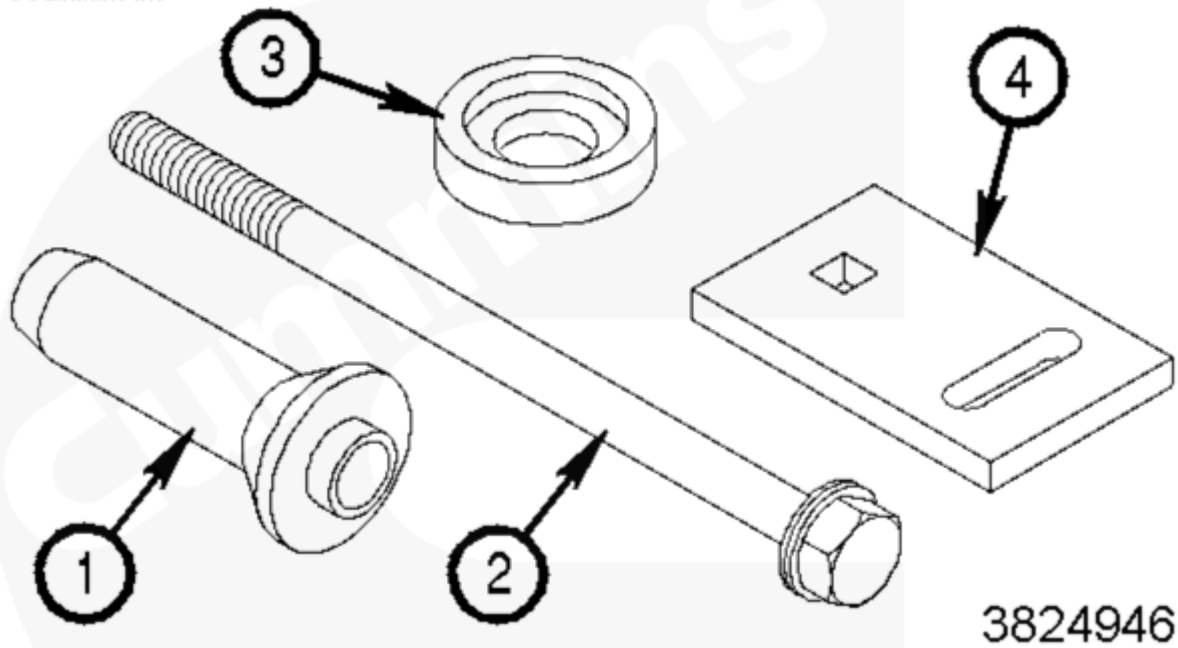


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

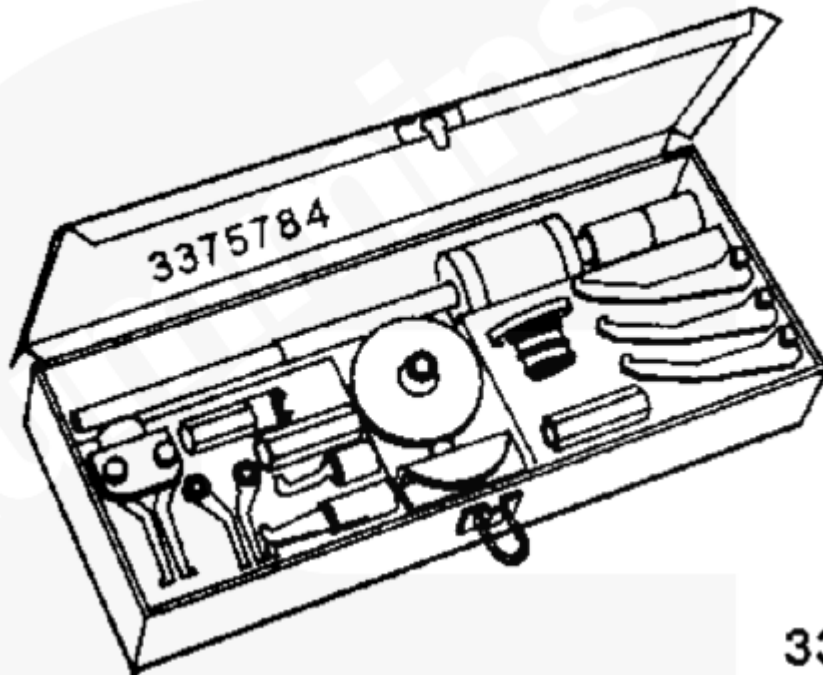

3375784


Tool Number

3375834

Puller Assembly

Used to remove the crankshaft gear from the crankshaft. Use with Part Number 3375835, Puller Jaw.

©Cummins Inc

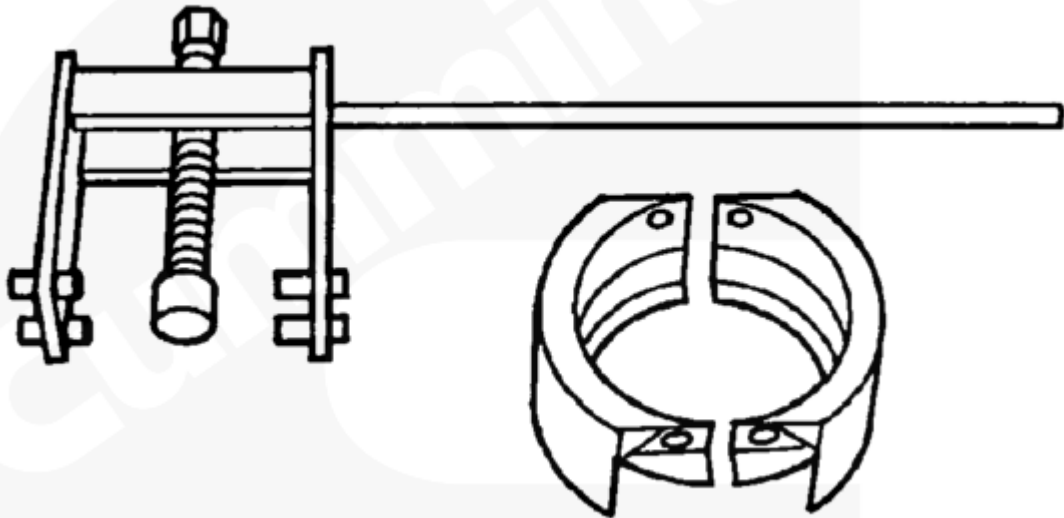

ks8togd


Tool Number

3163745

Liner Remover

Used with liner remover plate, Part Number 3162886, to remove the cylinder liner from the engine.

©Cummins Inc

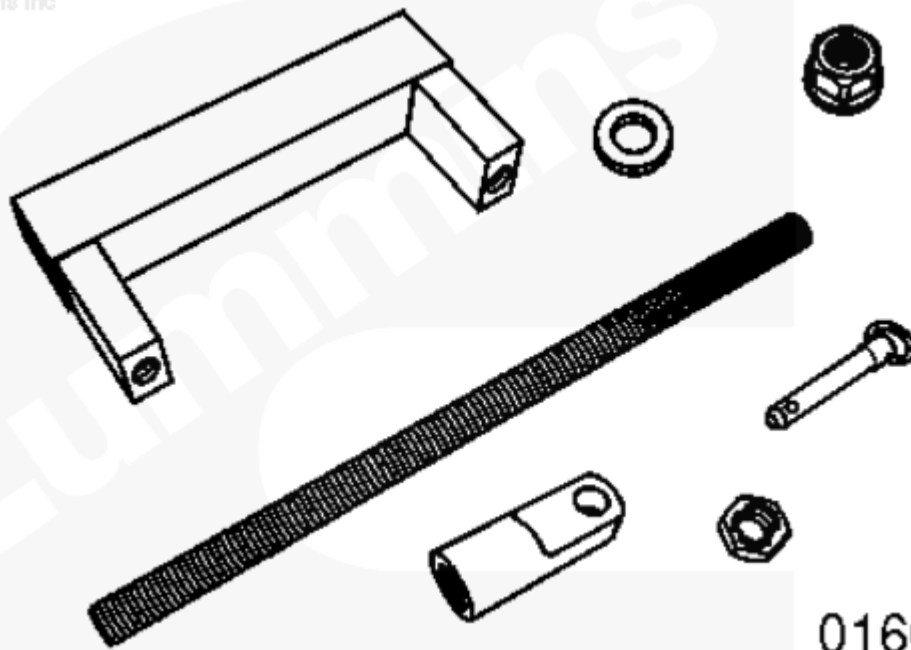

01600269


Tool Number

3376015

Universal Liner Puller

Used to remove cylinder liner from engine.

©Cummins Inc

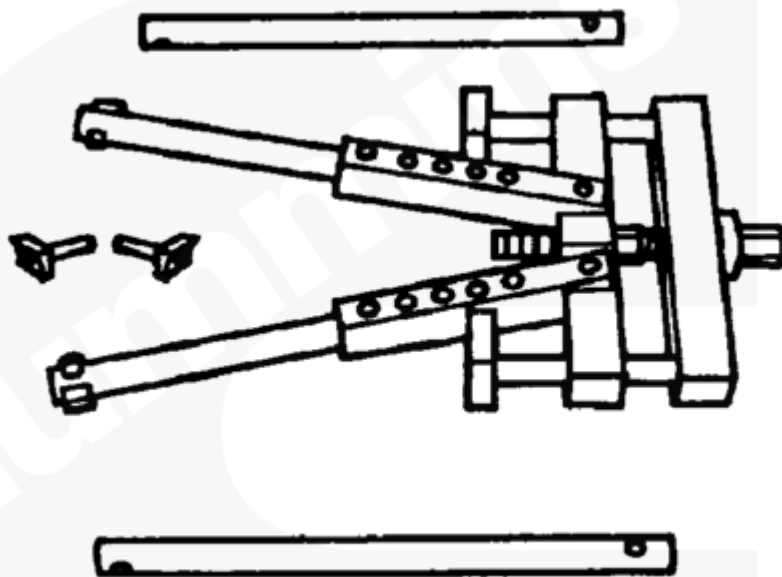

ck8togr

Tool Number

3376326

Pulley Installation Tool

Used to install the alternator and accessory drive pulleys.

©Cummins Inc



ad8togb


Tool Number

3823494

Cummins® Sealant

Used to prevent coolant or oil leaks. This is one part Room Temperature Vulcanizing (RTV) silicone rubber, adhesive, and sealant material having high heat and oil resistance, and low compression rate.

©Cummins Inc

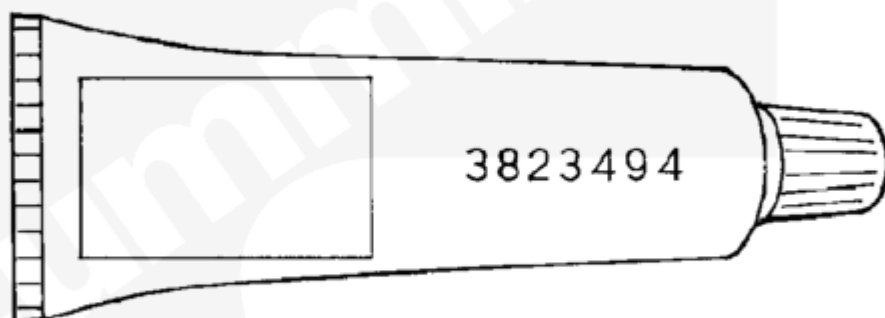**3823494**


Tool Number

3823621

Camshaft Bushing Tool Hydraulic Actuator Kit

Hydraulic ram provides the force to install/remove cam bushings when used with installation/removal kit.

©Cummins Inc

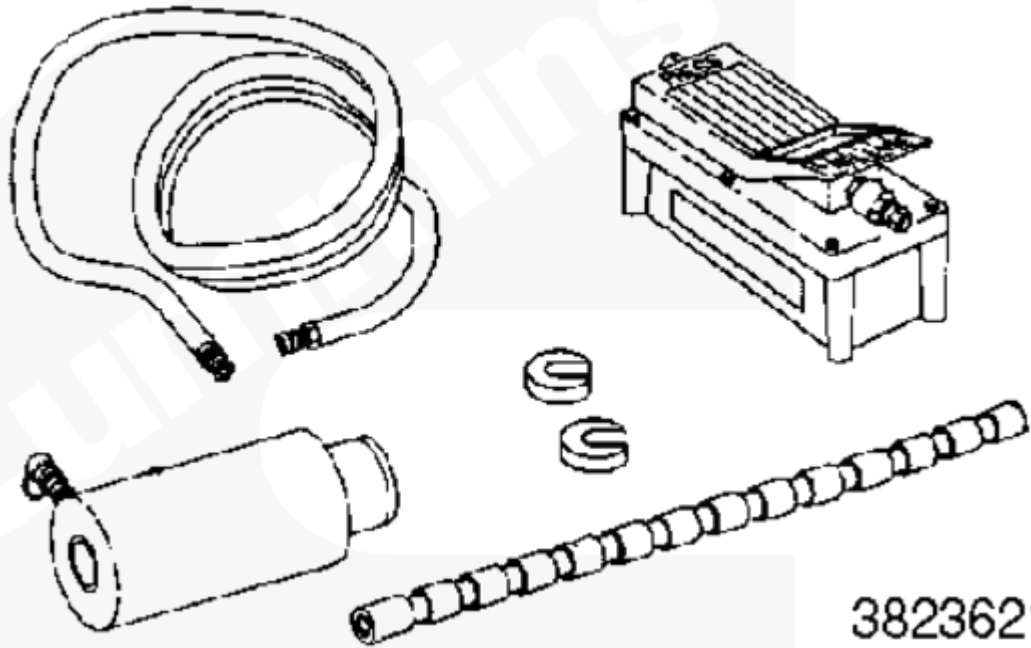

3823621


Tool Number

3824863

Camshaft Bushing Installation/Removal Kit

Used with the Part Number 3823621, Camshaft Bushing Hydraulic Actuator Kit to remove the camshaft bushing.

©Cummins Inc

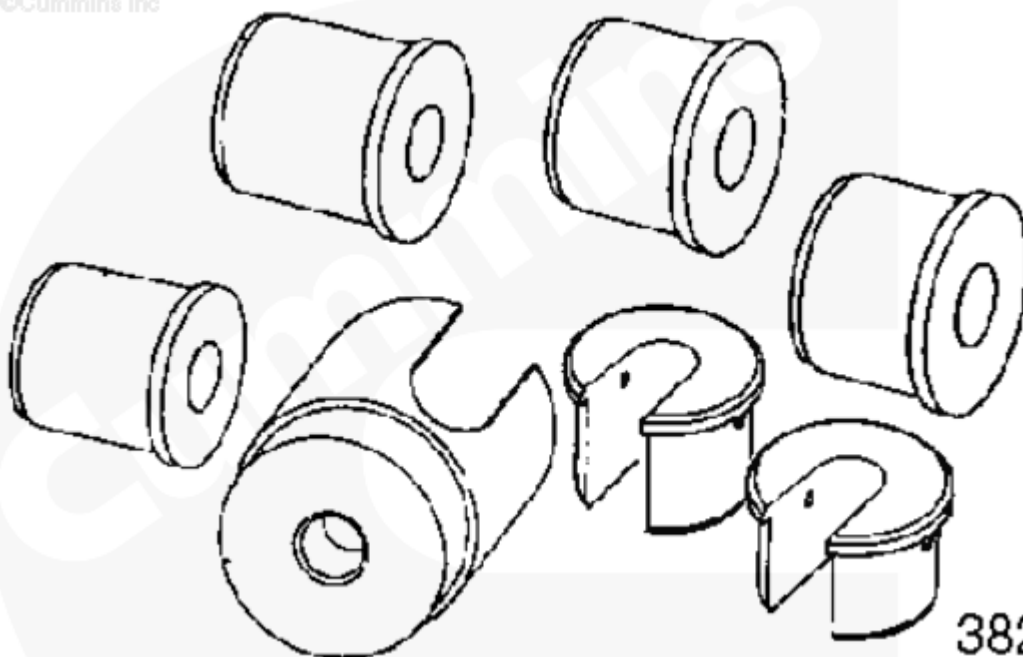

3824842


Tool Number

3825150

Camshaft Pilot

Used to install camshaft without damaging the camshaft bushings or camshaft.

©Cummins Inc

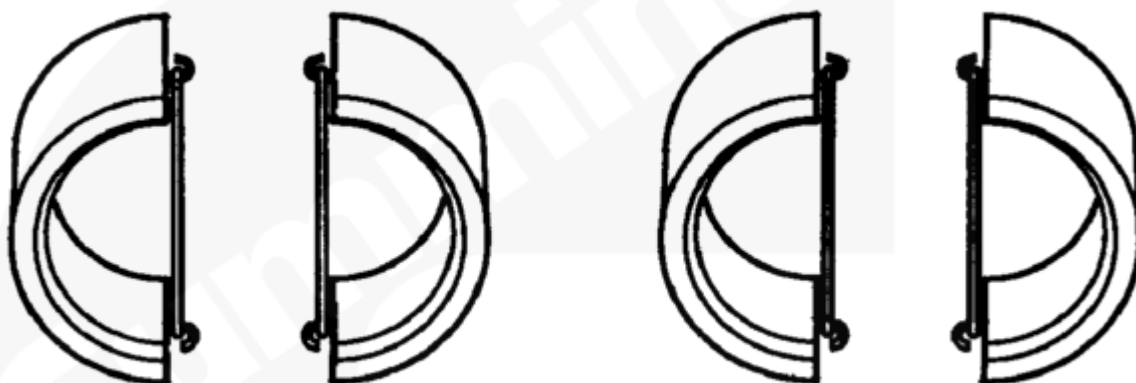

cg8togc


Tool Number

3824900

Camshaft Gear Puller Kit

Used to remove camshaft gear from camshaft without removing the camshaft from engine.

©Cummins Inc

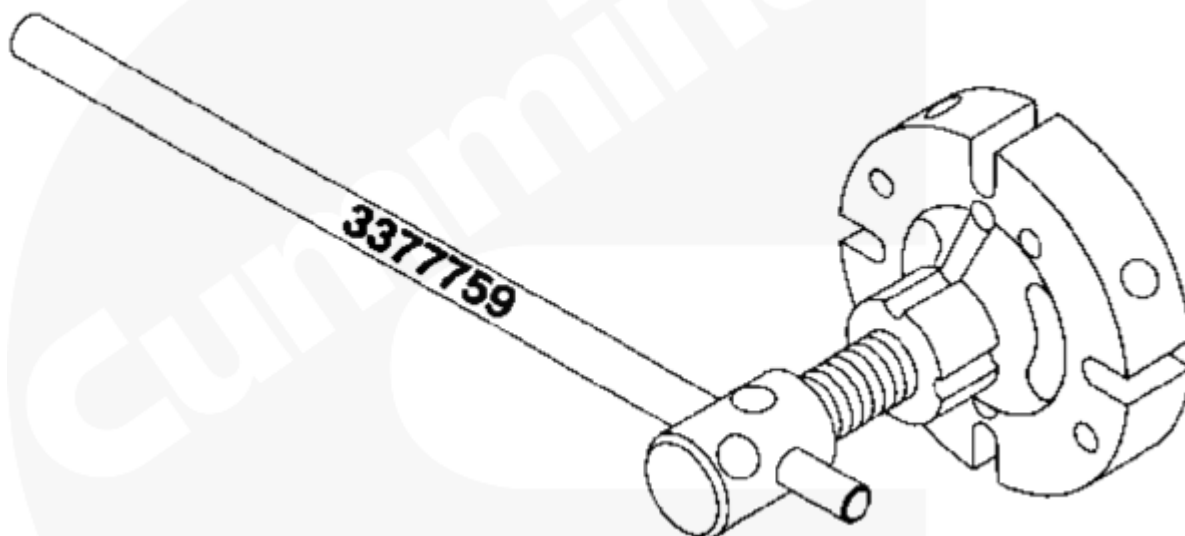
**Tool Number**

3823818

Main Bearing Roll-out Tool

Used to remove and install upper main bearing shell.

©Cummins Inc

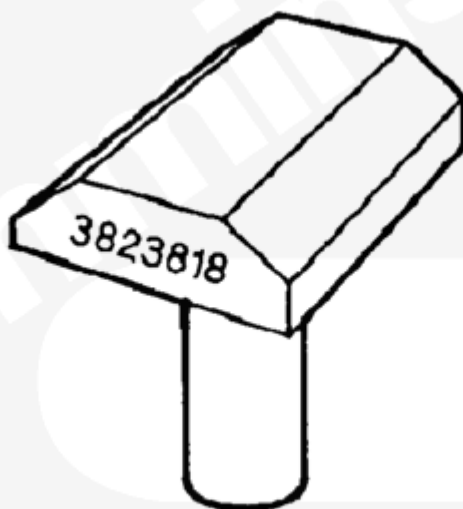

3823818


Tool Number

3824842

Compuchek™ Fitting

Used to measure fuel inlet restriction.

©Cummins Inc

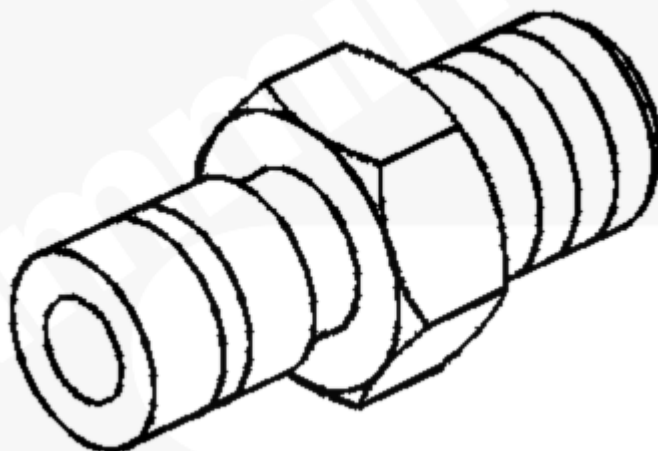

22d00083


Tool Number

3824843

Compuchek™ Fitting

Used for connection to diagnostics machine.

©Cummins Inc

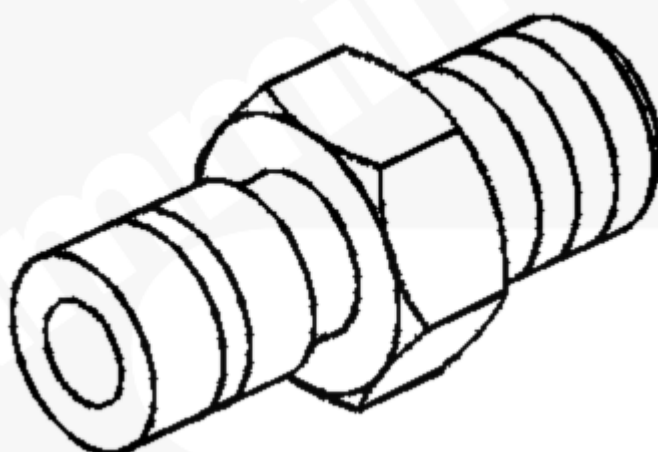

22d00083


Tool Number

3824844

Compuchek™ Fitting

Used to connect to the diagnostics machine with 1/8 NPT connection.

©Cummins Inc

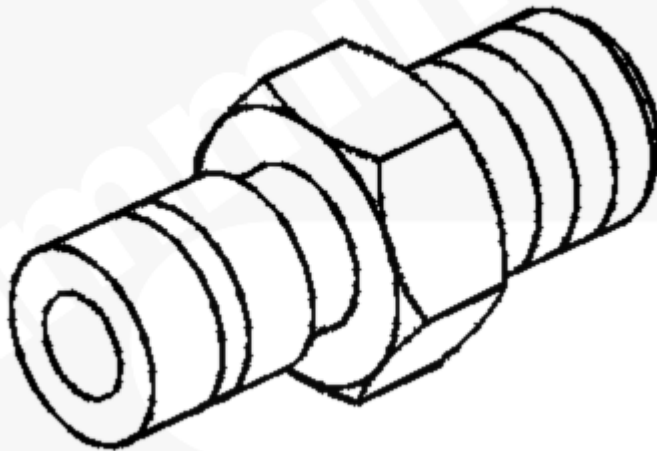

22d00083

Last Modified: 27-Jun-2012
