

Trainings ▾


Tool Number

ST-669

Torque Wrench Adapter

Secures the rocker lever adjusting screw while tightening the lock nut.

©Cummins Inc

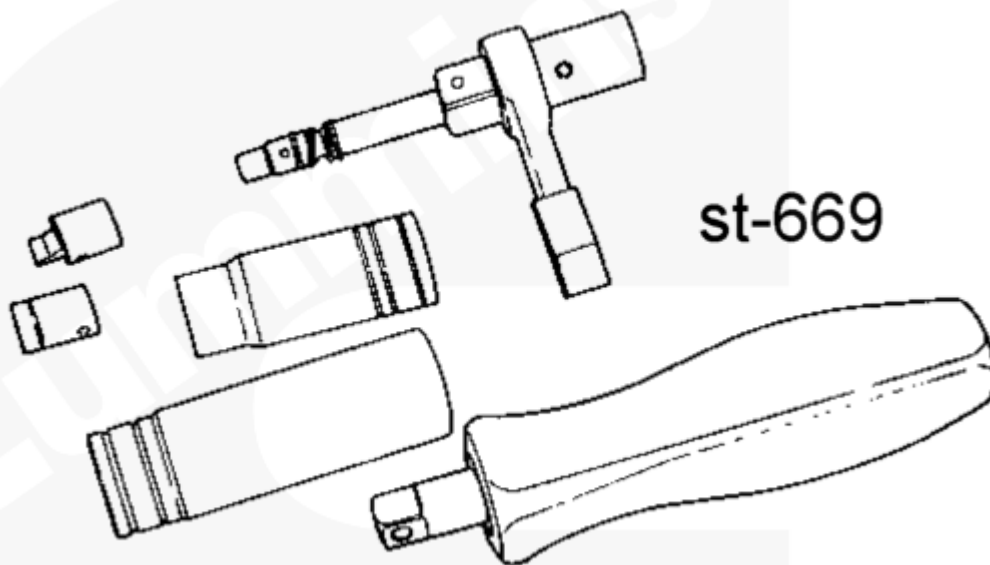


Tool Number

ST-1319

Water Tube Driver

Used to install or remove the water transfer tubes from the rocker housings.

©Cummins Inc

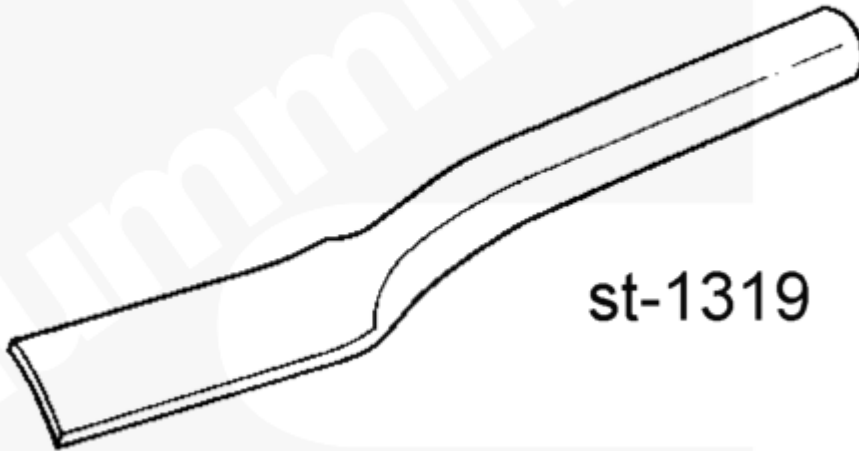
**st-1319**

Tool Number

3824783

Torque Wrench

A dial-type torque wrench used to accurately adjust injectors in inch-pounds. Use of a clicker-type torque wrench is not recommended. 0-35 N•m [0-300 in-lb]

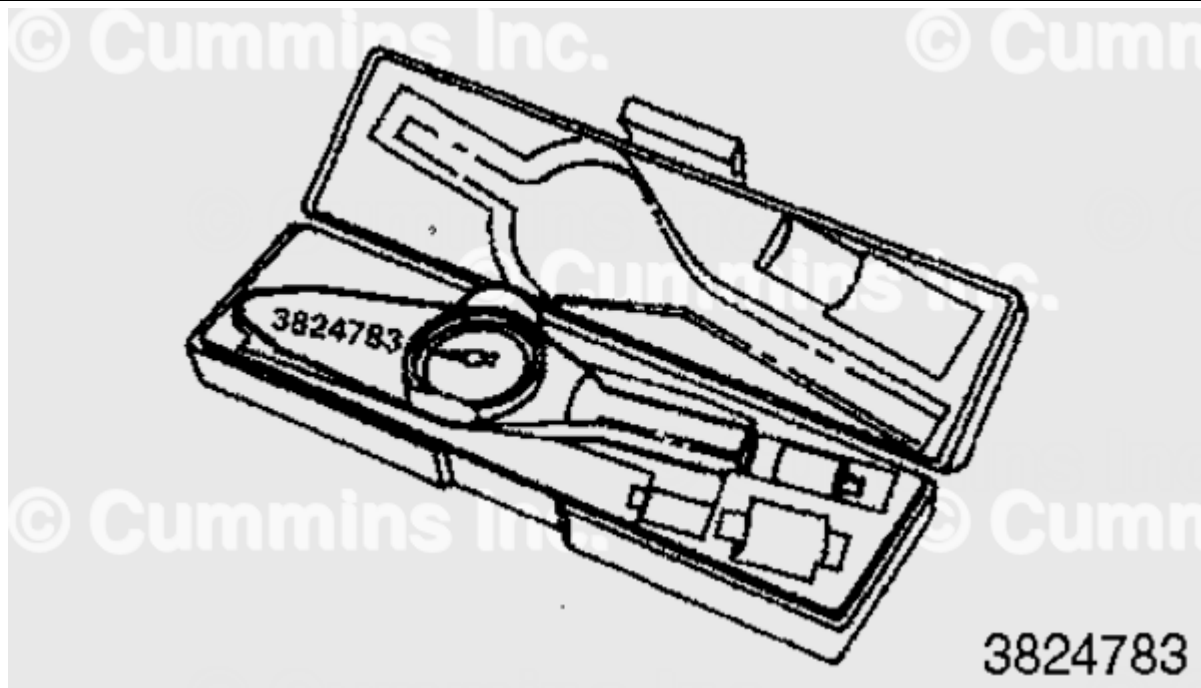


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

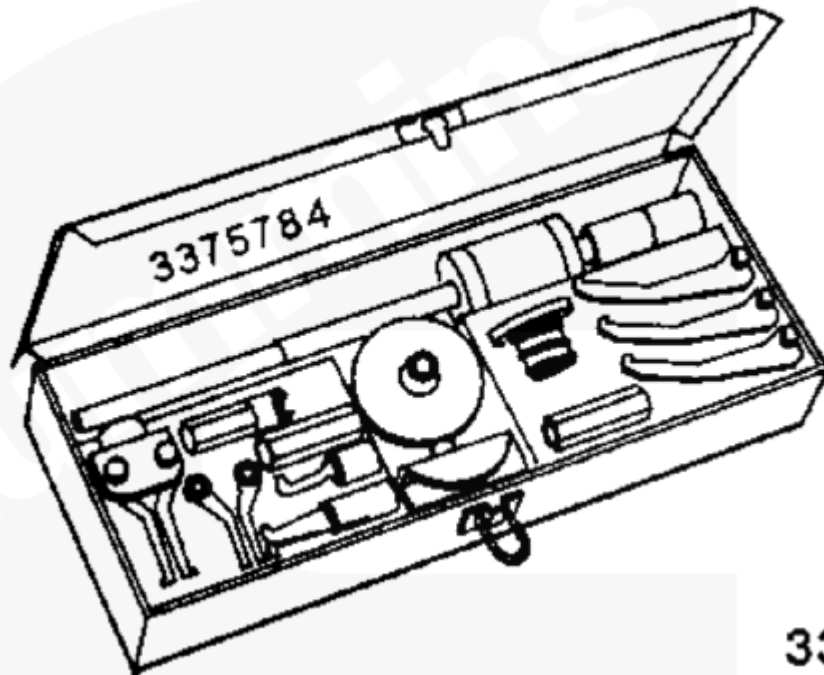


3375784

Tool Number

3376592

Torque Wrench

Inch-pound torque wrench used to tighten the valve lever adjusting screw. Does not require screwdriver attachment.

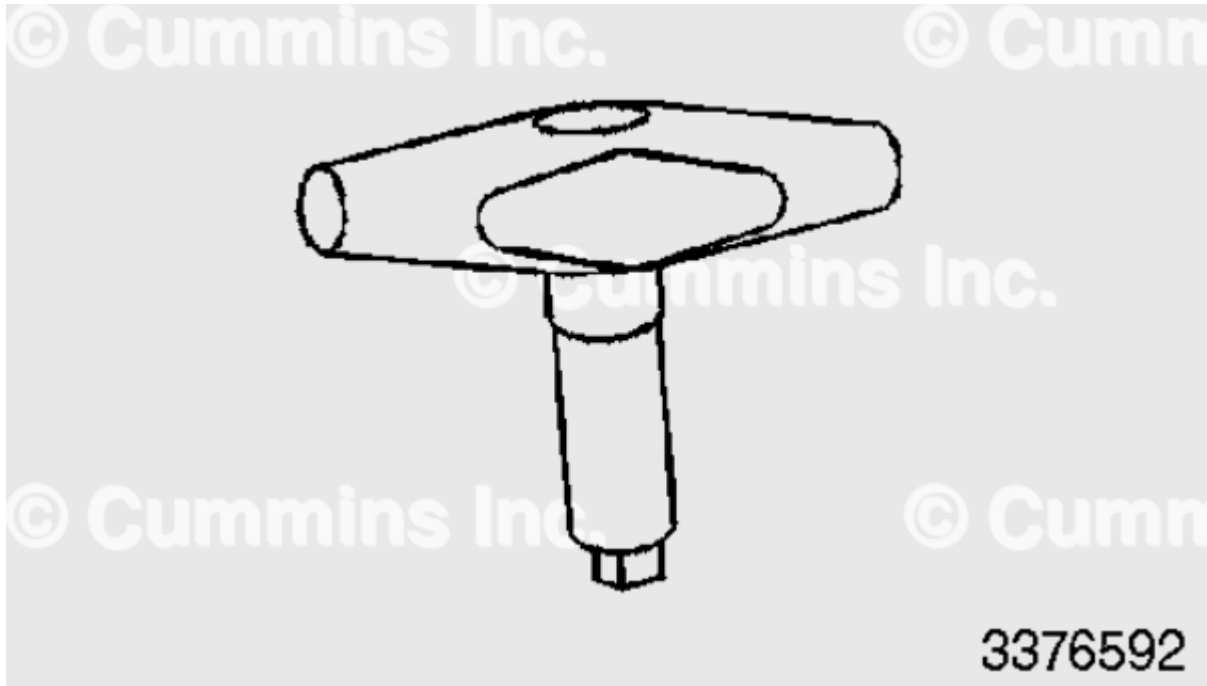


Tool Number

3824901

Valve Setting Gauge Kit

Kit contains two 25.4 mm [1 in] wide feeler gauges for centering under the swivel foot of the rocker lever when setting the valves. The kit contains an intake valve gauge at 0.36 mm [0.014 in] and an exhaust valve gauge at 0.081 mm [0.032 in].

©Cummins Inc

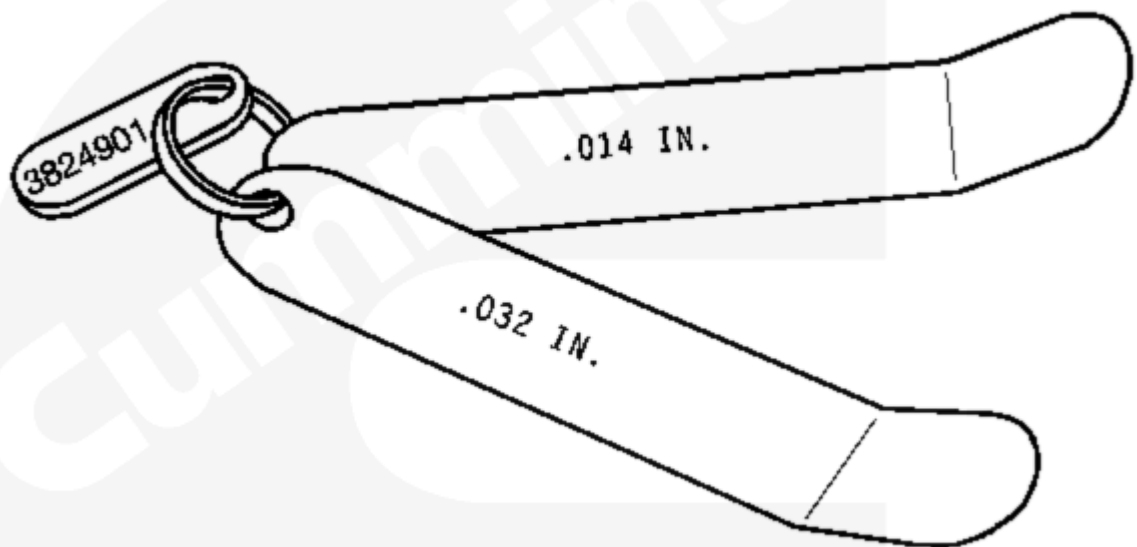

3824901


Tool Number

3162458

Rocker Lever Bushing Mandrel

Used to install and/or remove the rocker lever bushings

©Cummins Inc

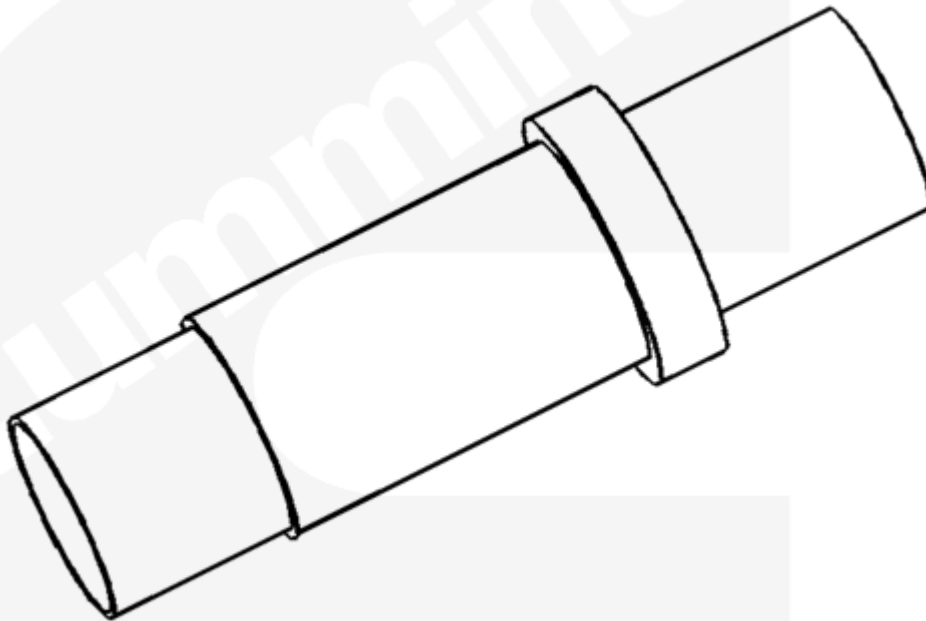

03400049