

Trainings ▾


Tool Number

ST-647

Gear Puller

Used to remove drive pulleys and impellers.

©Cummins Inc

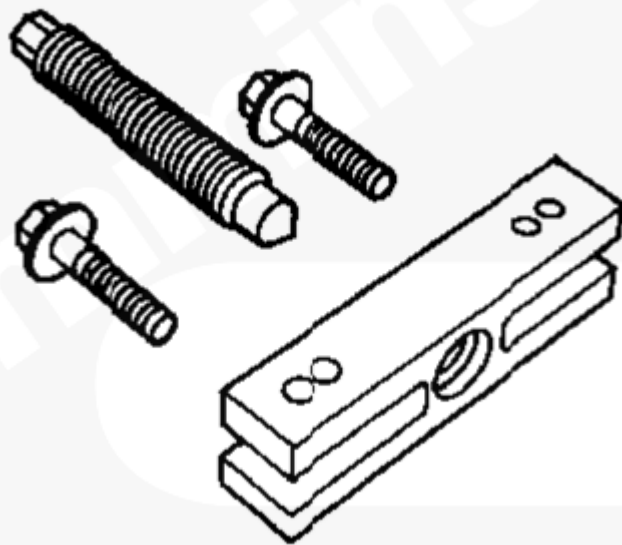

ad8toga

Tool Number

3376326

Pulley Installation Tool

Used to install drive pulleys.

©Cummins Inc



ad8togb


Tool Number

3376663

Coupling Puller

Used to remove accessory drive coupling.

©Cummins Inc

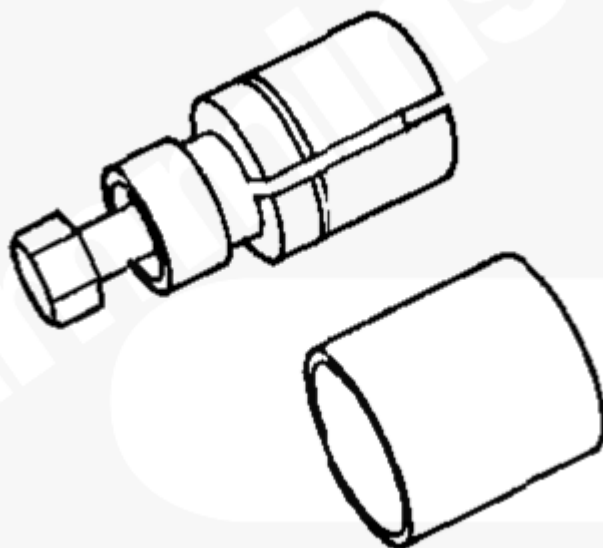

bp8togg


Tool Number

3824760

Oil Seal Remover/Installer

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

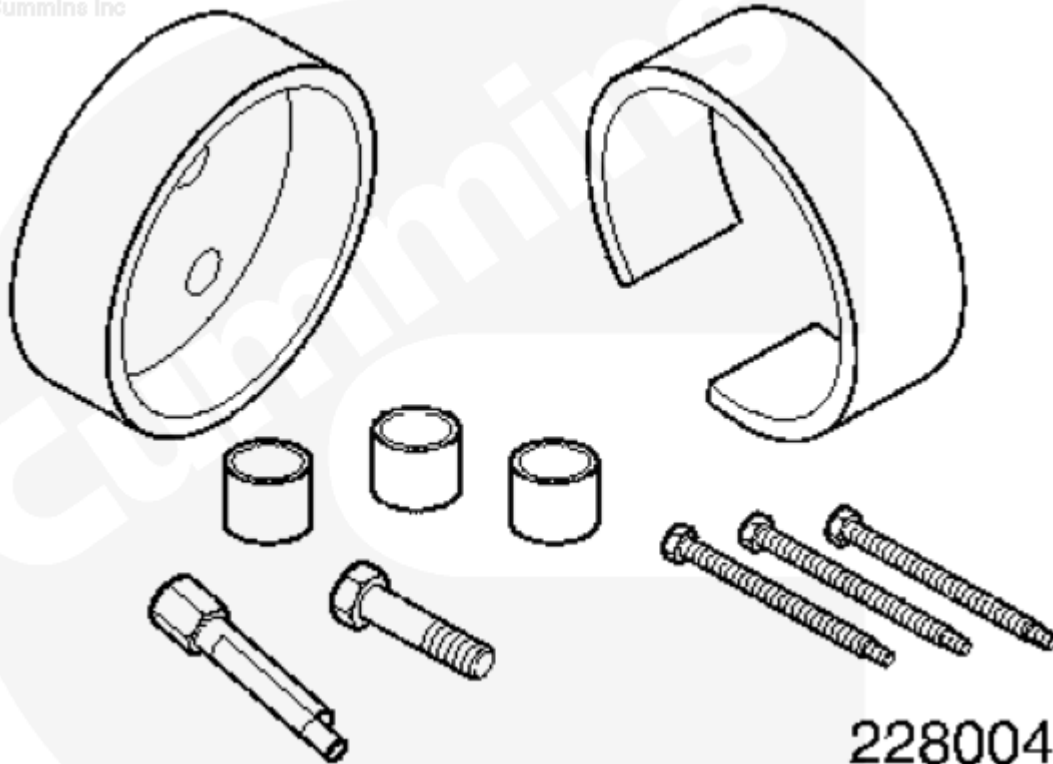

22800431

Tool Number

3375066

Pipe Sealant

Use when installing pipe plugs or cup plugs on the engine in order to prevent leaks.

©Cummins Inc



ew8toge

Tool Number


ST-1134

Dowel Pin Extractor

Used to pull dowel pins.

© Cummins Inc.

© Cummins Inc.



© Cummins Inc.

© Cummins Inc.

ck8toge

