

Trainings ▾


Tool Number

ST-302

Ball Joint Vise

Used to hold the air compressor for disassembly or assembly.

©Cummins Inc

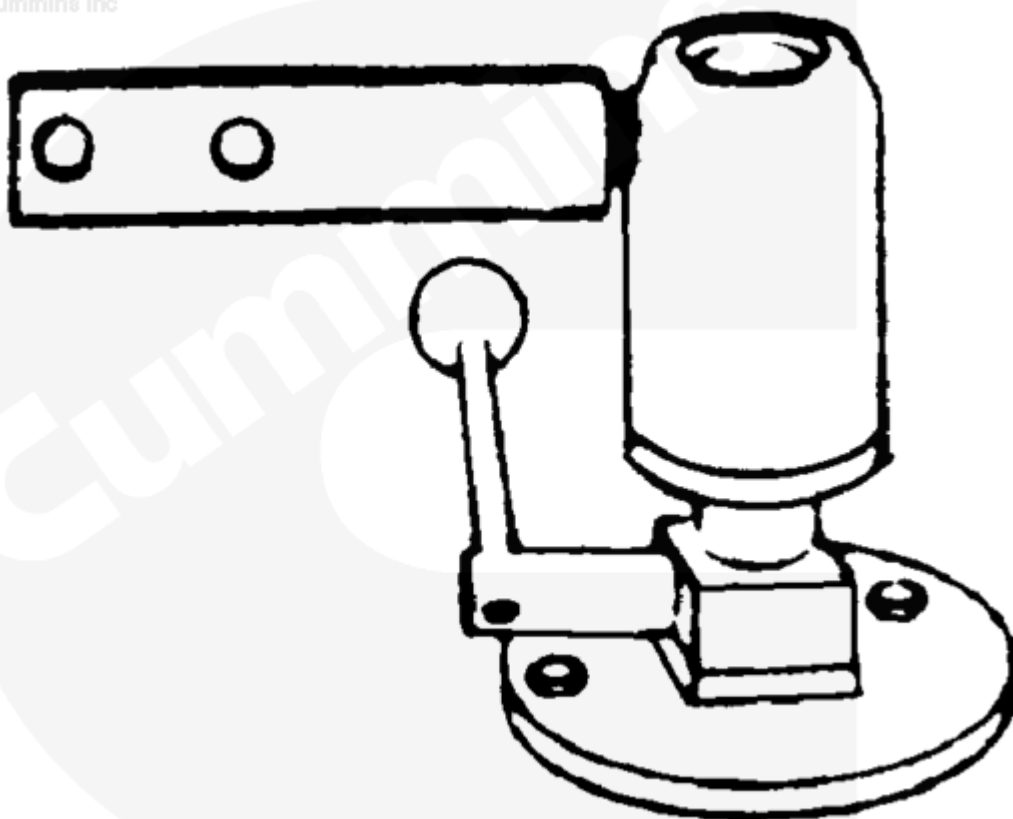


Tool Number

ST-647

Standard Puller

Used to pull the drive gear. Use with puller capscrews that have M8 x 1.25-6H thread.

©Cummins Inc

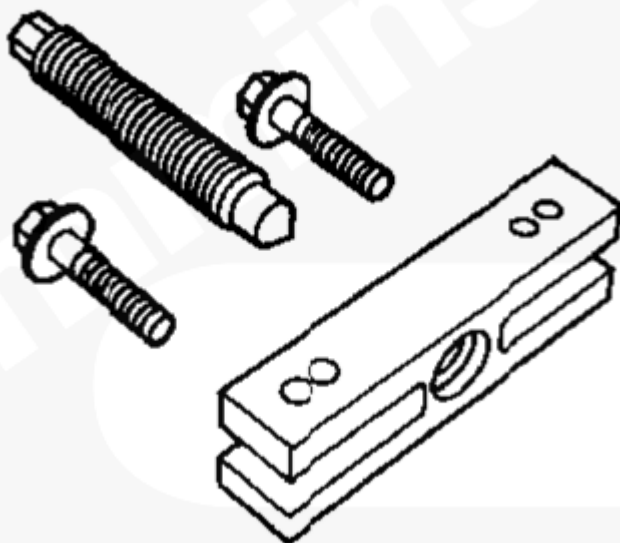

ad8toga


Tool Number

ST-749

Mounting Plate

Used to mount the air compressor to the vise.

©Cummins Inc

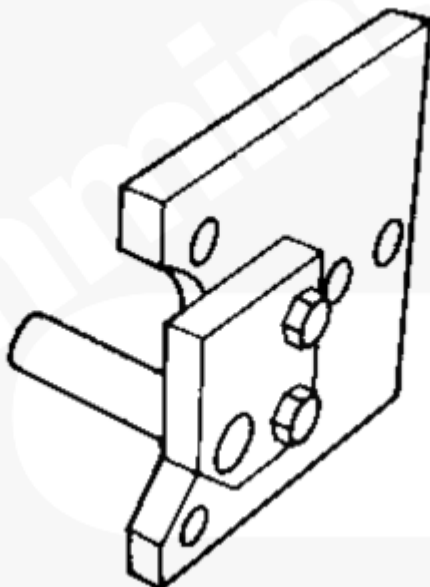

st-749

Tool Number

3375182

Valve Spring Tester

Used to check the exhaust valve, intake valve, and unloader valve cap springs.

©Cummins Inc



kn8togs


Tool Number

3376663

Coupling Puller

Used to remove the spline coupling hub.

©Cummins Inc

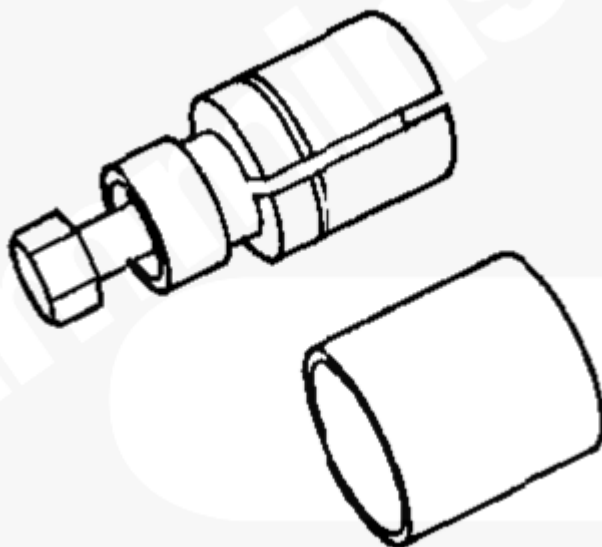

bp8togg

Tool Number

3823923

Spacer

Used with coupling puller, Part Number 3376663, to remove the hydraulic pump drive coupling.

©Cummins Inc



3823923


Tool Number

3377415

Air Compressor Seat Installation Tool

Used to install the exhaust valve seats.

©Cummins Inc

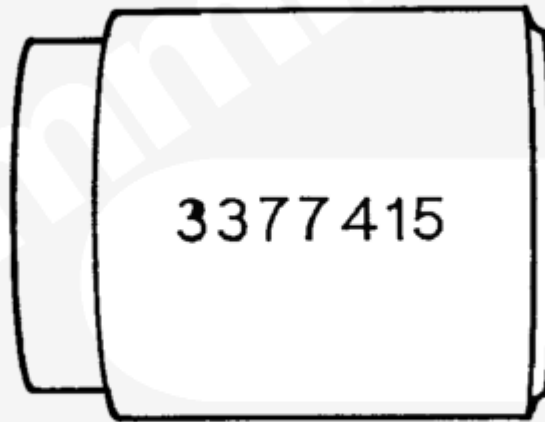

3377415


Tool Number

3377416

Air Compressor Seat Removal Tool

Used to remove the exhaust valve seats.

©Cummins Inc

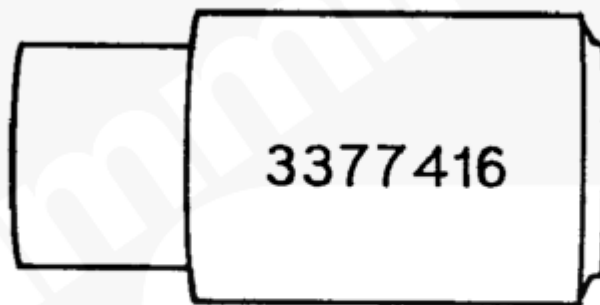

3377416


Tool Number

3823528

Air Compressor Seat Socket

Used to remove the exhaust valve seat and the inlet valve cage.

©Cummins Inc

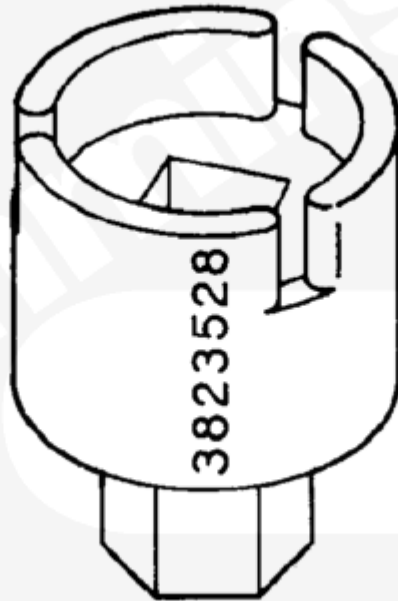**3823528**


Tool Number

ST-544

Valve Seat Puller

Used to remove the exhaust valve seat on older model air compressors. Tool can also be used to remove needle bearing from the fuel pump housing or other small bores.

©Cummins Inc

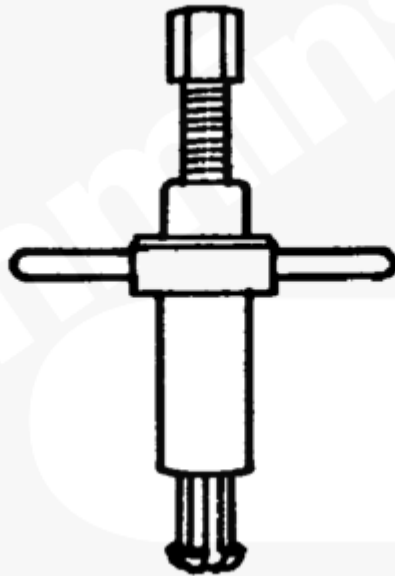

st-544


Tool Number

3822674

Compressor Exhaust Valve Seat Kit

Tools used to pull and install the press fit nine hole exhaust seat in single cylinder Cummins air compressors.

©Cummins Inc

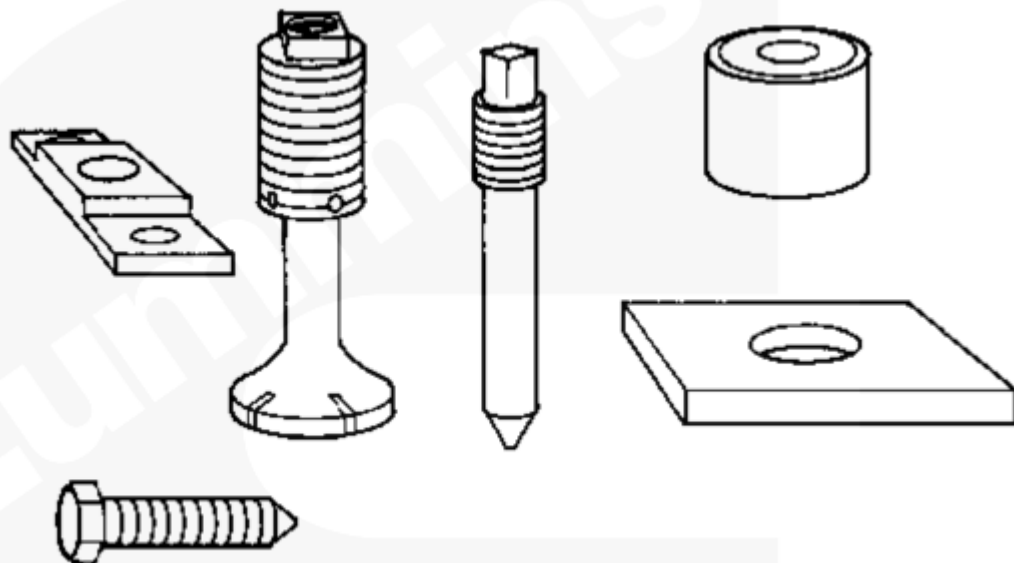

3822674


Tool Number

3822681

Compressor Exhaust Valve Seat Kit

Kit that converts Compressor Exhaust Valve Seat Kit, Part Number 3822674, into a two cylinder air compressor kit.

©Cummins Inc

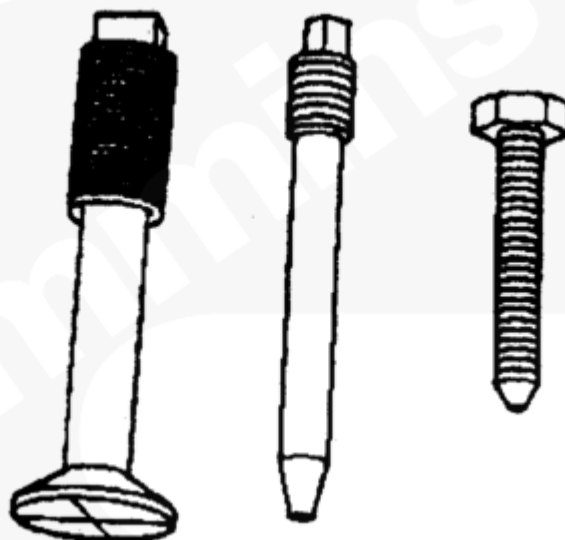

3822681

Last Modified: 30-Jun-2006
