

Trainings ▾

Mounting Adaptations


Tool Number

3163720

Dowel Pin Extractor

Remove dowel pins.

©Cummins Inc

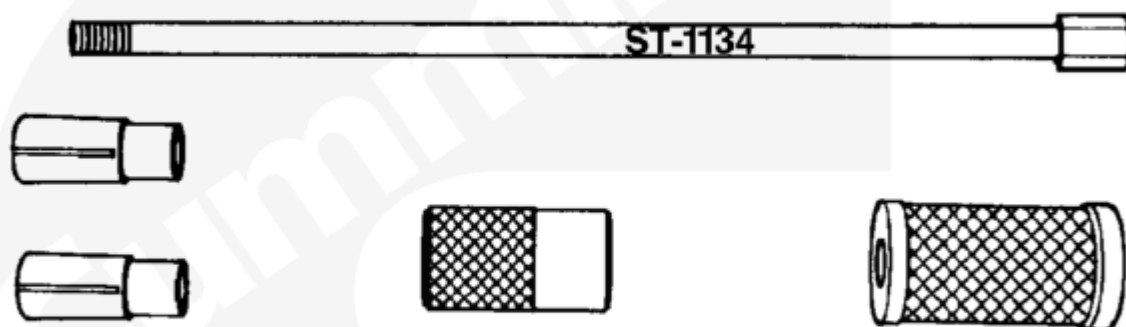

ST-1134



Tool Number

ST-1232

Drill Ream Fixture

Machine dowel hole to install oversize dowels in cylinder block and flywheel housing. Use with a drill, reamer, and the appropriate drill/ream bushing set.

©Cummins Inc

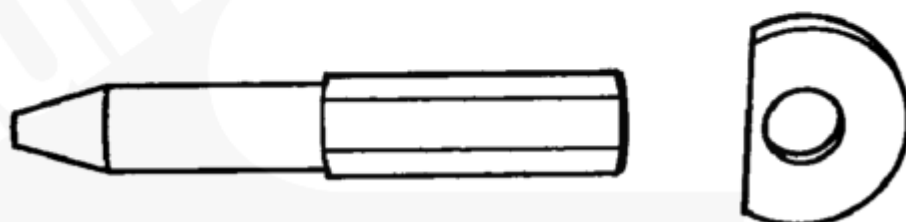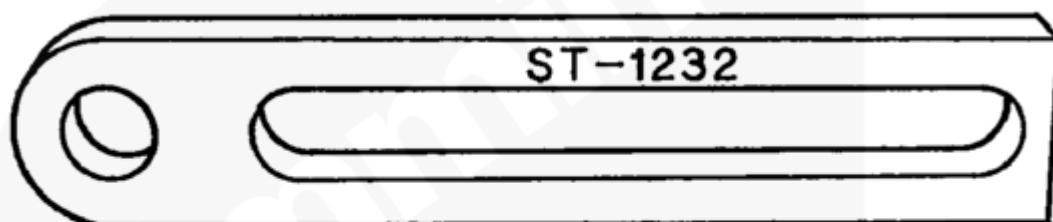

st-1232


Tool Number

3375272

Engine Support Bracket

Attaches to each side of the cylinder block and supports the front of the engine.

©Cummins Inc

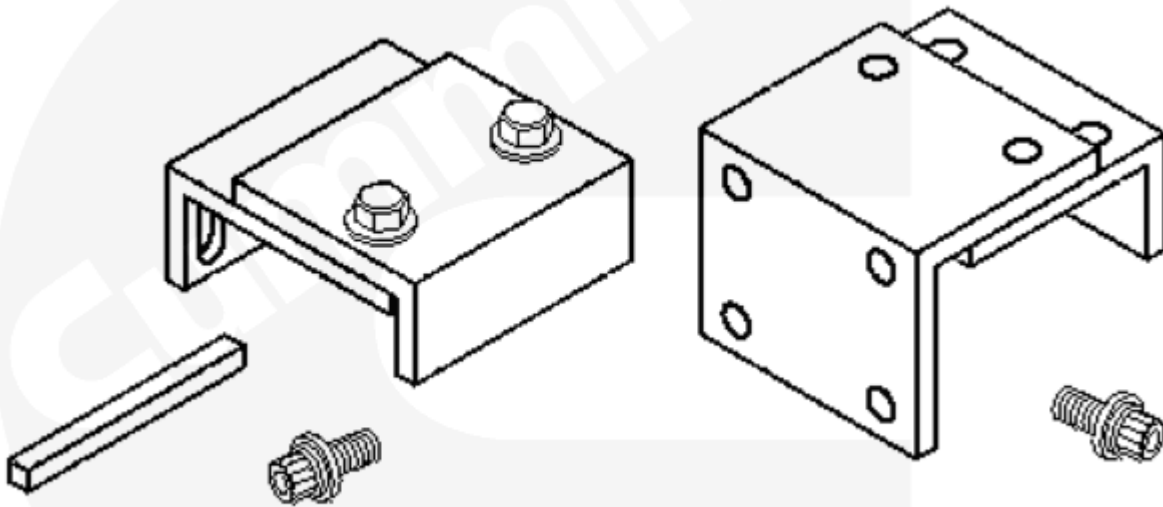

22800428


Tool Number

3162871

Engine Lifting Fixture

Used to remove and install the engine. Designed to lift 2721 kg [6000 lb].

©Cummins Inc

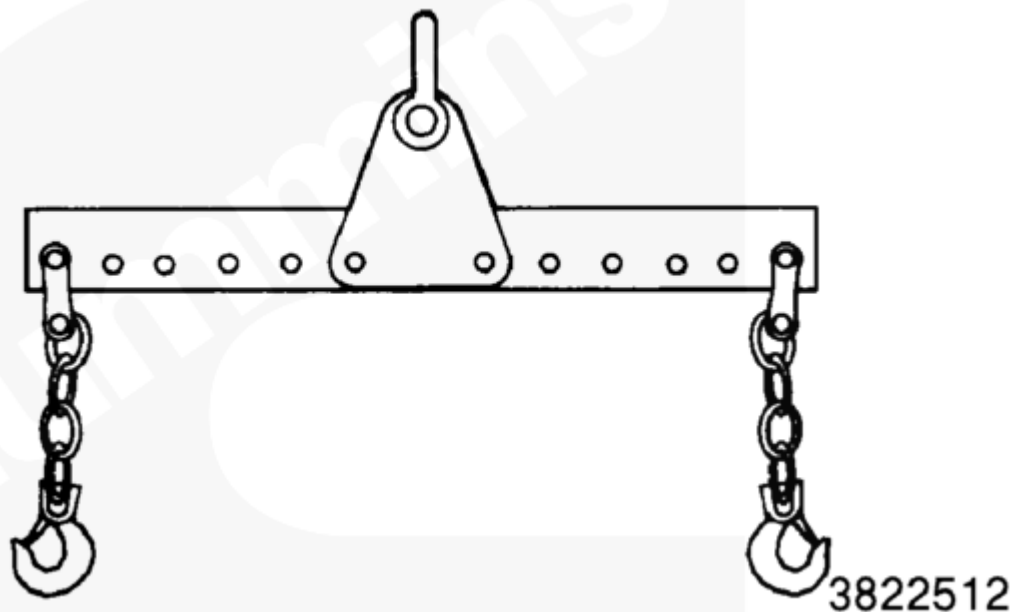
**Tool Number**

3822512

Engine Lifting Fixture

Used to remove and install the engine. Designed to lift 3175 kg [7000 lb].

©Cummins Inc

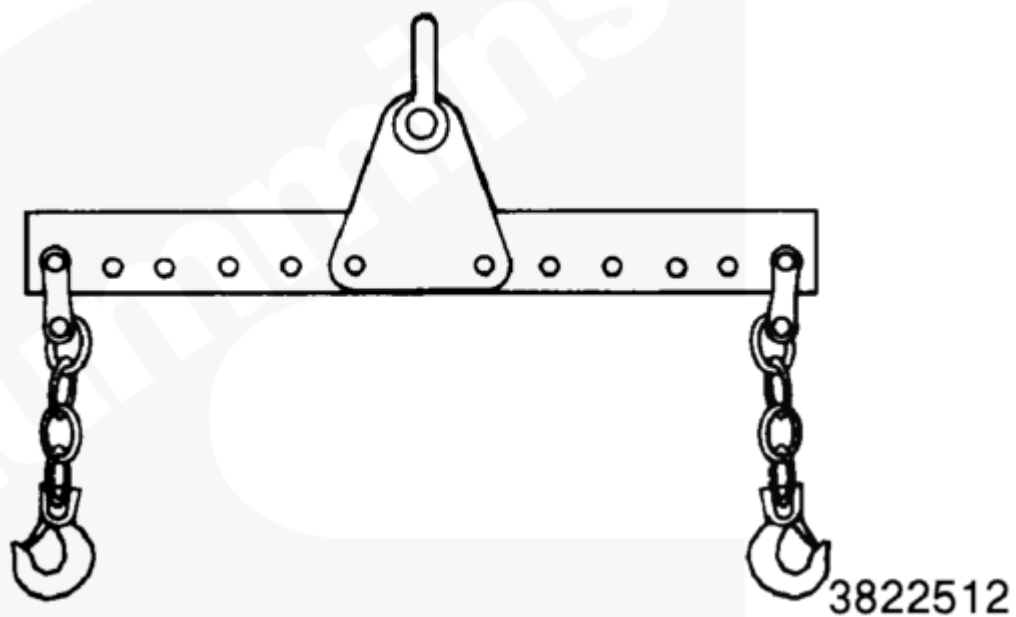

Tool Number

5395137

Engine Lifting Hooks

Used to lift engine. Used on the lifting lugs between cylinder heads, two are required. Used with Part Number 5395137. Designed to lift 1134 kg [2500 lb].

