

Trainings ▾

General Information

Customer Interface Box


All Marine configuration engines are shipped with a Customer Interface Box. This box varies based on the chosen panel system. The Basic Panel System includes a Customer Interface Box with an Engine Shut-Down switch and a separate Engine Room Panel display. The Premium Panel System includes a Customer Interface Box with a built-in DCU410 (Diesel Control Unit) and Engine Shut-Down switch. The Type-Approved Panel System includes a Customer Interface Box with both a DCU410 and an Remote Input-Output unit built into the Customer Interface Box, in addition to an Engine Shut-Down switch.

Cummins® Engine Nomenclature

The model name provides identification data for the engine.
See the illustration for model name identification.

The application codes are:


- A** = Agricultural
- C** = Construction
- D** = Generator Drive
- F** = Fire Pump
- G** = Generator Set
- L** = Locomotive
- M** = Marine
- P** = Power Unit
- R** = Railcar
- T** = Tactical Military.

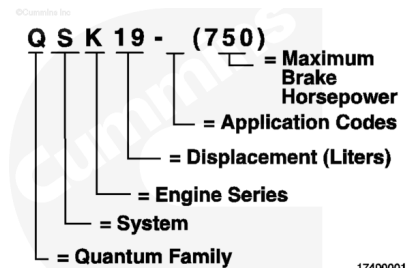

Engine Dataplate

The engine dataplate shows specific information about the engine. The engine serial number (ESN) (1), Control Parts List (CPL) (2), model (3), and horsepower and rpm ratings (4) provide information for ordering parts and service needs.

Note : The engine dataplate **must not be changed** unless approved by Cummins Inc.

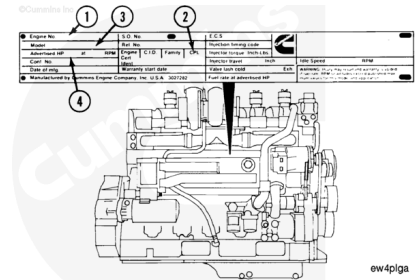


Fuel Pump Dataplate

with Electronically Actuated Injector


The Cummins® Modular Common Rail System (MCRS) dataplate is located on the side of the high pressure fuel pump. The dataplate contains the following information:

1. Serial number
2. Date code
3. Cummins® part number.

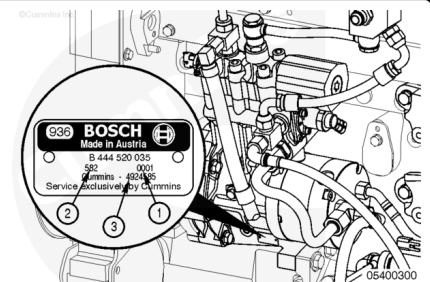

with Mechanically Actuated Injector

The old style fuel pump dataplate is located on the top of the fuel pump. It provides information for fuel pump calibration.

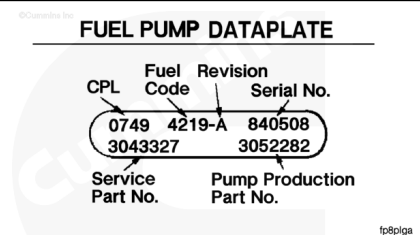

Engine Control Module Dataplate


with Electronically Actuated Injector

The external engine control module (ECM) dataplate is located on the front of the ECM.

The following information is found on the ECM dataplate:

- ECM part number (P/N)
- ECM serial number (S/N)
- ECM data code (D/C)
- Engine Serial Number (ESN)
- ECM code (identifies software in the ECM).

©Cummins Inc.

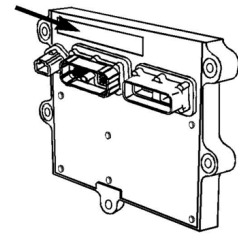

19c01295


with Mechanically Actuated Injector

The external ECM dataplate is located on top of the ECM.

The dataplate contains the following:

- ECM part number (P/N)
- ECM serial number (S/N)
- Manufacturer date code (D/C)
- Supplier identifier (S/I)
- Input voltage rating of the ECM (V/R).

©Cummins Inc.

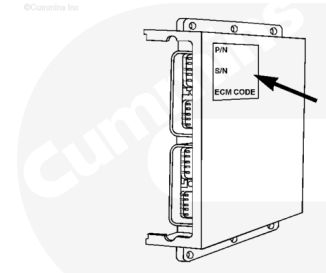

19400316

The dataplate on the right contains engine and calibration information. This includes the engine serial number (ESN), ECM calibration date (Date), and ECM calibration code.