



Flow Diagram

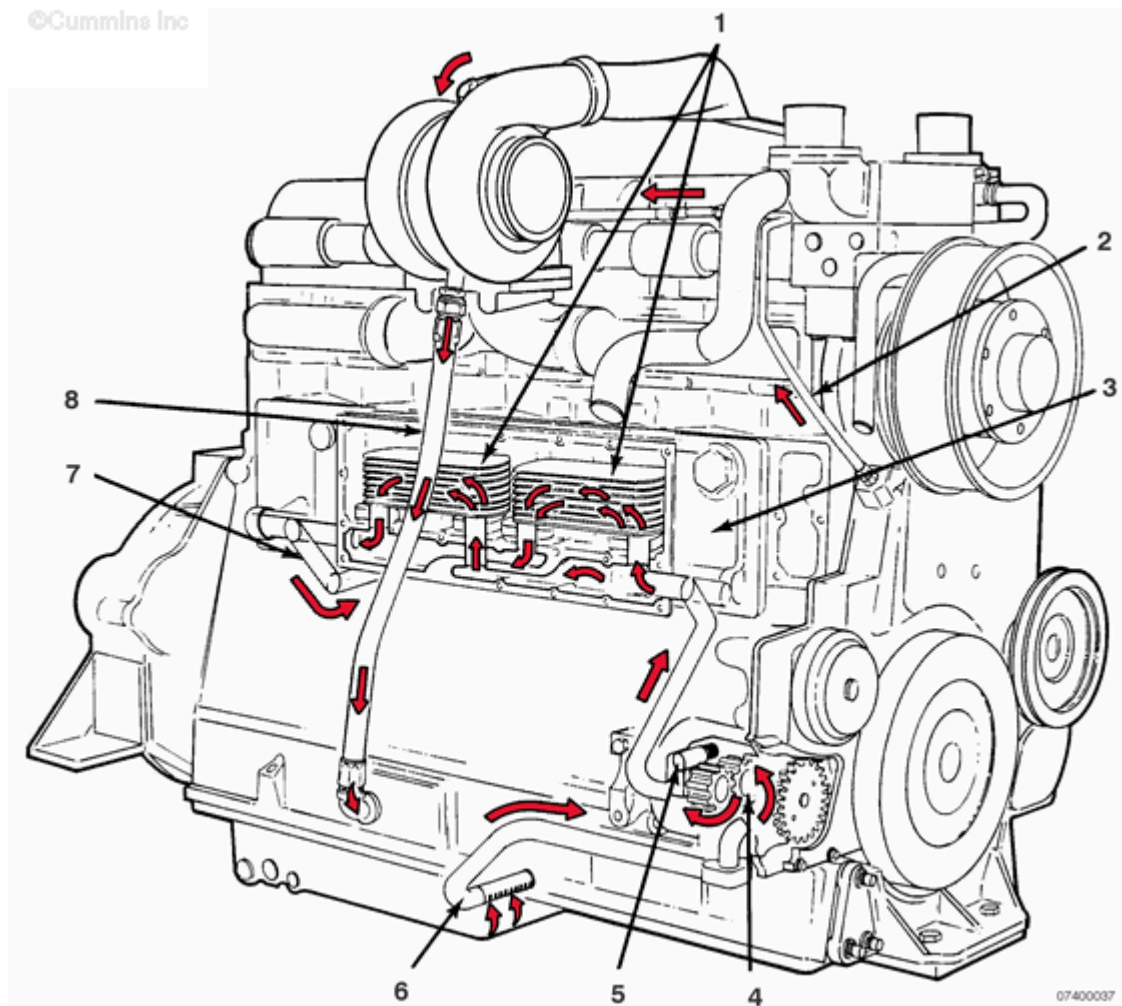

QSK19 Engine


1. Oil cooler elements
2. Turbocharger oil supply
3. Oil cooler housing
4. Lubricating oil pump
5. Lubricating oil pump regulator
6. Oil suction tube
7. Oil to filter head
8. Turbocharger oil drain.

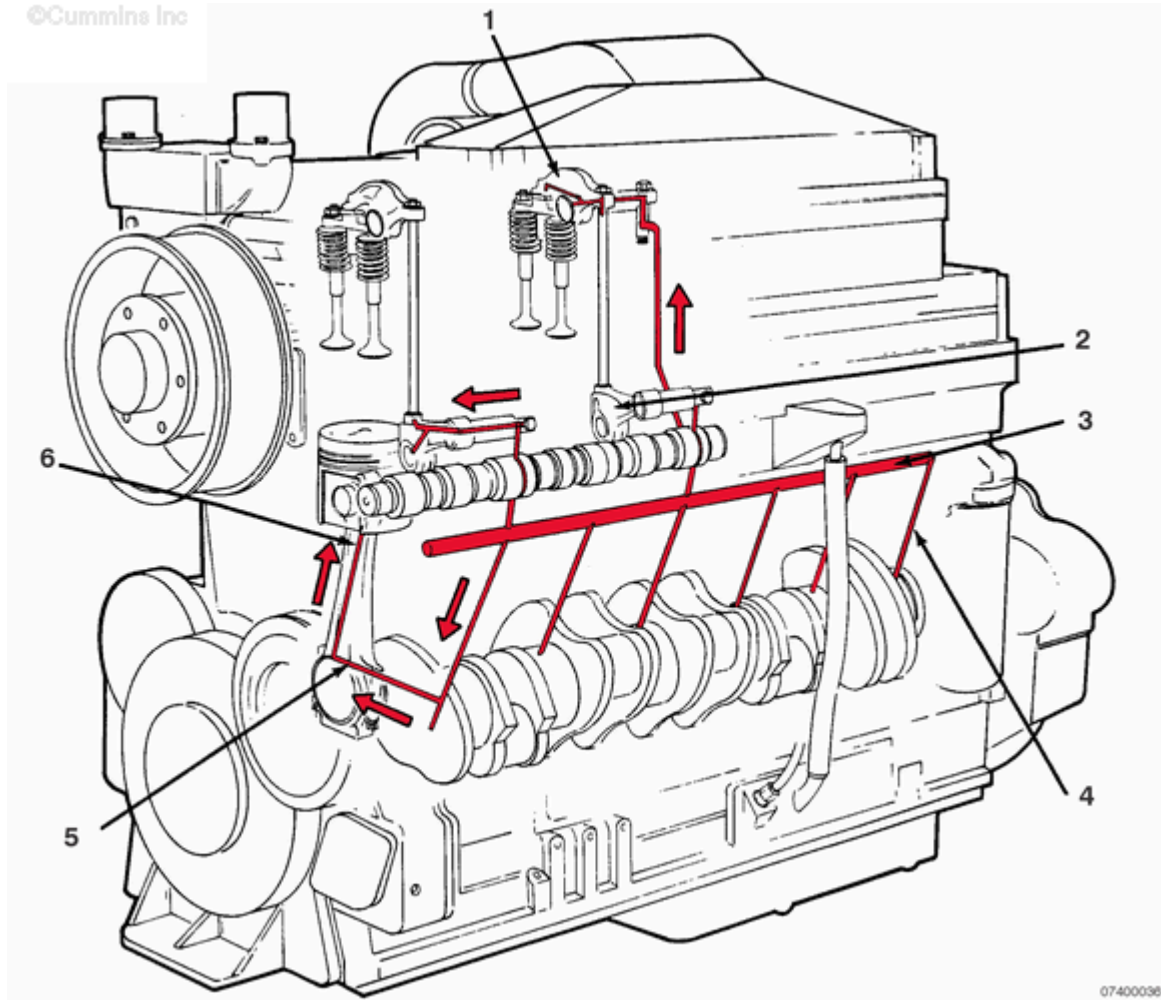

07400036


QSK19 Engine

1. Rocker lever
2. Cam follower
3. Main oil rifle
4. Oil supply to main bearings
5. Oil supply to connecting rod bearings
6. Oil supply to piston pin bushing.

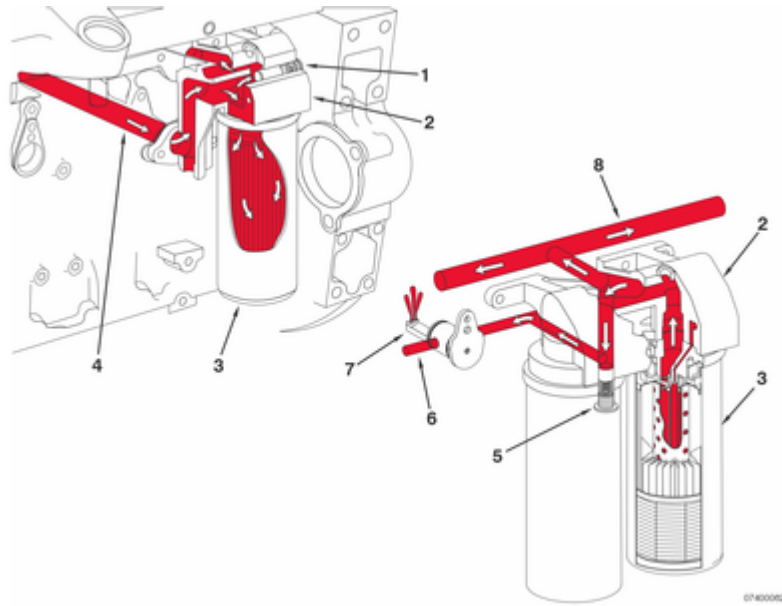

QSK19 Engine, Filter Head


1. Filter bypass valve
2. Filter head
3. Combination full-flow and bypass filter
4. Oil to filter head
5. Piston cooling nozzle control valve
6. Piston cooling nozzle oil rifle
7. Piston cooling nozzle
8. Main oil rifle.

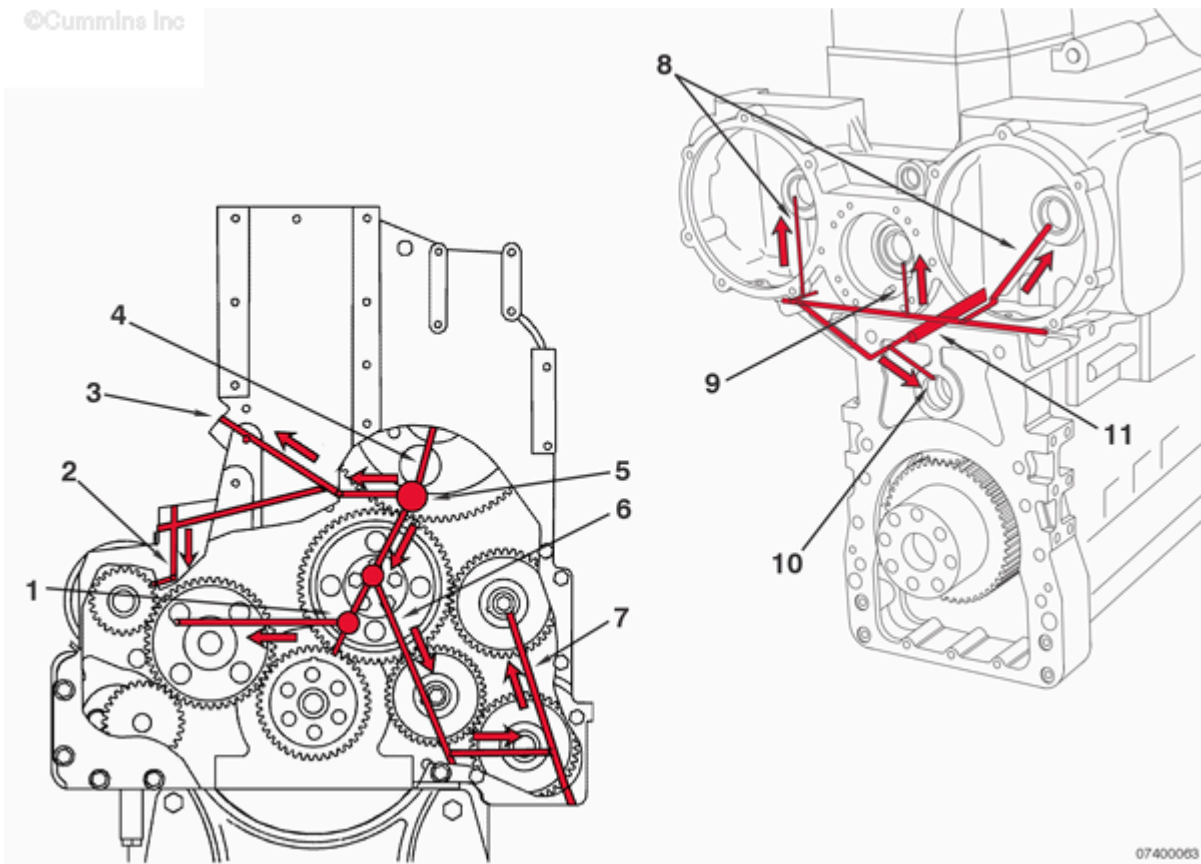

Front and Rear View QSK19 Engine

1. Oil supply to main bearing and idler
2. Oil supply to water pump and drive
3. Oil supply to turbocharger
4. Oil supply to camshaft bushing
5. Main oil rifle
6. Oil supply to idler gear and hydraulic pump drive
7. Oil supply to air compressor, fuel pump drive, and fuel pump
8. Oil supply to hydraulic pump driveshaft bushings⁽¹⁾
9. Oil supply to center hydraulic pump driveshaft bushing⁽¹⁾
10. Oil supply to lower idler shaft⁽¹⁾
11. Main oil rifle.


Note : (1) Used with optional rear gear drive only.

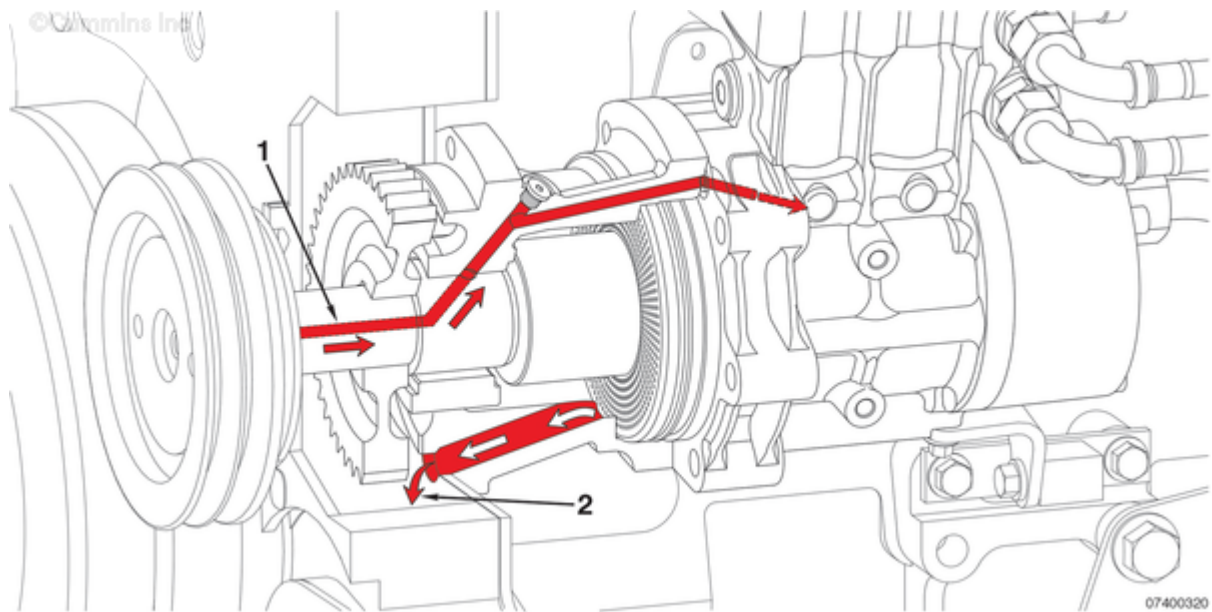

QSK19 Engine, Accessory Drive

1. Oil supply to accessory drive bushing and fuel pump
2. Oil return.

Note : Return cavity is located in the accessory drive.

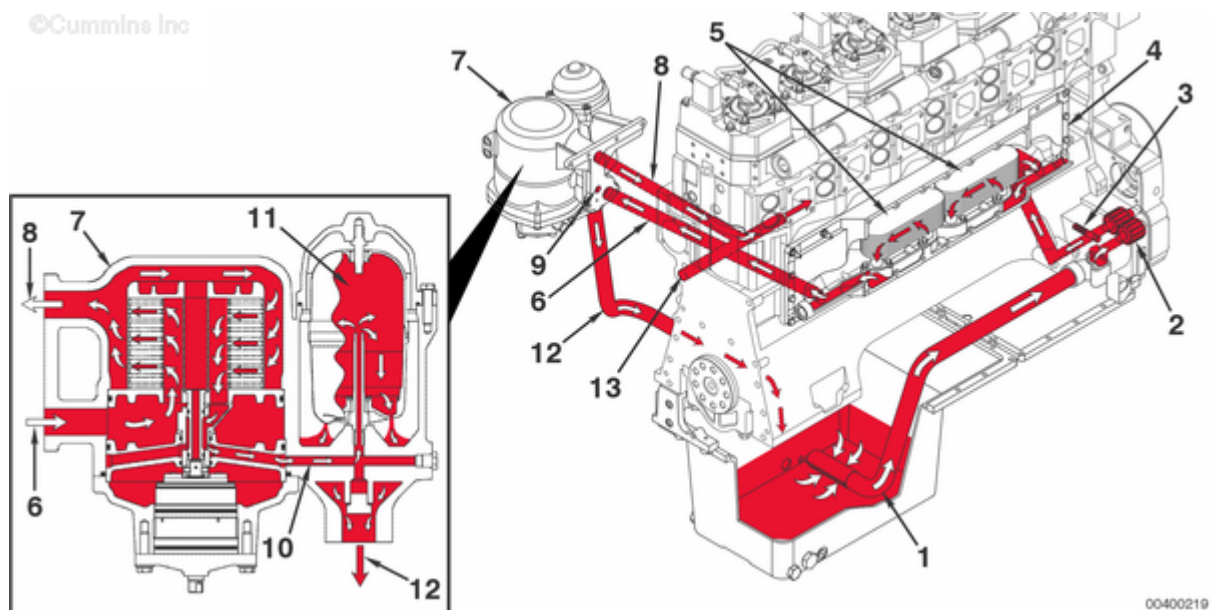


Eliminator Oil Flow QSK19 Engine

1. Oil suction tube
2. Lubricating oil pump
3. Lubricating oil pump pressure regulator
4. Oil cooler housing
5. Oil cooler elements
6. Oil flow to eliminator oil filter
7. Eliminator oil filter
8. Filtered oil flow to main oil rifle
9. Filtered oil flow to pistons

10. Back-flushed lubricating oil
11. Eliminator oil centrifuge
12. Lubricating oil return to sump
13. Main oil rifle.

©Cummins Inc

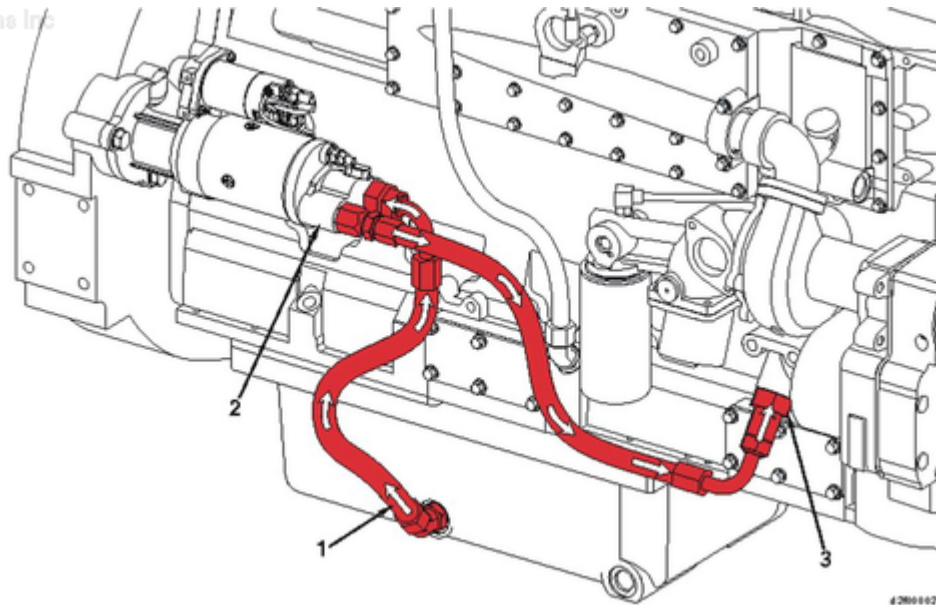

Prelube Flow QSK19 Engine

1. Lubricating oil suction line from pan
2. Prelube pump
3. Lubricating oil pump outlet.