

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Accessory Drive Seal Installer Kit, Part Number 5573466

Additional Service Items

- Mallet

Preparatory Steps

WARNING


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Remove the pulley from the accessory drive shaft. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/28/28-009-004-tr.html>)
- Disconnect the batteries. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Disconnect the air/gas supply to the starter if equipped. Refer to Procedure 012-022 in Section 12. (</qs3/pubsys2/xml/en/procedures/28/28-012-022-tr-gc.html>)
- Remove the pulley from the accessory drive shaft. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/28/28-009-004-tr-gc.html>)


Remove

Use a brass drift to remove the woodruff key (3) from the shaft.

Remove the keyway seal.

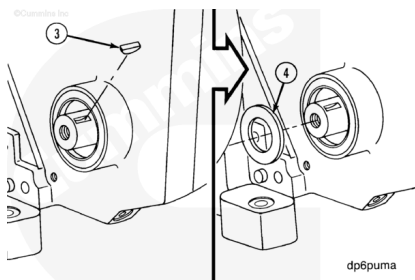

Remove the old accessory drive shaft seal from the front gear housing cover.

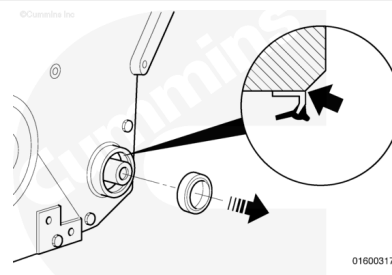


Install


Note : If the engine does not have a pulley on the accessory drive shaft, only a cover will be installed. Refer to Procedure 009-039 in Section 9. (</qs3/pubsys2/xml/en/procedures/28/28-009-039-tr.html>)

Use seal installer, Part Number 5573467. Install the accessory drive seal.

Push the seal into the cover until the service tool flange stops against the gear cover.

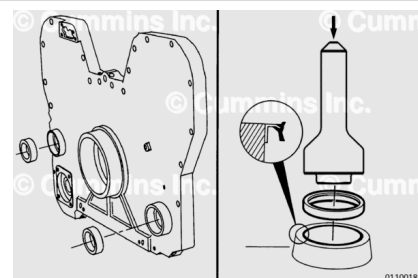

Install the keyway seal (4) and the accessory drive shaft woodruff key (5).

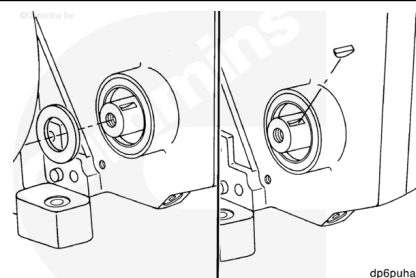

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install pulley onto the accessory drive shaft. Refer to Procedure 009-004 in Section 9 (</qs3/pubsys2/xml/en/procedures/28/28-009-004-tr.html>).
- Operate the engine and check for leaks.
- Install the pulley from the accessory drive shaft. Refer to Procedure 009-004 in Section 9 (</qs3/pubsys2/xml/en/procedures/28/28-009-004-tr-gc.html>).
- Connect the air/gas supply to the starter if equipped. Refer to Procedure 012-022 in Section 12 (</qs3/pubsys2/xml/en/procedures/28/28-012-022-tr-gc.html>).
- Connect the batteries. Refer to Procedure 013-009 in Section 13 (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>).
- Operate the engine and check for leaks.