

Trainings ▾


Disassemble

Remove the gear **only** when the crankshaft or the gear is damaged.

Use a puller jaw, Part Number 3375835, and a bridge assembly, Part Number 3375834.

The Crankshaft Gear Puller Kit, Part Number 3375840, contains the gear puller jaw and the bridge assemblies required for all Cummins® engine models.

Install the puller jaw and the bridge assembly.

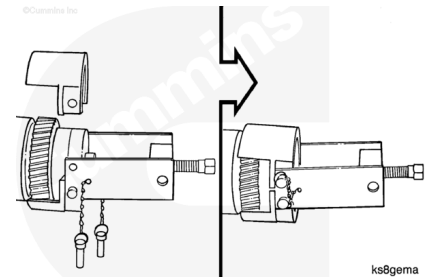


⚠ CAUTION ⚠

Do not exceed 475 N·m [350 ft-lb] of torque when turning the puller screw on the puller jaw or the jaw will break.

⚠ CAUTION ⚠

Do not use a cutting torch. High temperature will damage the gear.

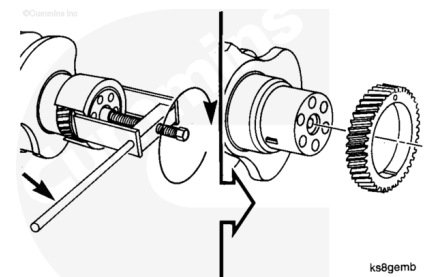


Use engine oil. Lubricate the puller screw.

Heat can be applied to help remove the gear.

Hold the pry bar steady. Turn the puller screw. Remove the gear.


Remove the key.

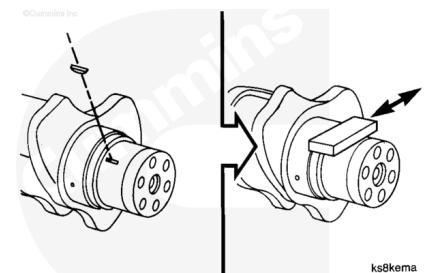

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

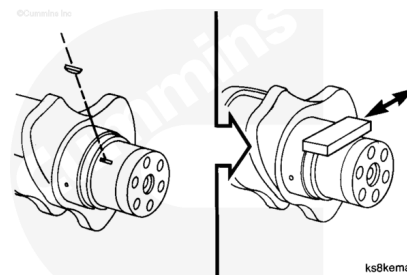

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use a hone stone. Polish the outside diameter. Remove any small scratches, burrs, or small grooves.

Clean with solvent. Dry with compressed air.


Measure the outside diameter.

Crankshaft Outside Diameter (Gear Location)		
mm		in
111.25	MIN	4.380
111.28	MAX	4.381

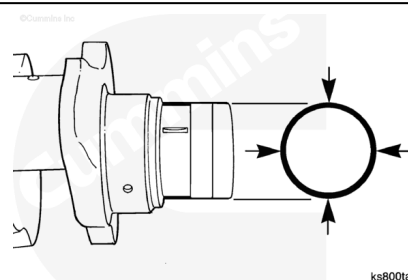


Measure the inside diameter

Front Crankshaft Gear Inside Diameter		
mm		in
111.165	MIN	4.3766
111.195	MAX	4.3778

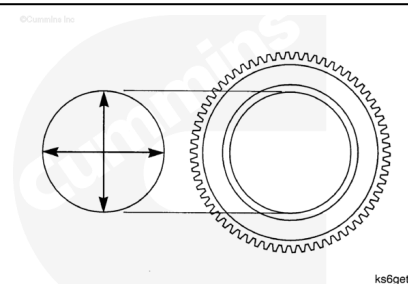

Assemble

Install a new key.

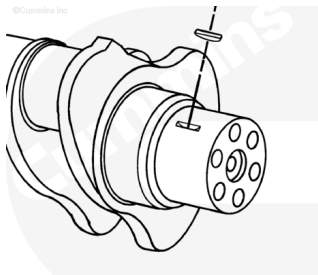

ks8keha

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated crankshaft gear.


⚠ CAUTION ⚠

When heating the crankshaft gear, do not exceed the specified time or temperature. Damage to the crankshaft gear and to the crankshaft gear teeth will result.

⚠ CAUTION ⚠

Do not attempt to install the crankshaft gear without heat. Damage to the crankshaft gear and to the crankshaft gear teeth will result.

Use an oven. Adjust the temperature to 232° C [450° F]. Heat the gear in the oven for a minimum of 1 hour to a maximum of 6 hours. The inside diameter of the gear will become larger and will simplify the installation of the gear on the crankshaft.

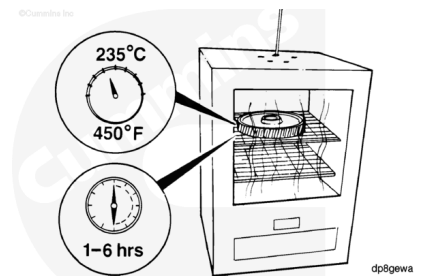


⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated crankshaft gear.

⚠ CAUTION ⚠

Allow the air to cool the gear. Do not use water or oil to reduce the cooling time. It can cause the gear to crack.

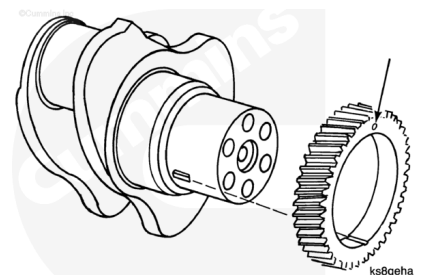

Use Lubriplate® Number105, or equivalent. Lubricate the outside diameter of the crankshaft at the gear location.

Remove the gear from the oven.

The timing marks on the crankshaft gear **must** be visible from the front of the crankshaft after the gear is installed.

The keyway **must** be aligned with the key in the gear. Install the gear.

Last Modified: 15-Feb-2019
