

Trainings ▾

Preparatory Steps

- Remove the crankcase breather. Refer to Procedure 003-001 in Section A.
(</qs3/pubsys2/xml/en/procedures/28/28-003-001-om.html>)



Remove


Loosen the eight cover mounting captive capscrews.

Remove the element cover.

Note : Discard the crankcase breather element in accordance with local environmental regulations.

Remove and discard the crankcase breather element.

Wipe out any excess dirt or oil from the inside of the cover.

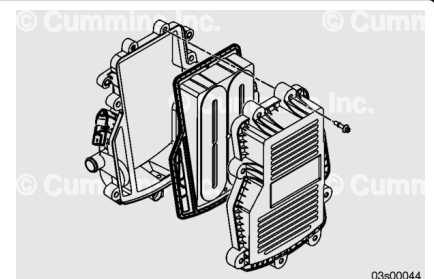


Install

Install the new crankcase breather element in the breather housing.

Make sure the element is properly seated in the housing so its seal will **not** be cut, crimped, or otherwise compromised when installing the housing cover.

Install the cover.

Tighten the eight captive mounting capscrews.

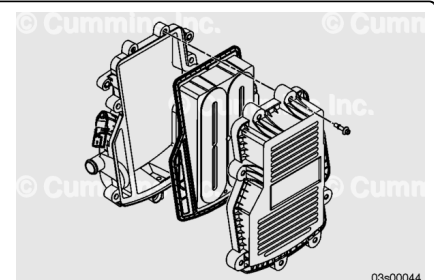


Torque Value: 5.2 n•m [46 in-lb]

Finishing Steps

- Install the crankcase breather. Refer to Procedure 003-001 in Section A. (</qs3/pubsys2/xml/en/procedures/28/28-003-001-om.html>)

©Cummins Inc.

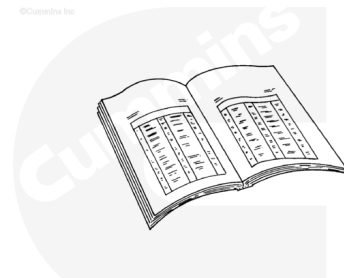

ck800wa

Last Modified: 07-Jan-2011
