


Trainings ▾

Initial Check


with Electronically Actuated Injector

Note : Shown is the stage 2 filter head for the QSK38 engine. Although different in appearance the procedure remains the same for the QSK series engines.

Remove the pressure sensor and replace it with a Compuchek® fitting, M14 x 1.5 thread, Part Number 3638767.

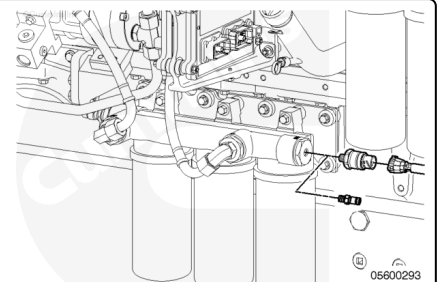


Connect the pressure adapter, Part Number 3164491, or equivalent, and the digital multimeter, Part Number 3164488, 3164489, or equivalent, to the Compuchek® fitting.

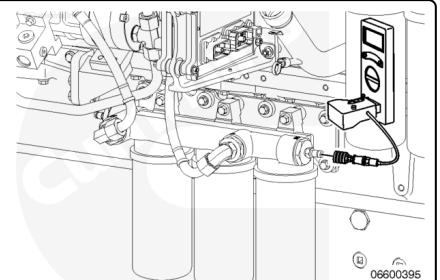

The fuel lift pump will operate for 120 seconds when the key is switched to the ON position. The fuel lift pump will also operate while the engine is cranking until the fuel rail pressure reaches 200 bar [2900 psi].

At the end of 120 seconds of operation the fuel lift pump **must** produce pressure. If the lift pump does **not**, then the lift pump **must** be replaced.

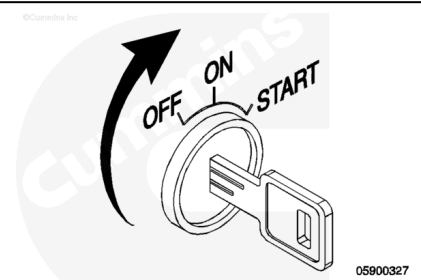

Minimum Fuel Lift Pressure


kpa		psi
300	MIN	43.5

Remove

with Electronically Actuated Injector


Note : Shown in this procedure are the marine application stage 1 filters. Although different in appearance, the pump procedure remains the same for the QSK series engines.

Disconnect the electrical connections to the fuel lift pump.

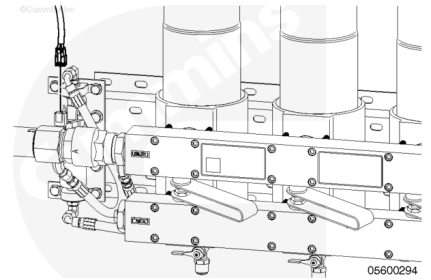


⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting to performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, arcing equipment, or welding equipment) in the work area.

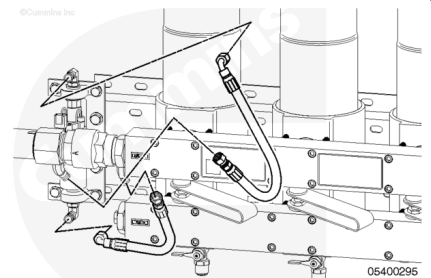


Disconnect the supply and discharge flexible hoses from the lift pump.

Remove the four capscrews securing the fuel lift pump to the fuel filter mounting bracket.

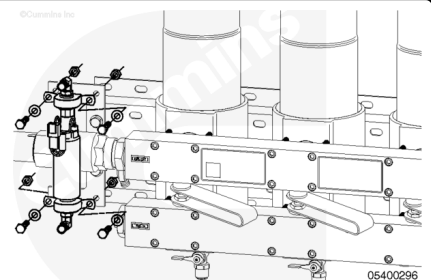

Remove the vibration isolators from each end of the fuel lift pump.

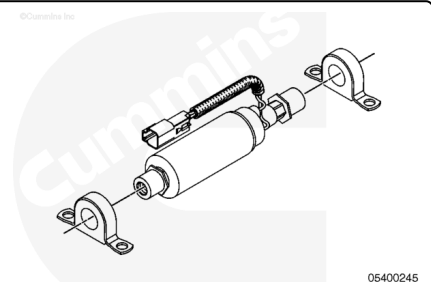


Inspect for Reuse

with Electronically Actuated Injector


Inspect the fuel lift pump for any signs of damage.

Replace the fuel lift pump, if damaged.

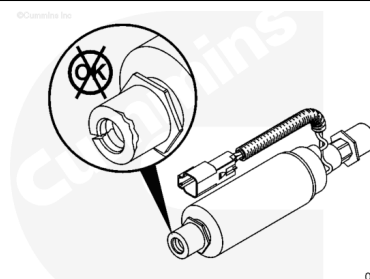

05400246

Use a digital multimeter to measure the resistance across the pins in the electrical connector. Reference the table below for resistance value. If **not** within specification, replace the fuel lift pump.

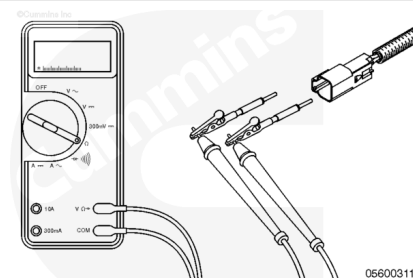

05600311


Fuel Lift Pump Resistance	
Minimum	Maximum
1 ohm	3 ohm

Use a digital multimeter, check for a short between each pin and the fuel lift pump body. Replace the fuel lift pump, if shorted.

Install

with Electronically Actuated Injector


Install vibration isolators at each end of the fuel lift pump.

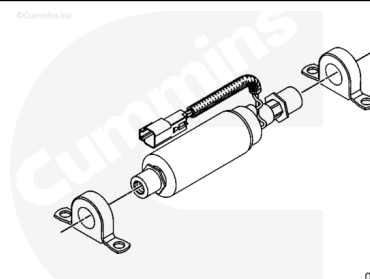

05400245


Install the fuel lift pump and four capscrews to the fuel filter mounting bracket

Torque Value: 15 n•m [133 in-lb]

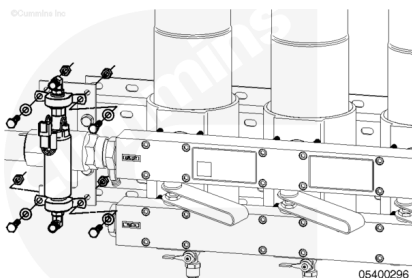


Connect the supply and discharge flexible hoses to the lift pump.

Torque Value: 54 n•m [40 ft-lb]

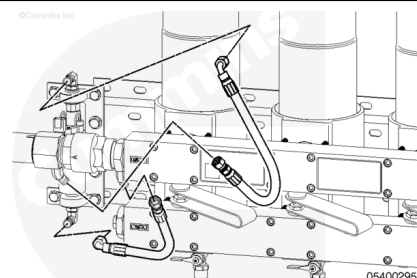

Connect the electrical connection to the fuel lift pump.

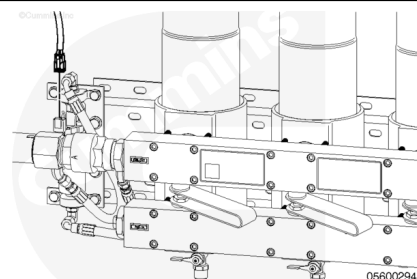

Turn the keyswitch to the ON position.

The fuel lift pump will operate for 120 seconds.

Check the fuel lift pump connections for leaks.

