

Trainings ▾


Measure

with Mechanically Actuated Injector


Remove the fuel drain hose.

Install an adapter and pressure gauge Part Number ST-1273, or equivalent, between the fuel drain hose and the engine fuel drain fitting. Minimum gauge capacity must be 200 mm-Hg [8 in-Hg].


- Install the adapter on the inlet end of the check valve (if equipped).
- Use hose adapter from Part Number ST-434 to connect the pressure gauge hose.
- This hose **must** be long enough to allow the gauge to be read in the operator's compartment.
- Bleed the air from the gauge line.

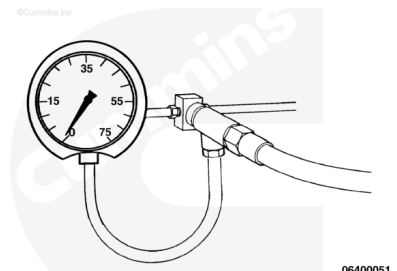

Operate the engine at rated rpm and full load. This can be accomplished by using a grade and load that requires the engine to produce maximum power.

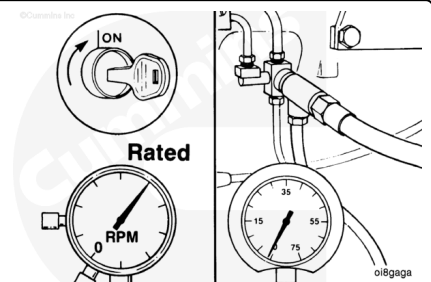

Make sure the drain line does **not** have any loops or is **not** crimped.

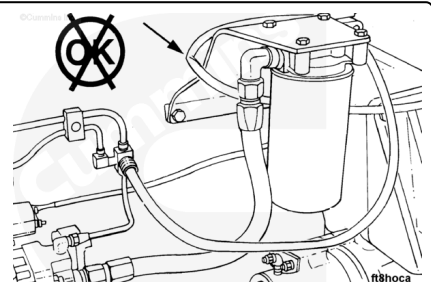


Observe the reading on the gauge. Hold the gauge at the same level on as the connection.

The maximum drain line restriction is as follows:


Fuel drain line Restriction				
	mm-hg		in-hg	
With check valve		165	MAX	6.5
Without check valve		65	MAX	2.5

©Cummins Inc.

If the restriction is above specifications, remove the fuel tank fill cap and check again.

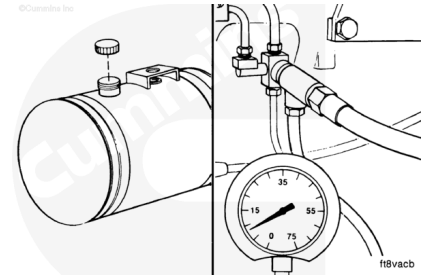


If the restriction is within specifications when the cap is removed, replace the tank vents.

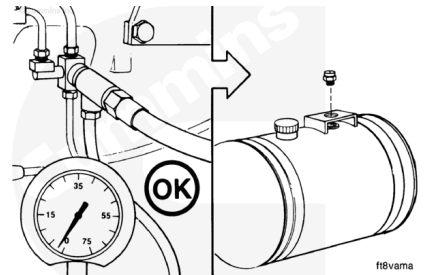


If the restriction is still above specifications, check for a return stand-pipe.

- Remove the fuel return line from the fuel tank.
- Install an adapter that will allow a hand pump and manometer to be connected to the tank. The gauge must have a minimum capacity of 500 mm H₂O [20 in-H₂O].

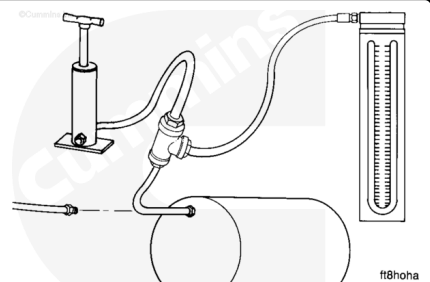

- Apply air pressure using the hand pump. If pressure develops and is held, a stand pipe exists.
- Remove the stand pipe or relocate the fuel return connection to a suitable fitting in the expansion space of the fuel tank.

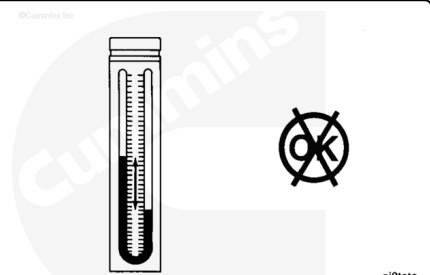


oil8tota


with Electronically Actuated Injector

Remove the fuel drain line.


Install hose adapter, Part Number ST-434-2, and pressure gauge, Part Number ST-1274-1, between the fuel drain hose and the engine fuel drain fitting.

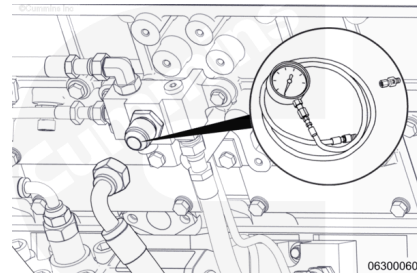

Start and operate the engine at high idle, **no** load. The fuel drain line restriction **must** be less than 34 kPa [10 in-Hg].

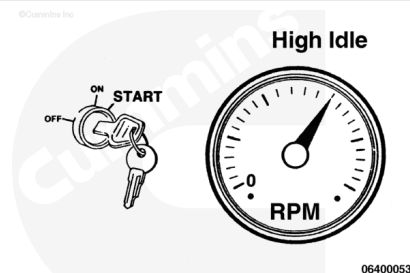

If the fuel drain line restriction is above specifications, inspect the fuel drain line. Refer to Procedure 006-013 in Section 6. (</qs3/pubsys2/xml/en/procedures/28/28-006-013.html>)

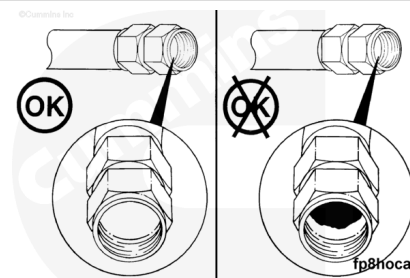

Remove the measuring equipment.

Install the fuel drain line.

Tighten the fuel line.

Torque Value: 75 n•m [55 ft-lb]

