

Trainings ▾

General Information


with Mechanically Actuated Injector

Note : This procedure applies to engine with mechanically actuated injectors only.

Fuel Filter information for the engine with electronically actuated injectors is found in the following procedures:

- Refer to Procedure 006-075 in Section 4.
(/qs3/pubsys2/xml/en/procedures/28/28-006-075-om.html)
- Refer to Procedure 006-076 in Section 4.
(/qs3/pubsys2/xml/en/procedures/28/28-006-076-om.html)

The fuel filters mounted on the engine are fuel filter/water separators. There is an option for the filters to be remote mounted. The location depends on the OEM.

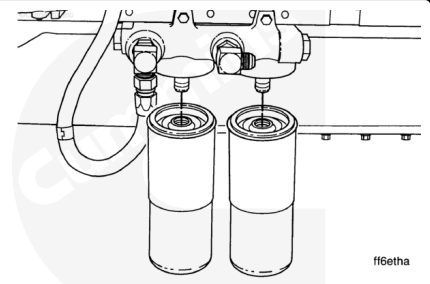


Preparatory Steps

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

- Close the fuel supply shutoff valve before changing the fuel filters.

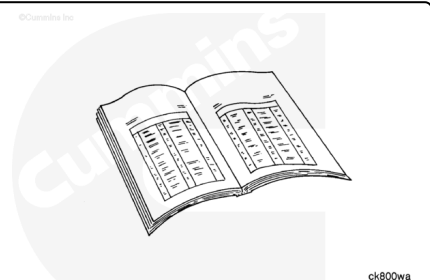


Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

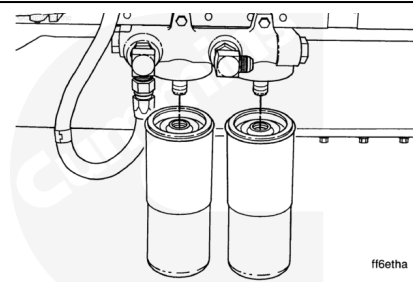


⚠ CAUTION ⚠

Do not spill or drain fuel into the bilge area when disconnecting or removing fuel lines, replacing filters, and priming the fuel system. The fuel must be disposed of in accordance with local environmental regulations.

Remove the fuel filter with filter wrench, Part Number 3400158, or equivalent.


Remove the thread adapter sealing ring (1).

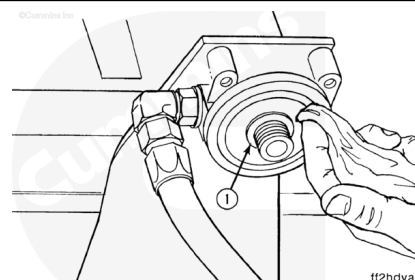

Clean

with Mechanically Actuated Injector

Check to make sure the thread adapter sealing ring (1) has been removed. Wipe the surface with a clean, lint-free cloth to remove any debris or dirt on the gasket mating surface of the filter head.

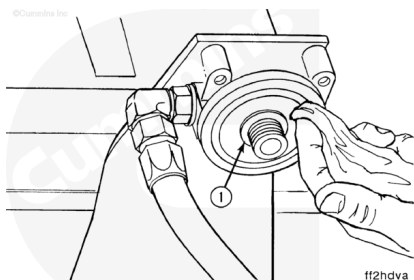

Install

with Mechanically Actuated Injector

Install a new thread adapter sealing ring supplied with the new filter.

A fuel-water separator or fuel filter and water separator combination must be installed.

Apply a light coating of clean engine lubricating oil to the surface of the filter gasket.


Fill the filter with clean fuel.



Install the filter on the filter head. Turn the filter until the gasket touches the surface of the filter head.

Tighten an additional 1/2 to 3/4 of a turn after the gasket touches the filter head surface.

Open the fuel supply shutoff valve and check for leaks.

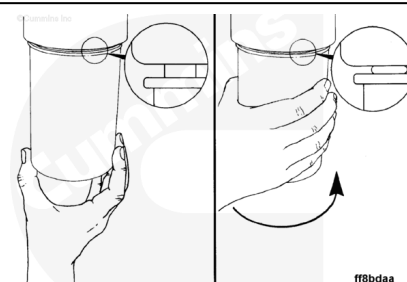


Finishing Steps

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe

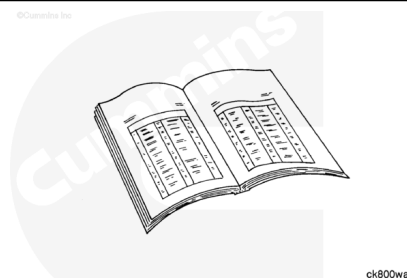

personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

- Open the fuel supply shutoff valve.
- Prime the fuel system if necessary. Refer to Procedure 005-016 in Section 8.
(/qs3/pubsys2/xml/en/procedures/28/28-005-016-tr.html)
- Operate the engine and check for leaks.