


Trainings ▾

Install

⚠ CAUTION ⚠

Check to be sure the o-ring seals remain in position. If the seals fall out, an oil leak can result

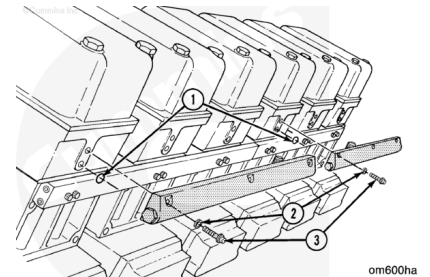

Only engines that have STC (HVT) have the oil manifolds.

Note : K38 and K50 engines with STC (HVT) have four oil manifolds. The manifolds are **not** the same for K38 and K50 engines. Each manifold connects to three rocker lever housings on the K38 and four rocker lever housings on the K50.

Note : Each engine has two different manifolds. The left bank ("LB") front and right bank ("RB") rear manifolds are the same. The "LB" rear and "RB" front manifolds are the same.

Use lubriplate to hold the o-ring seals (1) in the counterbore on the manifolds. Install the o-ring seals on the oil manifold. One seal is required at each rocker lever housing.

Install the flat washers (2) on the capscrews (3). Apply Loctite™ 271, Part Number 3375068, or equivalent, to the capscrews.

Install the manifolds and the capscrews.

Torque Value: 16 n•m [142 in-lb]

