

Trainings ▾

Remove


STC (HVT) Oil Manifolds

Note : Only engines with STC are equipped with these manifolds.

Note : There is one hose assembly on each bank of the engine.

Detach the hoses from the fittings (8) on the manifolds and on the STC oil control valve (9). Remove any clamps and hose assemblies.

Check the hose for damage. Discard the part if it is damaged.

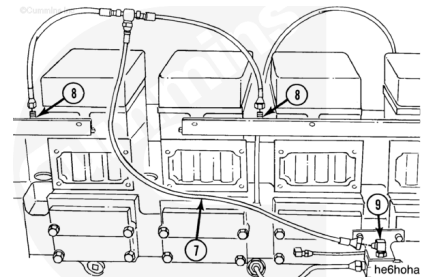

Remove the flat washers (2), capscrews (3), the manifolds, and the o-ring seals (1).

Discard the seals.

