

Trainings ▾

Calibrate


Standard

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

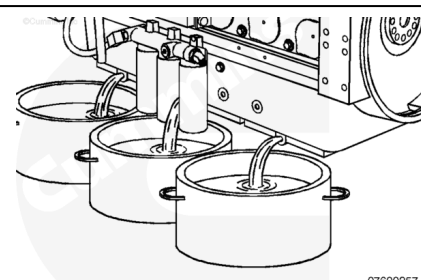

07600257

Note : For marine applications **only**, the lubricating oil dipstick can **not** be calibrated until the engine is in the vessel and the vessel is in the water.

Drain the lubricating oil. Refer to Procedure 007-002 (</qs3/pubsys2/xml/en/procedures/28/28-007-002-om.html>) (Lubricating Oil and Filters) in Section 4.


Allow five minutes for the oil to drain into the oil pan. If the engine and/or oil temperature is below 4°C [39°F], a longer period of time will be required for full drain.

The engine **must** be level to perform this procedure.

Install the dipstick in the dipstick tube housing.

Use the correct volume of clean 15W-40 oil. Fill the oil pan to the specified low or L oil level. Refer to Lubricating Oil System - Specifications, in Procedure 018-017


(</qs3/pubsys2/xml/en/procedures/28/28-018-017-om.html>) (Lubricating Oil System Specifications) in Section V for the correct engine oil capacity for the application.

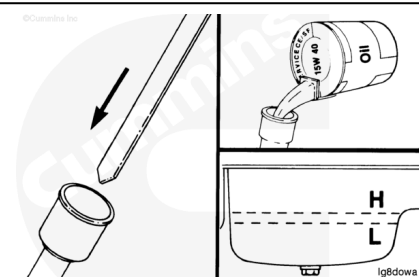

lg8dowa

⚠ CAUTION ⚠

Exercise care when marking the dipstick, or the dipstick will break if the scribe mark is too deep.

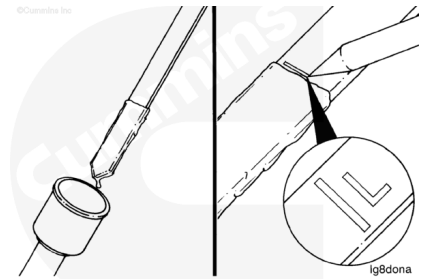


Remove the dipstick, and scribe a mark across the stick at the oil level. Label the mark with an L to indicate the low oil level.

If a new, blank dipstick is being used, cut the dipstick approximately 38 mm [1.5 in] below the low or L oil level mark.

⚠ CAUTION ⚠

Only add the difference between low volume and high volume when adding oil to the specified high or low level. Excessive oil in the crankcase can cause premature engine failure.

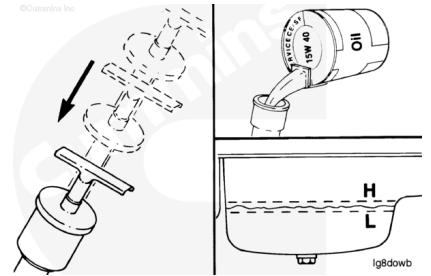

Wipe the excess oil from the dipstick, and install it in the dipstick tube housing.

Use the correct volume of oil to fill the oil pan to the specified high or H oil level. Refer to Procedure 018-017

(</qs3/pubsys2/xml/en/procedures/28/28-018-017-om.html>)

(Lubricating Oil System Specifications) in Section V for engine oil capacity.

Remove the dipstick, and scribe a mark across the stick at the oil level. Label the mark with an H to indicate the high oil level.

