


Trainings ▾

Disassemble


Note : The same filter head is on K38 and K50 engines.

Note : The location of the plugs and fittings can be reversed on the filter head being serviced.

Disconnect the oil lines (1) from the oil filter head.

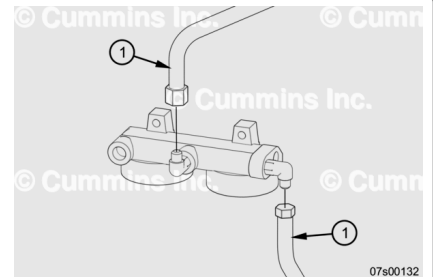


Remove the plugs (1) and the o-rings (2). Discard the o-rings.

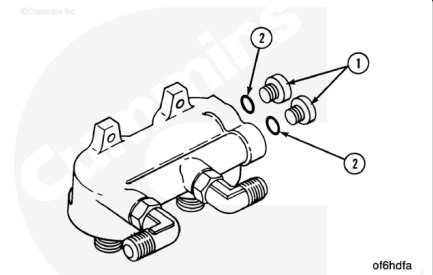

Mark the location of the elbows and their orientation prior to removal on the filter head.


Remove the elbows (1) and o-rings (2). Discard o-rings.

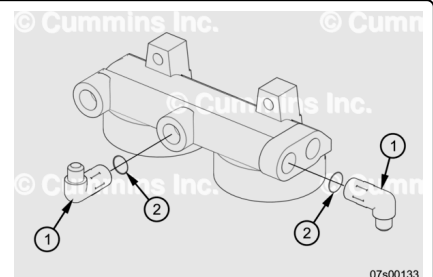

Clean and Inspect for Reuse


⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturers recommendations for use. Wear goggles and protective clothing to reduce the risk of personal injury.

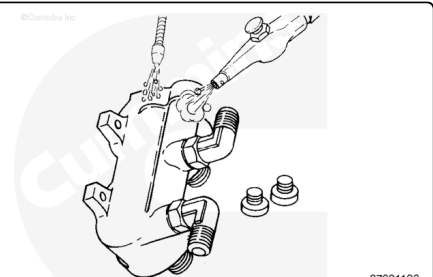


Use solvent. Clean the head.

Check the parts for damage.

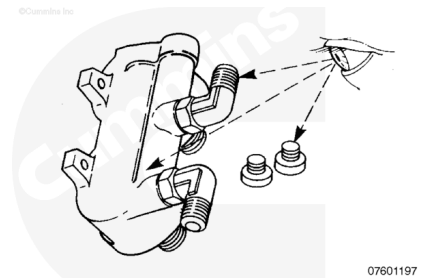

⚠ CAUTION ⚠

The adapters for the bypass filter head are different than on the full-flow filter head or a fuel filter. The adapters have different threads to prevent the installation of the wrong filter element. The adapters for the bypass oil filter have a small hole, 2.56 mm [0.101 inch], in the center.

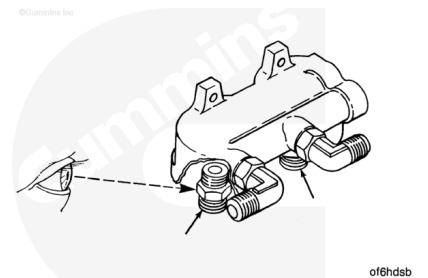

Note : A portion of the filter head is not shown for clarity.

Note : It is not necessary to remove the adapters unless they are damaged or loose.


Check the adapters.

Assemble

If the adapter **must** be replaced, Loctite 242® or equivalent **must** be put on the threads that touch the threads in the filter head.

Torque Value: 203 n·m [150 ft·lb]


Note : Older filter heads contain a lockplate on each adapter. The lockplate does **not** have to be installed when Loctite® is used on the threads.

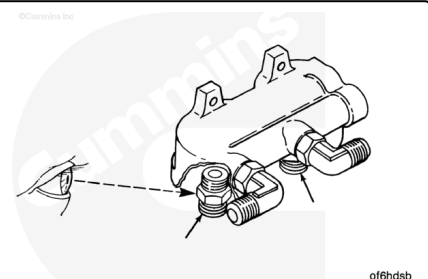

Install the o-rings (2) on the plugs (1).

Install the plugs.

Torque Value: 30 n·m [22 ft·lb]

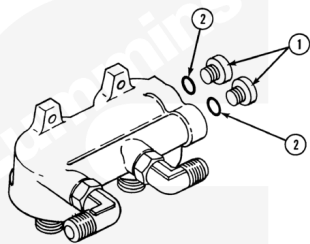


076hdta

Install o-rings (2) on elbow (1).

Install the elbows.


Torque Value: 65 n•m [50 ft-lb]

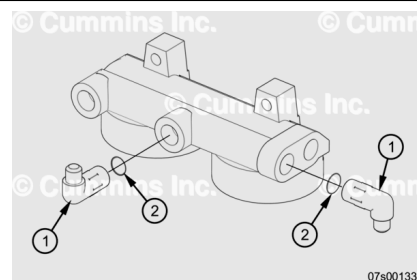

07s00133

Install oil lines (1) to oil filter head as shown.

Torque Value: 30 n•m [22 ft-lb]

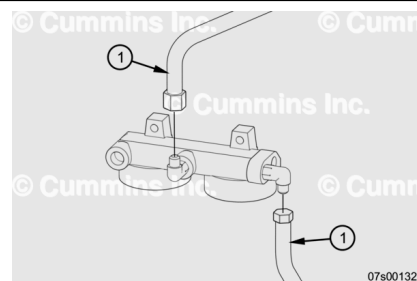

07s00132