


Trainings ▾

General Information

There are two types of gasket that can be used between the transfer connection and the cylinder head. One is a steel core gasket and the other is an edge molded gasket.


There are also two types of oil transfer connection, one of which is slightly thicker than the other.

If fitting the thicker transfer connection with the molded edge gasket, it is recommended to machine 1.1 mm [0.043 in] off of the mating face of the transfer connection to prevent possible interference with the engine starters.

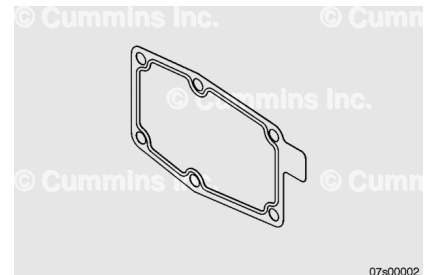

The thickness of a transfer connection can be determined as follows:

- There are six counter-bored holes used to hold the oil transfer connection to the cylinder block.
- Measure the thickness of the material between the bottom of the counter-bored hole (x) and the face of the transfer connection that mates to the cylinder block.
- A thicker transfer connection has a thickness of 12 mm [0.472 in] (± 0.38 mm [0.015 in]).
- A thinner transfer connection has a thickness of 10.9 mm [0.429 in] (± 0.38 mm [0.015 in]).

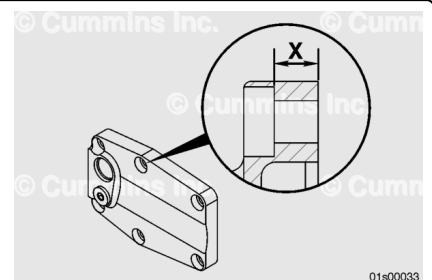


Remove

Remove the six capscrews.

Remove the jumper cover.

Remove the gasket.


Remove the plugs from the jumper cover, if required, and discard the o-rings.

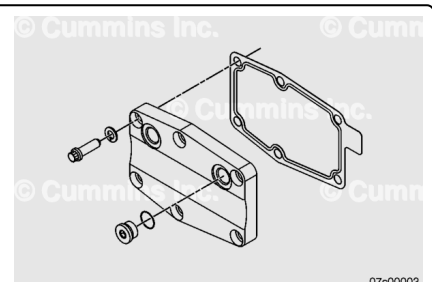

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

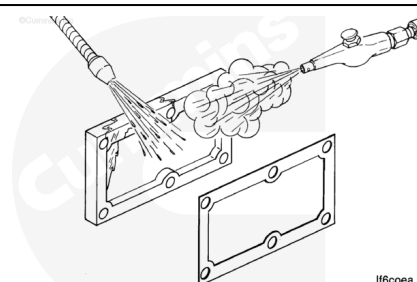

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Use a gasket scraper to remove all gasket material.

Use solvent to clean the oil jumper cover.

Dry with compressed air.

Check the oil jumper cover for cracks. If it is cracked, it **must** be replaced.


Note : When replacing an old design aluminum jumper cover, it is recommended that an old design cast iron cover is used. New design cast iron covers can not be used as they are a different size and will not fit.

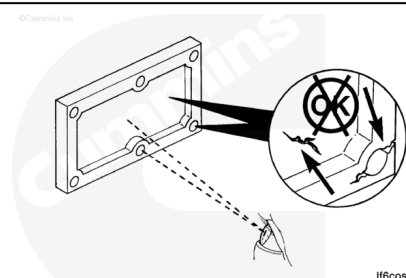

Install


Depending on the engine configuration, there may be two of the same type of covers, or one of each type. The covers that are installed **must** be the same type as those that were removed.

Install the two covers (1) on the opposite side of the block to the lubricating oil filter head.

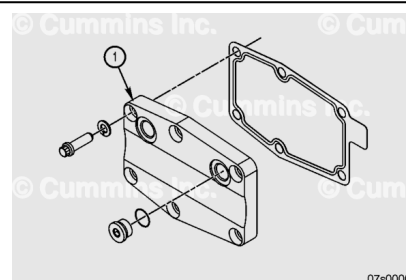

Use three guide studs to assist with alignment of the gasket and cover. Position the studs in the holes shown in the illustration (1).

Install the gasket so the tab is located in the top right corner, as illustrated (2).

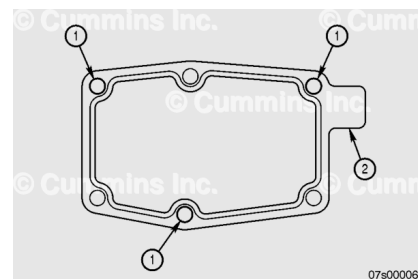

Install three capscrews in the holes without guide studs. Make sure the gasket is **not** disturbed.

Remove the guide studs and install the remaining three capscrews.

Tighten all six capscrews in the torque sequence specified.

Torque Value: 60 n•m [44 ft-lb]

If previously removed, install new o-rings, install the plugs into the jumper cover, and tighten.

Torque Value: 47 n•m [35 ft-lb]

