


Trainings ▾

Remove

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

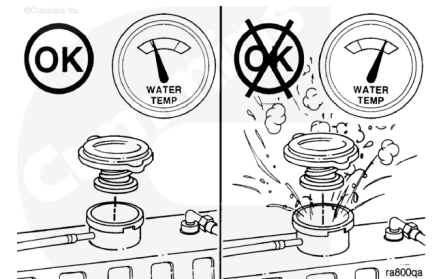

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Remove the pressure cap from the radiator.

Note : The location of the filters can vary depending on the application. Shown are the filters located on the front of the engine, although the location can be different, the procedure remains the same.

Turn the valve (1) on the coolant filter head to the OFF position to prevent water loss.

Remove and discard the filters.

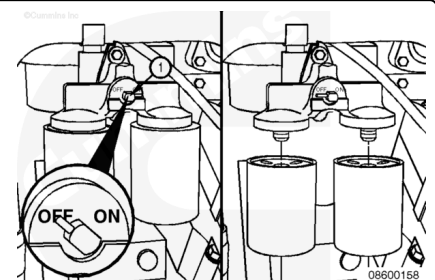


Clean and Inspect for Reuse

⚠ CAUTION ⚠

When lubricating the seal on the coolant filter do not allow oil to get into the coolant filter. It will adversely affect the SCA.

Lubricate the seal on the coolant filter with clean engine oil.

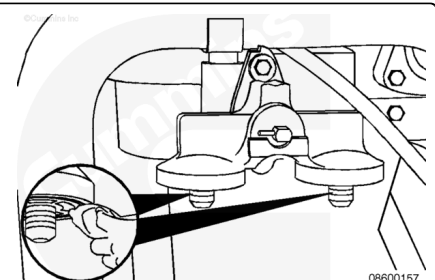


Install

Install the coolant filters. Turn the filter **clockwise** until the seal touches the coolant filter head.

Turn the filter an additional one-half to three-fourths of a turn after contact.

Turn the valve (1) on the coolant filter head to the ON position.

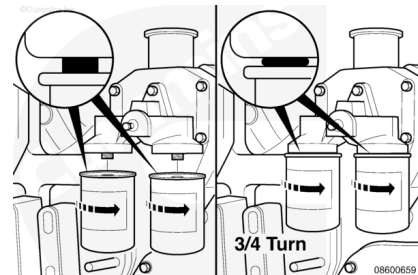

Install the cooling system pressure cap.

Operate the engine until the coolant reaches a temperature of 85°C [185°F].

Check for leaks.

