


Trainings ▾

Maintenance Check

Every 6000 hours or 2 years, inspect the fan hub for proper end clearance and grease leakage.

Remove the fan belt. Refer to Procedure 008-002 in Section A. (</qs3/pubsys2/xml/en/procedures/28/28-008-002-om-rep.html>)

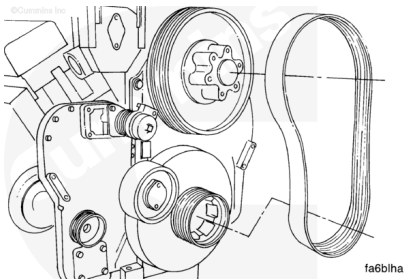


Rotate the fan hub pulley to check for rough or damaged bearings.

Inspect the pulley grooves for excessive wear.

Check for grease leakage.

Use a dial indicator to check the bearing end clearance.

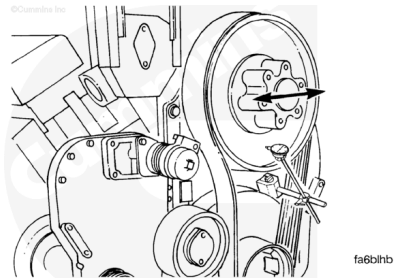


Bearing End Clearance

mm		in
0.03	MIN	0.001
0.15	MAX	0.006

Replace a fan hub with a new or rebuilt unit as necessary.

Contact a Cummins® Authorized Repair Location for the removal and replacement of the fan hub.

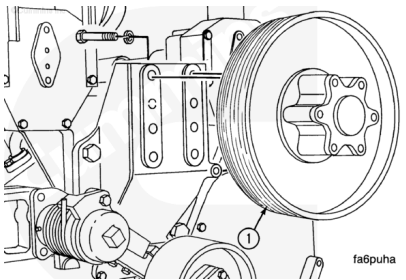

Install the fan belt. Refer to Procedure 008-002 in Section A. (</qs3/pubsys2/xml/en/procedures/28/28-008-002-om-rep.html>)

