


Trainings ▾

Install

If removed, install the bottom bracket, washers, and capscrews (1).

Tighten the capscrews.

Torque Value: 95 n•m [70 ft-lb]

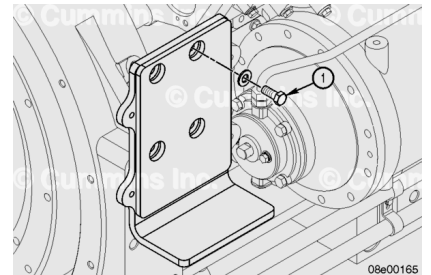


If removed, install the rubber pad around the oil cooler. Place the marine gear oil cooler onto the rear bracket. Make sure that the coolant connections are facing the front of the engine.

Install the front bracket, washers, and capscrews.

Hand-tighten the capscrews and make sure that the bracket is squarely contacting the gear cooler.

Tighten the capscrews.

Torque Value: 38 n•m [28 ft-lb]

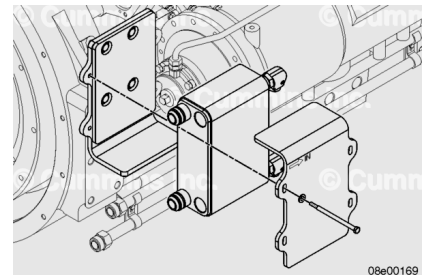

Note : Make sure the oil flow is into the top fitting on the marine gear oil cooler.

Connect the gear oil lines to the marine gear oil cooler connectors.

Tighten the gear oil lines.

Torque Value: 74 n•m [55 ft-lb]

