



## Trainings ▾

### Remove

Disconnect marine gear oil lines from the marine gear oil cooler.

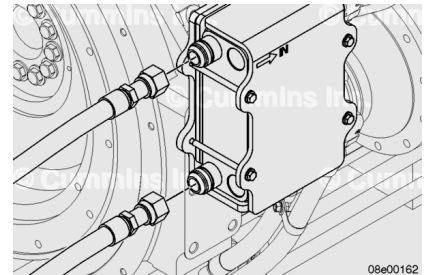


**Note :** Only remove the elbows from the marine gear oil cooler if necessary.

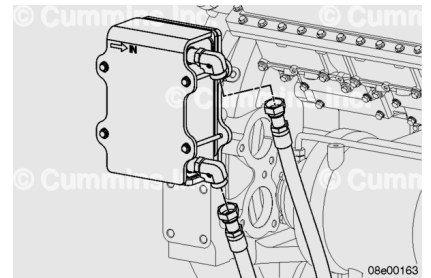

#### **⚠ CAUTION ⚠**

Once the top bracket is removed, the marine gear cooler is unsecured. Remove the marine gear cooler as soon as the top bracket is removed.

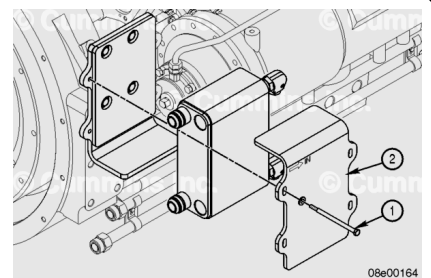


**Note :** Retain the rubber pad for reuse.

Remove the four capscrews (1), washers, and the top bracket (2) that hold the marine gear cooler to the bottom bracket.

Remove the marine gear oil cooler.

If necessary, remove the four capscrews (1), washers, and bottom bracket.

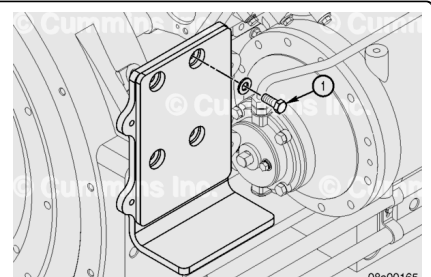

**Last Modified: 23-Nov-2010**