


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

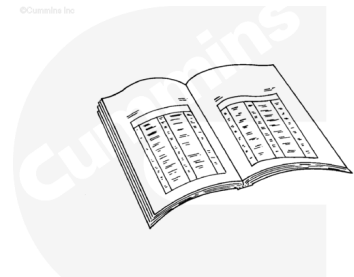

ck800wa

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.


- Disconnect the battery cables. Refer to Procedure 013-009 in Section 13.
(/qs3/pubsys2/xml/en/procedures/99/99-013-009.html)
- Disconnect the air/fuel supply to the air starter, if equipped. Refer to Procedure 012-022 in Section 12.
(/qs3/pubsys2/xml/en/procedures/28/28-012-022-tr-gc.html)
- Drain the cooling system. Refer to Procedure 008-018 in Section 8. (/qs3/pubsys2/xml/en/procedures/28/28-008-018-tr-gc.html)
- Remove the Low-Temperature Aftercooler (LTA) outlet connection. Refer to Procedure 008-110 in Section 8.
(/qs3/pubsys2/xml/en/procedures/28/28-008-110-tr-gc.html)

- Remove the Low-Temperature Aftercooler (LTA) inlet connection. Refer to Procedure 008-132 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-132-tr-gc.html>)

Remove


Remove the banjo capscrew (1) from the low temperature aftercooler water pump.

Discard the sealing washers (2).

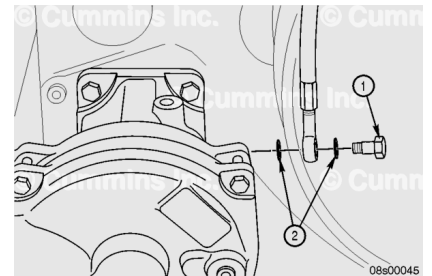


Note : Inspect the oil feed hose for damage. If replacement is required, remove as instructed in the following steps.

Disconnect the oil feed hose (2) from the elbow (1) on the front gear housing.

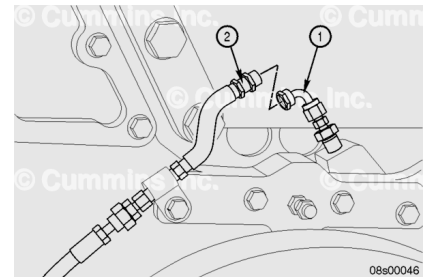


Remove the capscrew that attaches the oil feed hose P-clip to the front gear housing.

Remove the oil feed hose.

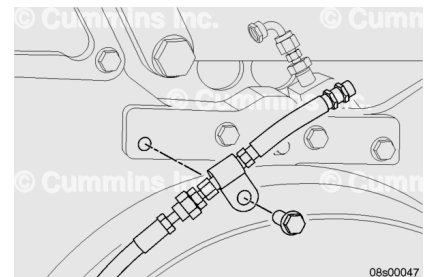


Remove the four capscrews, lock washers, and LTA water pump from the front gear cover.

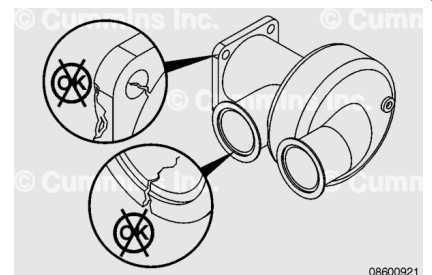

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

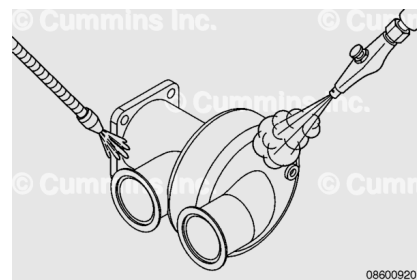

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the LTA water pump housing with solvent.

Dry with compressed air.

Inspect the LTA water pump housing for cracks or other damage.

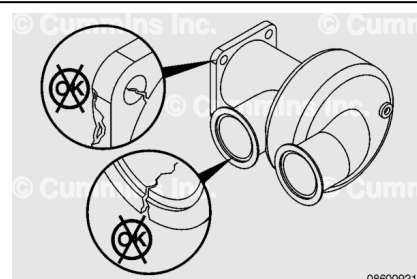


Install

Install the LTA water pump, lock washers, and capscrews.

Tighten the capscrews.


Torque Value: 55 n•m [41 ft-lb]

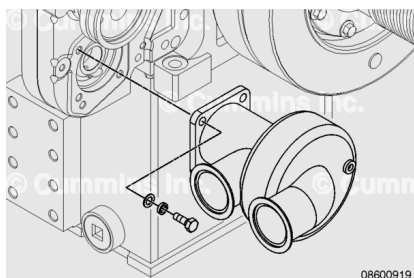

Install the capscrew that attaches the oil feed hose and p-clip to the front gear housing.

Tighten the capscrew.


Torque Value: 80 N·m [59 ft-lb]

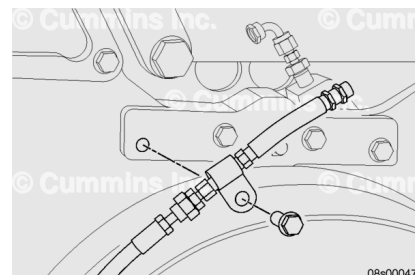

Install the oil feed hose (2) to the elbow (1) on the front gear housing.

Tighten the hose fitting.


Torque Value: 16 N·m [142 ft-lb]

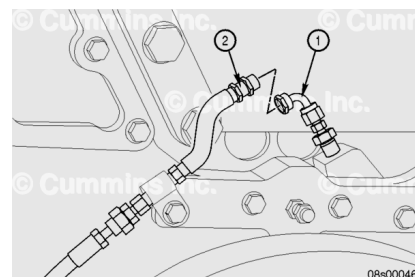

Install the banjo capscrew (1) and the new sealing washers (2) to the LTA water pump.

Tighten the banjo capscrew.


Torque Value: 37 N·m [27 ft-lb]

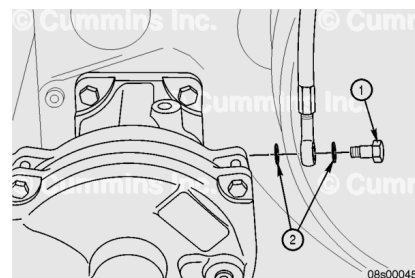

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

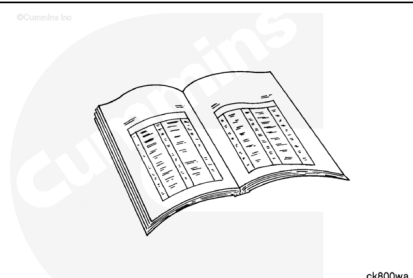

- Connect the battery cables. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Connect the air/fuel supply to the air starter, if equipped. Refer to Procedure 012-022 in Section 12. (</qs3/pubsys2/xml/en/procedures/28/28-012-022-tr-gc.html>)
- Fill the cooling system. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-018-tr-gc.html>)
- Install the Low-Temperature Aftercooler (LTA) outlet connection. Refer to Procedure 008-110 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-110-tr-gc.html>)
- Install the Low-Temperature Aftercooler (LTA) inlet connection. Refer to Procedure 008-132 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-132-tr-gc.html>)
- Operate the engine and check for leaks.