

Trainings ▾

Preparatory Steps

Note : Not all engines are equipped with this option.


- Remove the cooling fan. Refer to Procedure 008-040 in Section 8. (/qs3/pubsys2/xml/en/procedures/28/28-008-040-tr.html)
- Remove the fan belt. Refer to Procedure 008-002 in Section 8. (/qs3/pubsys2/xml/en/procedures/28/28-008-002-tr.html)



Disassemble

Remove the capscrews.


Remove the pulley assembly from the pivot arm assembly.

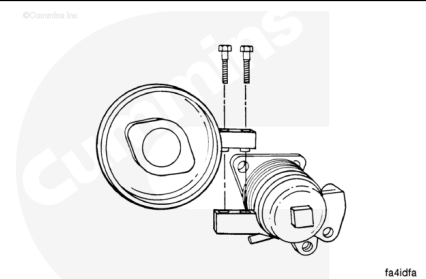


Remove the turnbuckle or shock absorber from the pulley assembly.

Check the shock absorber for fluid leakage and bushing wear. Push the shock absorber up and down. Check the vibration absorption.

Check the turnbuckle for bushing wear or wear in the slot.

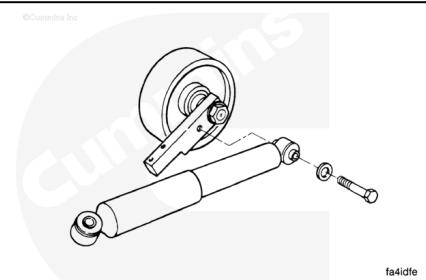


Remove the capscrews, lock washers, plate, and gasket.

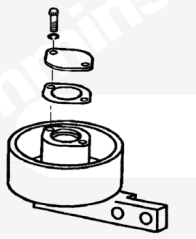

fa6pufa

Note : The locknut has a left-hand thread.


Remove the locknut (1). Lift the pulley (2) from the shaft.

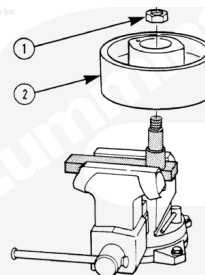

fa4pufc

Remove the seal (5).

Remove the front bearing (3), inner spacer (4), and the rear bearing (6). Tag the bearings for future identification.

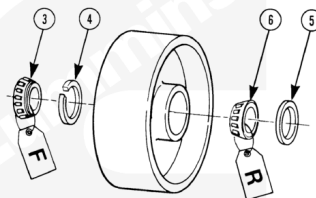

fa4pufd

Clean and Inspect for Reuse


⚠ CAUTION ⚠

Do not allow the force of the compressed air to turn the bearing when cleaning. Bearing damage will result due to lack of lubrication.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

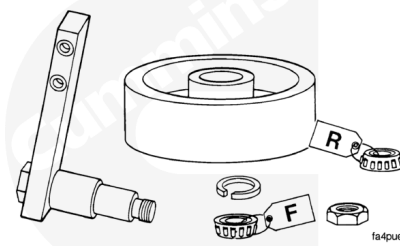

fa4puea

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the parts.


Dry with compressed air.

Inspect the front and rear bearings.

The bearings and spacers are part of a kit. All parts **must** be replaced if any part is worn or damaged. Refer to Procedure 008-073 in Section 8.
(/qs3/pubsys2/xml/en/procedures/28/28-008-073.html)

Inspect the shaft for wear at the seal locations.

Shaft Outside Diameter		
mm		in
21.961	MIN	0.8646
21.974	MAX	0.8651

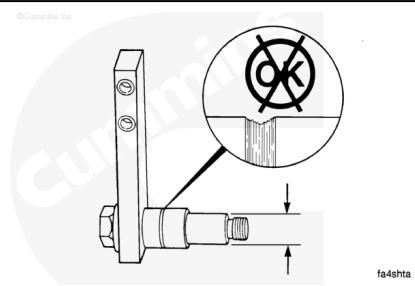


Remove the locknut and lock washer.

Be sure the shaft is tight in the bracket. If the shaft is loose, replace both pieces.

Install the parts.

Torque Value: 205 n·m [151 ft-lb]

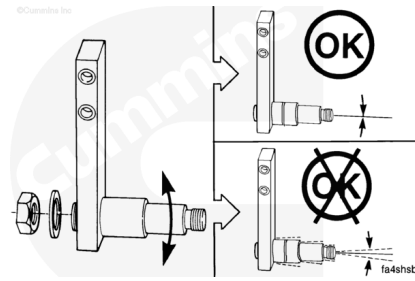


Assemble

⚠ CAUTION ⚠

Do not lubricate the seal or the seal surface of the shaft. The seal and seal surface must be clean and dry.

Use high performance, general purpose industrial-type grease (NLGI Grade No. 2) Chevron™ SRI Grease 2 or Mobilux™ EP 2 grease, or its equivalent. If above greases are **not** available

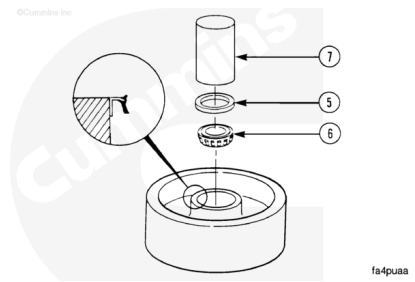

locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents. Lubricate the rear bearing (6) and the bearing race.

Slide the bearing (6) into the bore of the idler pulley.

Use a mandrel (7) to install the seal (5).

The seal **must** be even, with no more than 0.51 mm [0.020 inch] below the top surface.


Fill the cavity between the bearing and oil seal 2/3 full of grease.

Note : Make sure that there is no grease applied to the inner diameter of the seal. The surface of the seal that comes into contact with the shaft **must** remain clean and dry.

Install the pulley.

The bearing **must** slide easily over the shaft.

If it does **not** slide smoothly over the shaft, check for chips and burrs.

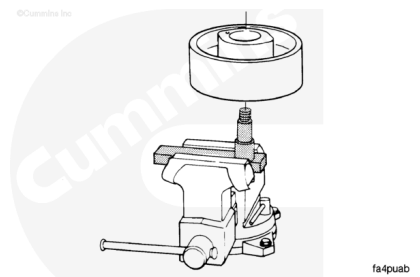


Install the bearing inner spacer (4).

Use high performance, general purpose industrial-type grease (NLGI Grade No. 2) Chevron™ SRI Grease 2 or Mobilux™ EP 2 grease, or its equivalent. If above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Lubricate the front bearing and the bearing race.


Install the bearing (3).

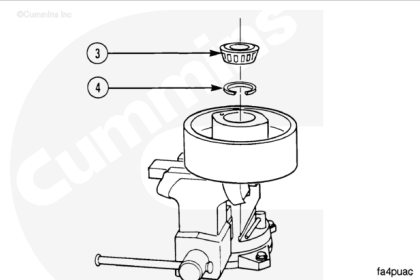

Note : The locknut has a left-hand thread.

Install and tighten the locknut.


Torque Value: 150 n•m [111 ft-lb]

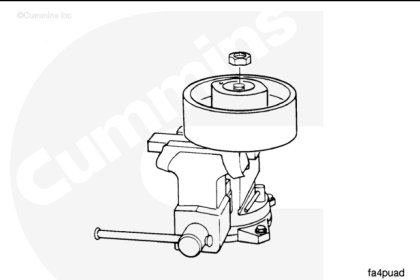

Measure

Use a dial indicator to measure the end clearance.

Bearing End Clearance		
mm		in
0.08	MIN	0.003
0.25	MAX	0.010

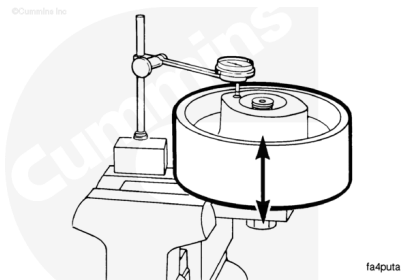


If the clearance is **not** within specification, be sure the spacer was installed correctly.

The bearings **must** touch the spacer. The bearing races **must** touch the retaining ring.

Lubricate


Fill the front cavity 2/3 full of grease.

Use high performance, general purpose industrial-type grease (NLGI Grade No. 2) Chevron™ SRI Grease 2 or Mobilux™ EP 2 grease, or its equivalent. If above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

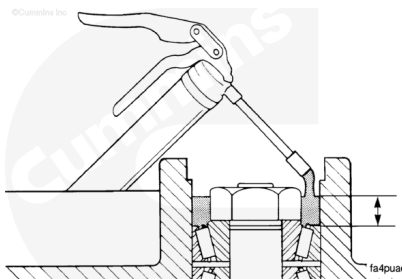


Install

Install the cover plate.

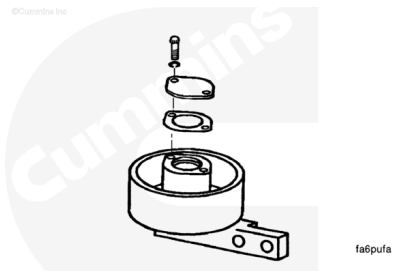


Install the turnbuckle and shock absorber to the pulley assembly.

Torque Value: 65 n•m [48 ft-lb]

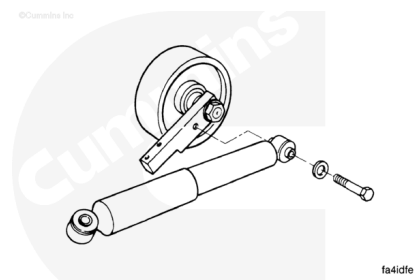

Install the pulley assembly to the pivot arm assembly.

Torque Value: 45 n•m [33 ft-lb]

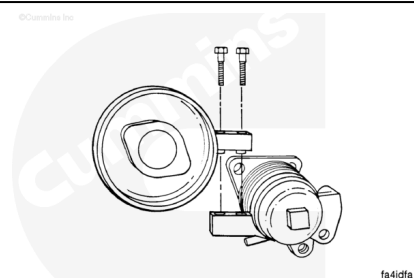

Finishing Steps

- Install the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-002-tr.html>)
- Install the cooling fan. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/28/28-008-040-tr.html>)

