


Trainings ▾

Install

Note : There are 3 brackets on the QSK38 engine and 4 brackets on the QSK50 engine.

Install the bolts, washers, and brackets into the lubricating oil pan.


Torque Value: 45 n•m [33 ft-lb]

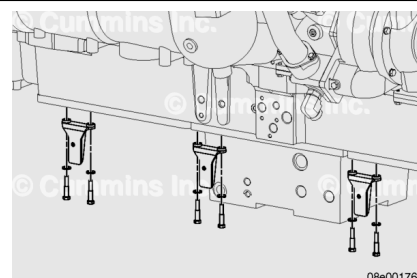

Note : Do not torque any fittings or bolts until all components have been installed to make sure of proper alignment.

Note : There are 3 brackets on the QSK38 engine and 4 brackets on the QSK50 engine.

Install the bolts (1), p-clips, and water transfer tubes, using new o-rings.

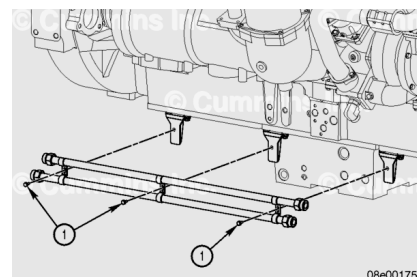


If removed, install the elbows with new o-rings onto the engine and marine gear oil cooler.

Torque Value: 135 n•m [100 ft-lb]

Connect the coolant line connectors (2) to the fittings on the LTA water pump.

Connect the coolant line connectors (3) to the water transfer tubes.

Install the bolt securing the p-clips (1) together.

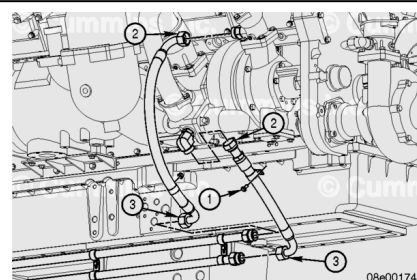


Connect the coolant line connectors (2) to the elbows on the marine gear cooler.

Connect the coolant line connectors (3) to the water transfer tubes.

Install the bolt securing the p-clips (1) together.

Tighten the hose fittings and clips.

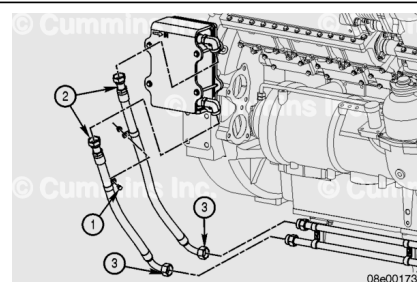

Hose Fittings

Torque Value: 100 n•m [74 ft-lb]

Clips

Torque Value: 25 n•m [221 in-lb]

Last Modified: 23-Nov-2010
