

Trainings ▾


Remove

Note : Only remove the elbows from the marine gear oil cooler if necessary.

Remove the bolt securing the p-clips (1) together.

Remove the coolant line connectors (2) from the elbows on the marine gear oil cooler.

Remove the coolant line connectors (3) from the water transfer tube.

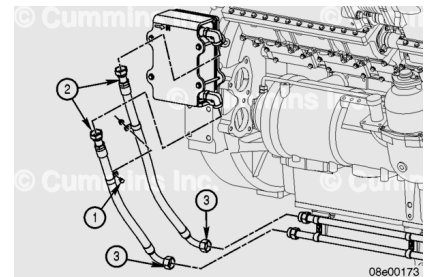


Note : Only remove the fittings from the LTA water pump if necessary.

Remove the bolt securing the p-clips (1) together.

Remove the coolant line connectors (2) from the fittings on the LTA water pump.


Remove the coolant line connectors (3) from the water transfer tube.

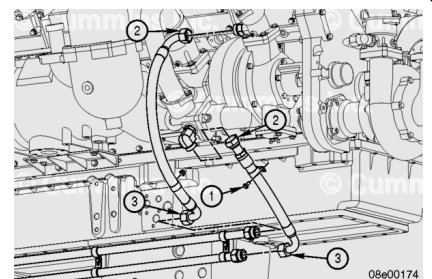

Note : There are 3 brackets on the QSK38 engine and 4 brackets on the QSK50 engine.

Remove the bolts (1), p-clips, and water transfer tubes.


Discard the o-rings.

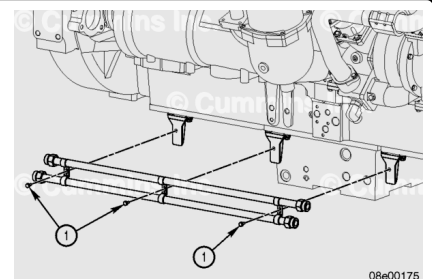

Note : If the lubricating oil pan is being removed, mark the location of the brackets to make sure they are installed in the same location.

Note : There are 3 brackets on the QSK38 engine and 4 brackets on the QSK50 engine.

Remove the bolts, washers, and brackets from the oil pan.

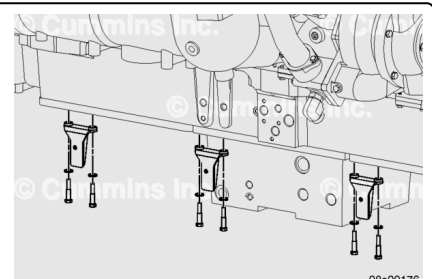

Last Modified: 23-Nov-2010
