


## Trainings ▾

### Remove

**Note :** Install a capscrew in the end of the shaft to prevent damage to the threads.

Install the capscrew (1). Use a puller (2), ST-647, or equivalent. Remove the pulley from the accessory drive shaft.


**Note :** Some engines have an accessory drive cover instead of a pulley. It is **not** necessary to remove the cover.

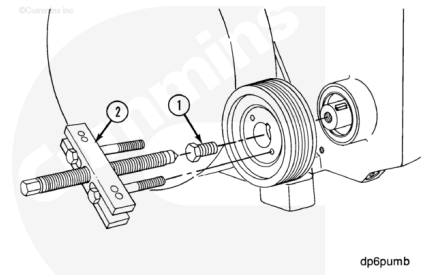

### Clean and Inspect for Reuse

#### **⚠ WARNING ⚠**


**When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the risk of personal injury.**

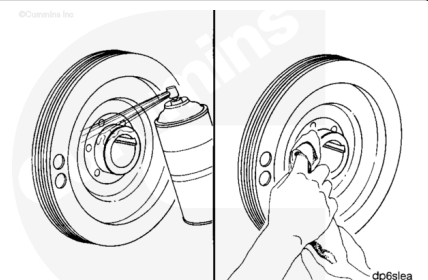

Use solvent and a clean cloth. Clean the pulley wear sleeve.

Check the grooves of the pulley for wear.

Check the wear sleeve on the accessory drive pulley for damage. Use the following procedure if the wear sleeve requires renewing. Refer to Procedure 009-005 in Section 9. ([/qs3/pubsys2/xml/en/procedures/28/28-009-005.html](http://qs3/pubsys2/xml/en/procedures/28/28-009-005.html))

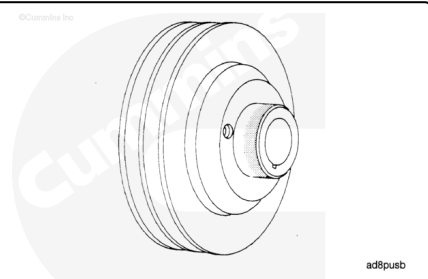


Check the bore of the pulley for damage.

Measure the inside diameter

### Accessory Drive Pulley Inside Diameter

| mm     |     | in     |
|--------|-----|--------|
| 34.912 | MIN | 1.3745 |
| 34.938 | MAX | 1.3755 |

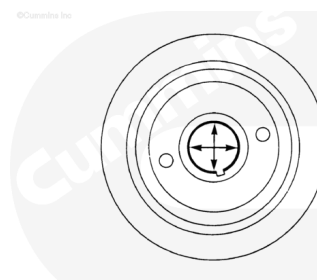


Check the bore of the pulley for damage.

Measure the inside diameter

### Alternator Drive Pulley Inside Diameter


| mm    |     | in    |
|-------|-----|-------|
| 35.00 | MIN | 1.378 |
| 35.03 | MAX | 1.379 |

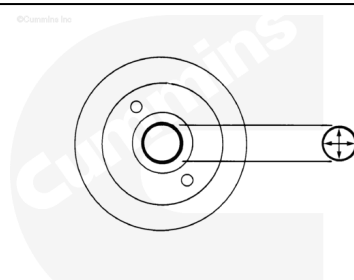

## Install

### ⚠ CAUTION ⚠


**Do not use a hammer to position the pulley. The thrust bearings in the accessory drive can be damaged, and the part can fail.**

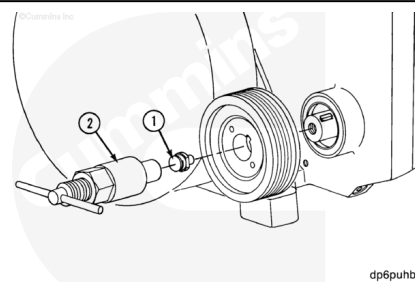

Use the pulley installation tool kit, Part Number 3376326.  
Install the appropriate adapter (1) in the pusher (2).

### ⚠ CAUTION ⚠

**Do not lubricate the seal or the wear sleeve on the pulley. The seal and sleeve must be clean and dry or the seal can leak.**

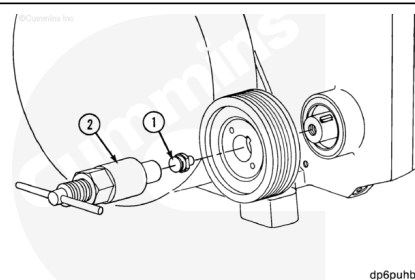

### ⚠ CAUTION ⚠

**The dust lip on the seal must not be folded under when the pulley is installed. To prevent the dust lip (yellow lip) from folding under, bend the lip out by running your finger around the lip 8 to 10 times, applying gentle pressure. Be sure there**

**is no oil on your hand. Avoid touching the seal lip (black lip).  
The dust lip will remain bent approximately 1 minute, then  
return slowly to the operating position.**

Use engine oil. Lubricate the outside diameter **only** of the shaft. Lubricate **only** the inside diameter of the bore in the pulley.

Position the pulley on the shaft. Align the keyway in the pulley with the key in the shaft.


Use the tool to push the pulley on the shaft until the sleeve on the tool touches the shaft. The pulley will then be even with the end of the shaft.

## POSE

### Press-On Shaft Excluder (POSE) Seal

#### **⚠ CAUTION ⚠**

**When installing a new POSE seal, the flat (closed) side of the seal MUST be TOWARD the pulley for correct installation.**

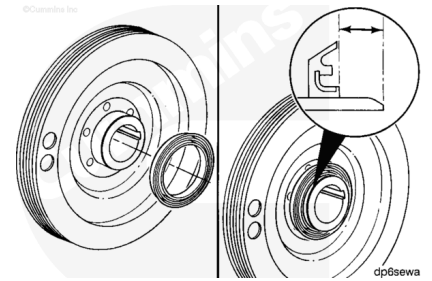

**Note : Do not use any kind of lubricant to install the POSE seal.**

Use your hand to push the POSE seal onto the wear sleeve.

Push the POSE seal onto the wear sleeve until the seal is approximately 9 mm [0.375 in] below the end of the wear sleeve.