


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.
- Remove the alternator belt. Refer to Procedure 013-005 in Section 9. (</qs3/pubsys2/xml/en/procedures/28/28-013-005-tr.html>)

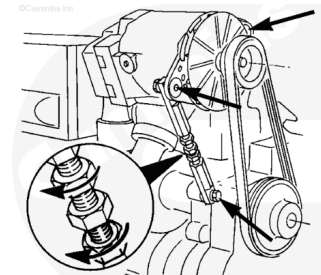

Remove

Using puller, Part Number ST-647, remove the pulley from the alternator drive pulley shaft.

Remove the puller.

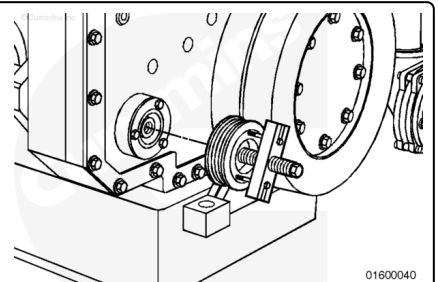

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the alternator drive and accessory drive pulley with steam or solvent .


Dry with compressed air.

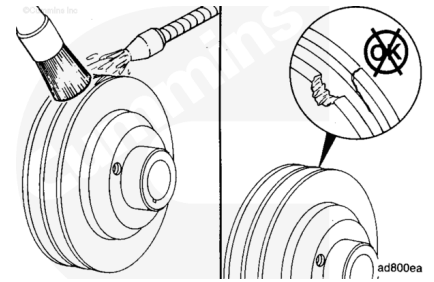


Inspect the pulley for nicks, cracks, excessive wear, or other damage in the belt grooves.

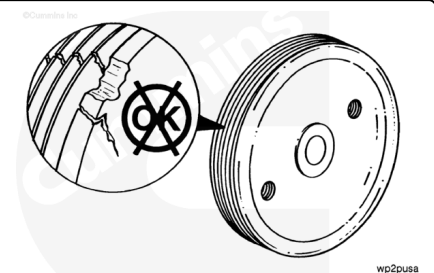

Inspect the mating surface and the bore of the pulley for damage.

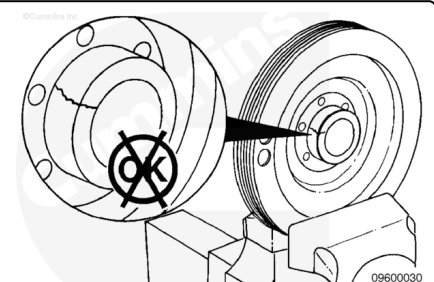

The illustration shows the rear of the pulley. Measure the inside diameter of the pulley.

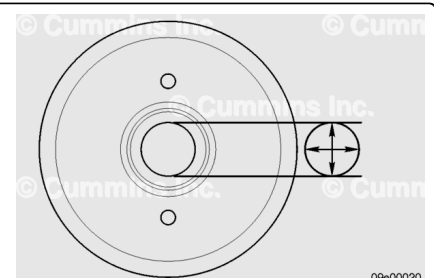


Alternator Drive Pulley Inside Diameter from the Rear Face

mm		in
34.997	MIN	1.3778
35.023	MAX	1.3789

Install

⚠ CAUTION ⚠

Do not use a hammer to drive the pulley into position. The thrust washers will be damaged.

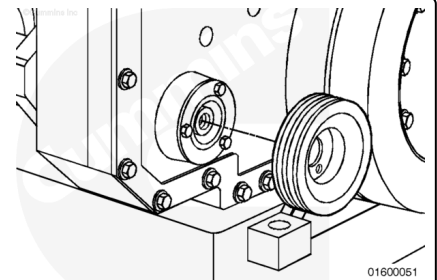

Use the pulley pusher kit, Part Number 3376085, and adapter, Part Number 5394249.

Install the correct adapter in the pusher.


Install the pulley on the shaft.

Remove the tool and adapter.

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

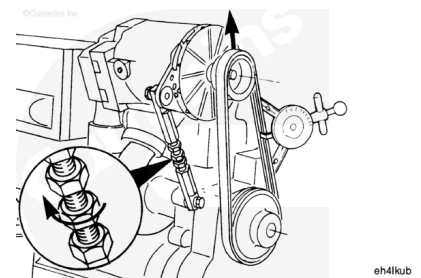

- Install and adjust the alternator belt. Refer to Procedure 013-005 in Section 9.
(/qs3/pubsys2/xml/en/procedures/28/28-013-005-tr.html)
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine. Check for proper operation.

Last Modified: 05-Feb-2019
