

Trainings ▾

Preparatory Steps


- Remove alternator belt. Refer to Procedure 013-005 (/qs3/pubsys2/xml/en/procedures/28/28-013-005-tr.html) in section 13.



Remove

Note : A capscrew fitted to the end of the shaft will prevent damage to the threads.


Install the capscrew (1). Use a puller (2), Part Number ST-647, or equivalent. Remove the pulley from the water pump drive shaft.

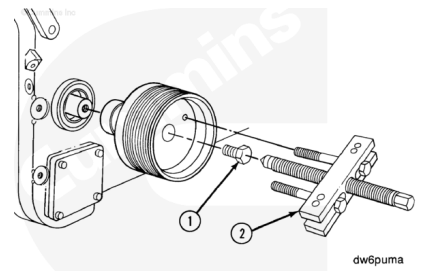

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the risk of personal injury.

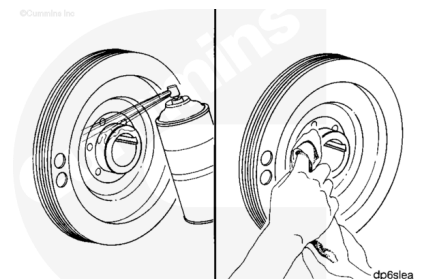

Use solvent and a clean cloth. Clean the pulley wear sleeve.

Check the grooves of the pulley for wear.


Check the wear sleeve on the accessory drive pulley for damage. If necessary, replace wear sleeve. Refer to Procedure 009-005 in Section 9.
(/qs3/pubsys2/xml/en/procedures/28/28-009-005-tr.html)

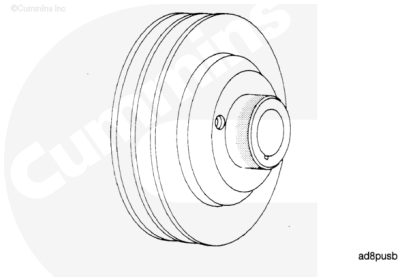

Check the bore of the pulley for damage.

Measure the inside diameter.


Accessory Drive Pulley Inside Diameter		
mm		in
34.912	MIN	1.3745
34.938	MAX	1.3755

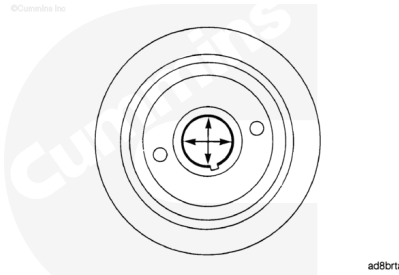

Check the bore of the pulley for damage.

Measure the inside diameter

Alternator Drive Pulley Inside Diameter		
n.m		in-lb
35.00	MIN	1.378
35.03	MAX	1.379

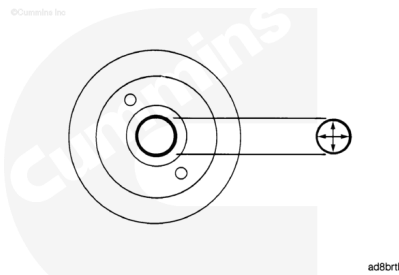


Install

⚠ CAUTION ⚠

Do not use a hammer to position the pulley. The thrust bearings in the water pump drive can be damaged and the water pump drive can fail.

Use the Pulley Installation Tool Kit, Part Number 3376326.
Install the appropriate adapter (1) in the pusher (2).

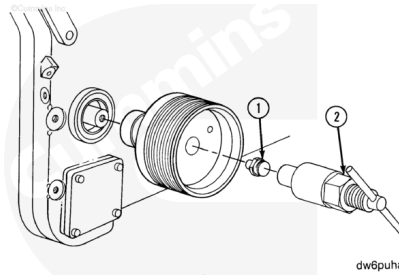


⚠ CAUTION ⚠

Do not lubricate the seal or the wear sleeve on the pulley. The seal and sleeve must be clean and dry or the seal can leak.

Use engine oil. Lubricate the outside diameter surface **only** of the shaft and the inside diameter of the bore in the pulley.

⚠ CAUTION ⚠

The dust lip on the seal must not be folded under when the pulley is installed. To prevent the dust lip (yellow lip) from folding under, bend the lip out by running your finger around it 8 to 10 times, applying gentle pressure. Be sure there is no oil on your hands. Avoid touching the sealing lip (black lip). The dust lip will remain bent approximately 1 minute, then return slowly to the operating position.

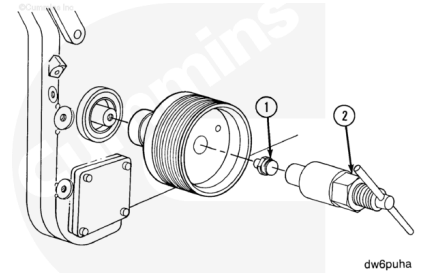

Position the pulley on the shaft. Use the tool to push the pulley on the shaft until the sleeve on the tool touches the shaft. The pulley will then be even with the end of the shaft.


Remove the tool and adapter.

POSE

Press-On Shaft Excluder (POSE) Seal

⚠ CAUTION ⚠

When installing a new POSE seal, the flat (closed) side of the seal must be toward the pulley for correct installation.

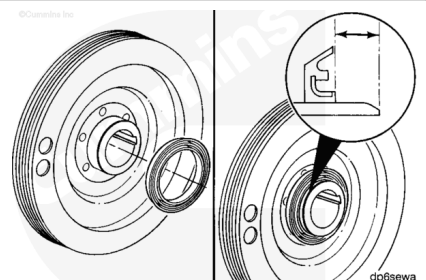


Note : Do not use any kind of lubricant to install the POSE seal.

Use your hand to push the POSE seal onto the wear sleeve.

Push the POSE seal onto the wear sleeve until the seal is approximately 9 mm [0.375 in] below the end of the wear sleeve.

Finishing Steps

- Install alternator belt. Refer to Procedure 013-005 in Section 13 (</qs3/pubsys2/xml/en/procedures/28/28-013-005-tr.html>).

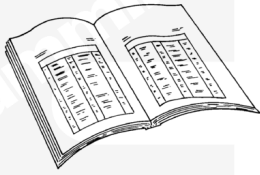

ck800wa