


Trainings ▾

Remove

Loosen eight socket headed capscrews.


Remove air compressor drive gear from left bank camshaft gear.

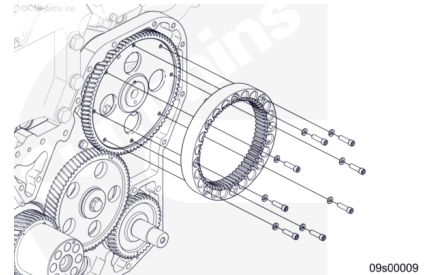

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

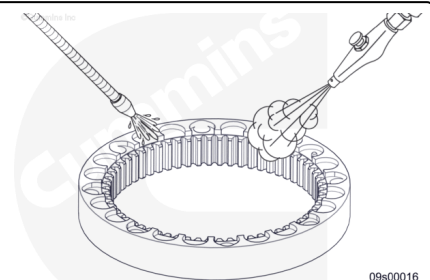

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Clean the air compressor drive gear with solvent or steam.

Dry with compressed air.

Check the air compressor drive gear for cracks, chipped, or broken teeth.


Check the dowel pin for damage.

The gear **must** be replaced if the teeth or dowel pin is damaged.

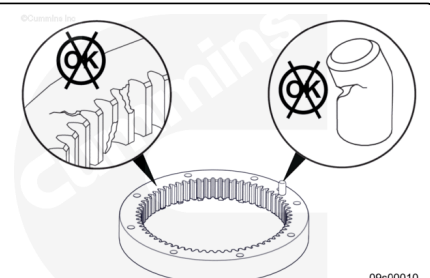


Install

Make sure rear dowel pin (1) is fitted in the air compressor drive gear

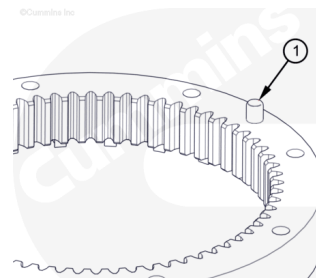

09s00011


Make sure front dowel pin in the air compressor drive gear is fitted flush to the front face of the camshaft gear within ± 0.1 mm [0.004 in] limit.

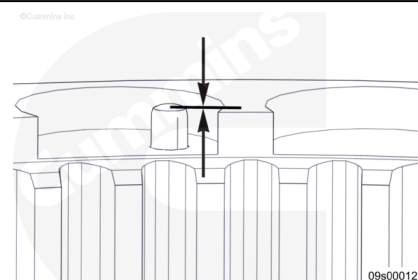

09s00012


Fit air compressor drive gear to left bank camshaft gear.

Make sure rear dowel pin (1) is located correctly into camshaft gear.

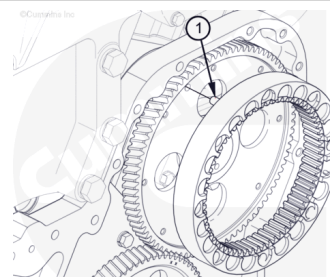

09s00013


Secure air compressor drive gear with socket headed capscrews and lock washers.

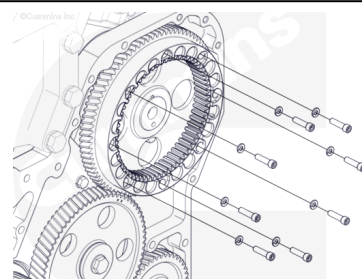

09s00014

Tighten capscrews in the specified sequence.

Torque Value: 26 n•m [230 in-lb]

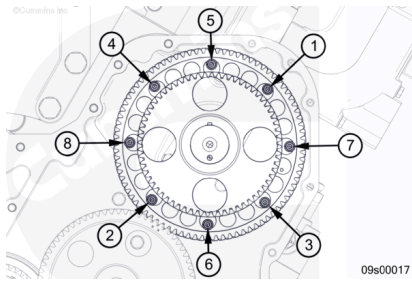

Note : Make sure gears are marked with white paint to indicate correct timing location and tooth sit position.

