


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

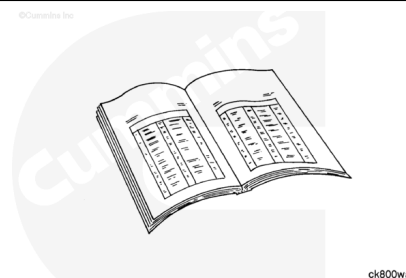


- Disconnect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Remove the intake and exhaust piping from the turbocharger.

Measure

Check the radial clearance of **both** compressor impeller and turbine wheel.

Use your hand to push the compressor impeller or turbine wheel toward the housing.

Use a wire type feeler gauge or feeler gauge that is not more than 13 mm [1/2 inch] wide. Measure the clearance between the impeller and the housing at the **minimum** clearance point.

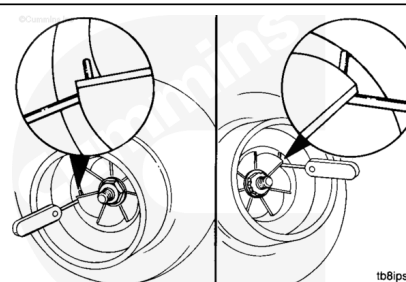

mm		in
0.08	MIN	0.003
0.18	MAX	0.007

If the radial bearing clearance is **not** within specification, the turbocharger **must** be replaced. See Bulletin Number 3379091, Turbocharger Component Shop Manual, for rebuild instructions.

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the intake and exhaust piping to the turbocharger.
- Connect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13.
(</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)

