

Trainings ▾

Preparatory Steps


- Loosen the alternator adjusting link. Refer to Procedure 013-022 in Section 13.
(</qs3/pubsys2/xml/en/procedures/28/28-013-022-tr.html>)



Remove


Manually Adjusted Alternator Belt:

Remove the alternator drive belt.

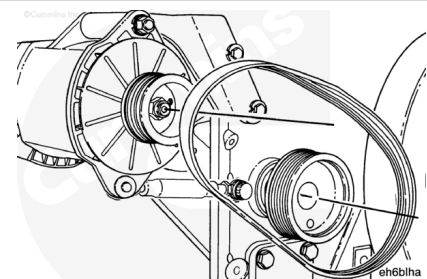

Automatic Belt Tensioner:


Remove the capscrew and remove alternator belt tensioner.

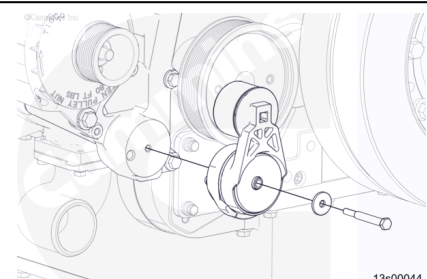

Inspect for Reuse

Check the belt for wear or other damage.


If the belt indicates any wear or other damage, it **must** be replaced.

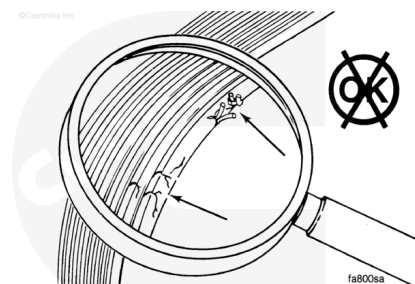

Install


Manually Adjusted Alternator Belt:

Install the alternator belt.

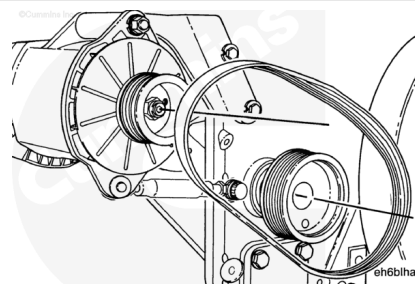


Automatic Belt Tensioner:

Install the capscrew and flat washer in the alternator belt tensioner.

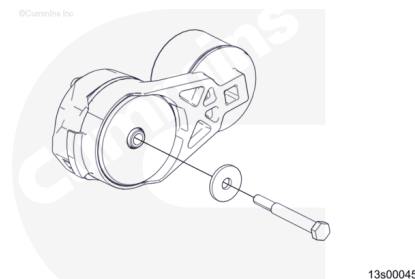

Align the alternator mounting bracket boss and the alternator belt tensions.

Torque Value: 47 n•m [34.7 ft-lb]

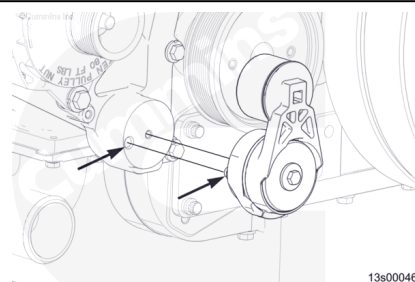

Finishing Steps

- Adjust the alternator adjusting link. Refer to Procedure 013-022 in Section 13.

(/qs3/pubsys2/xml/en/procedures/28/28-013-022-tr.html)

- Start the engine and check for proper operation.
- Adjust the alternator adjusting link. Refer to Procedure 013-022 in Section 13.

(/qs3/pubsys2/xml/en/procedures/28/28-013-022-tr-gc.html)

- Start the engine. Check for proper operation.

