

Trainings ▾

Cylinder Block


Tool Number

ST-1134

Dowel Pin Puller

Used to remove crosshead guides and dowel pins throughout the engine. The kit contains various size collets.

©Cummins Inc

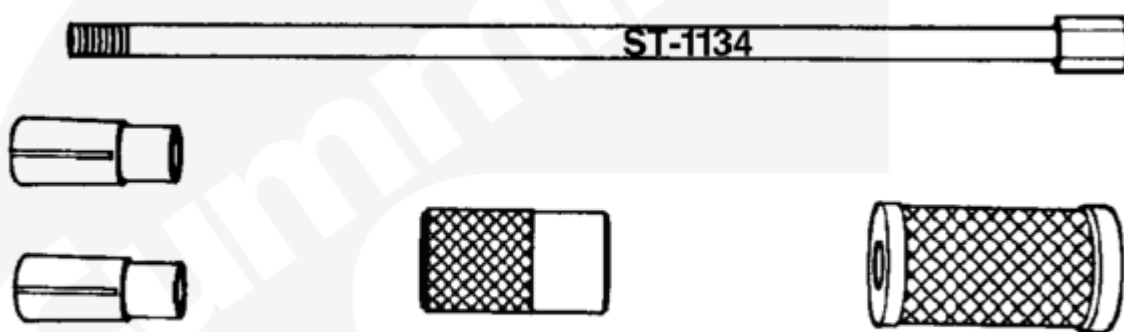


ST-1134

Tool Number

3163720

Dowel Pin Extractor


Used to remove dowel pins and crosshead guides.

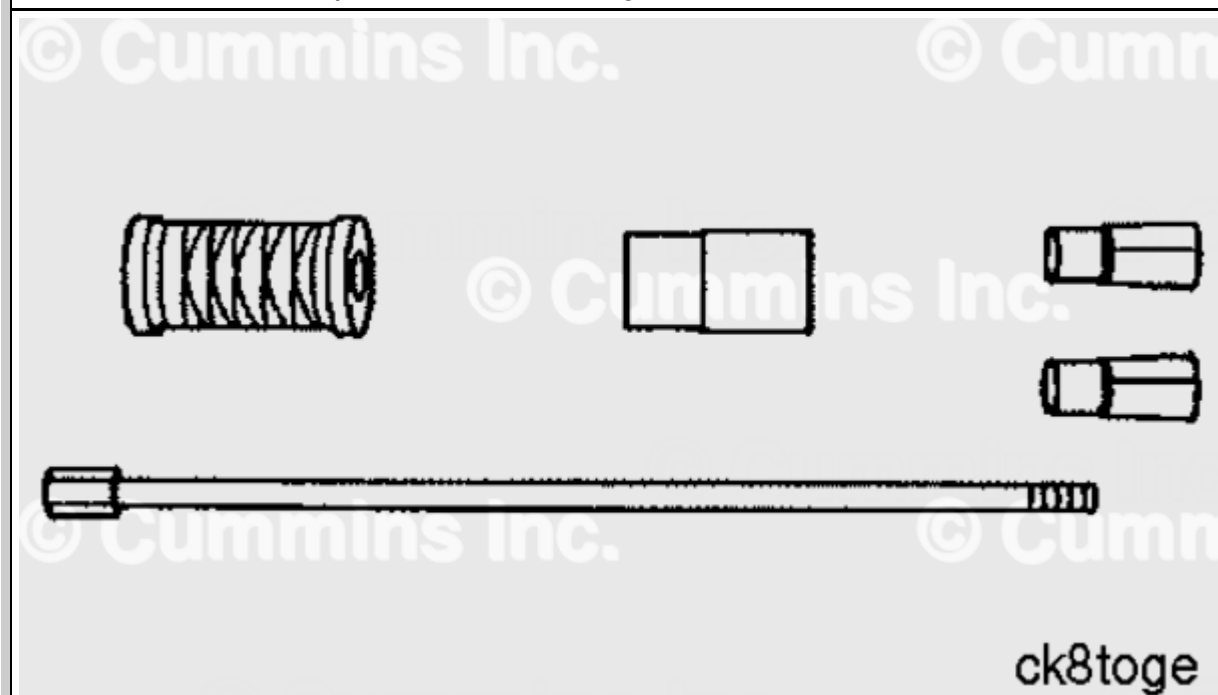**Tool Number**

3375066

Thread sealant

Used to lock and seal threaded fluid fittings. 1.69 ounce tube.

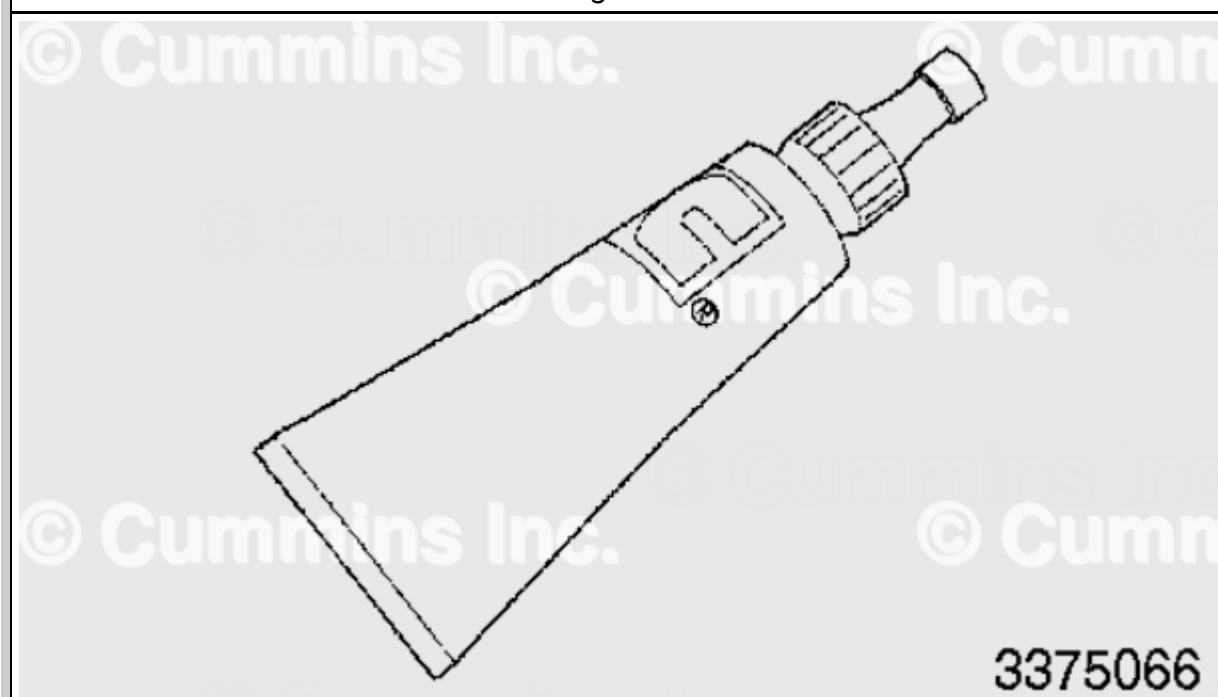

Tool Number

3375068

Threadlocker - Blue

50 ml oz. bottle. All purpose medium strength thread locker.




Tool Number

3823818

Main Bearing Remover

Used to remove and install upper main bearing shells.

©Cummins Inc

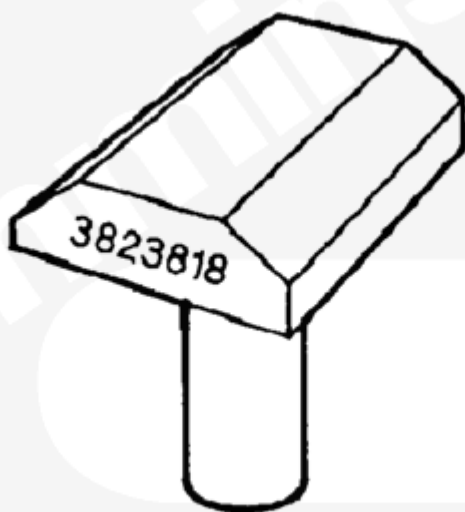

3823818


Tool Number

3375784

Light Duty Puller Set

A small, light duty puller set that has many uses. This includes removing small seals, sleeves, bearings, grease retainers, bearing races, and bushings as small as 3/4 inch inside diameter.

©Cummins Inc

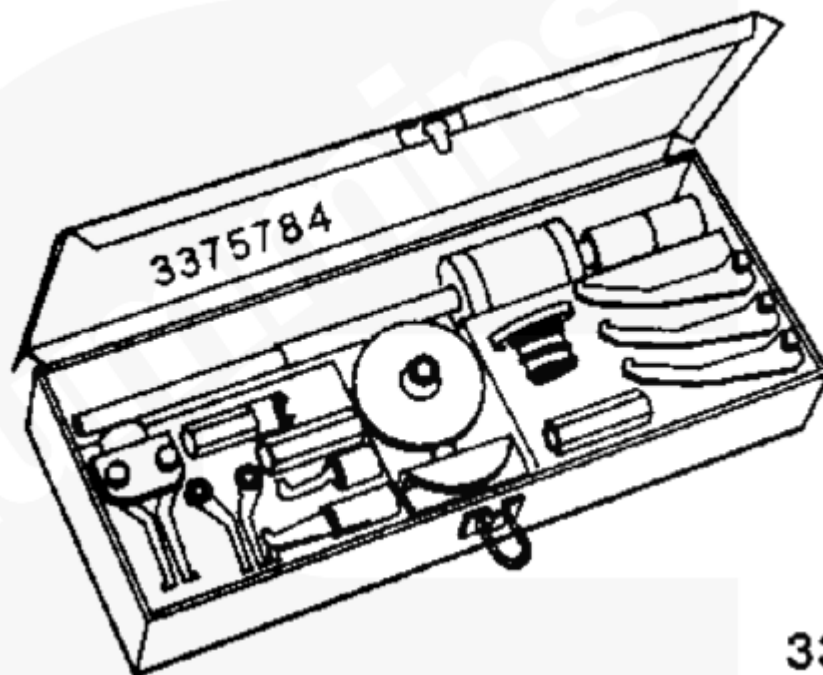**3375784**


Tool Number

3376795

Universal Handle

Used to fit various size cup plug driver heads.

©Cummins Inc

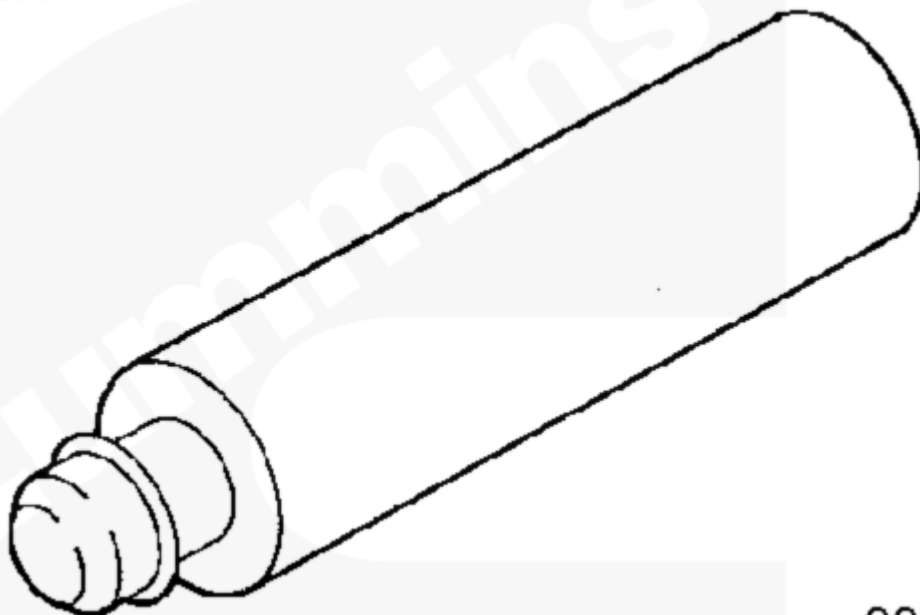

3376795


Tool Number

3164085

Universal Handle

Used to fit various sized cup plug driver heads.

©Cummins Inc

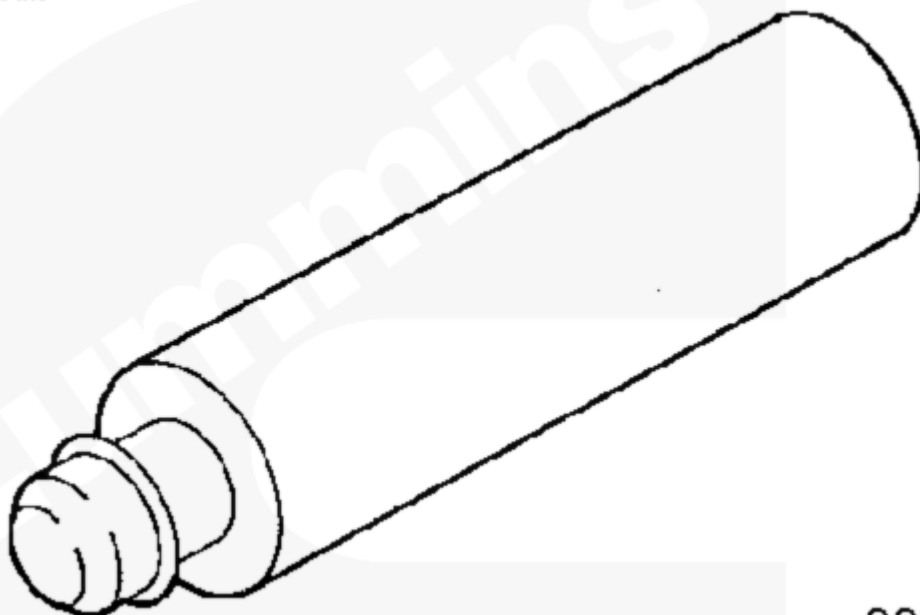

3376795


Tool Number

3376812

Cup Plug Driver Head

1-1/8 inch nominal. Universal handle, Part Number 3376795, is required to use this item.

©Cummins Inc

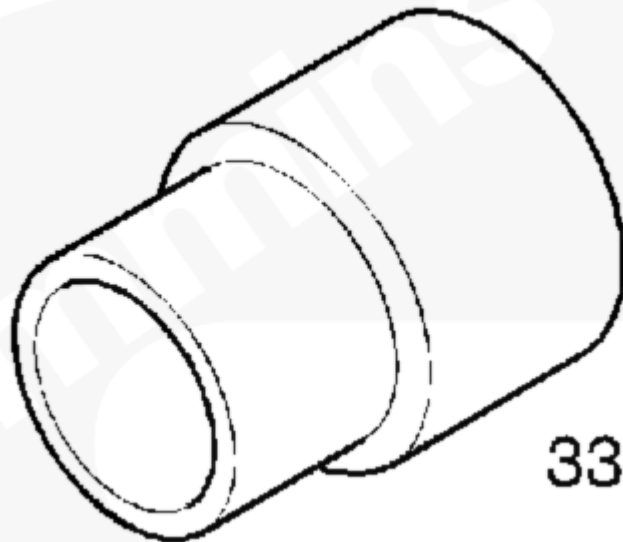
**3376812****Tool Number**

3375432


Crack Detection Kit

Contains non-magnetic crack detection test kit to detect cracks in engine components.

©Cummins Inc

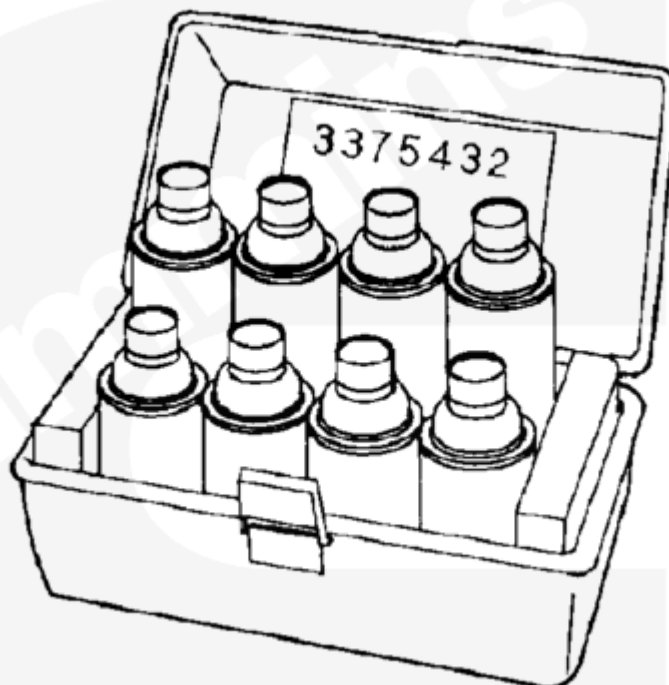**3375432**

Tool Number
3375061
Main Bearing Bore Bar
Boring/alignment bar used with centering rings.

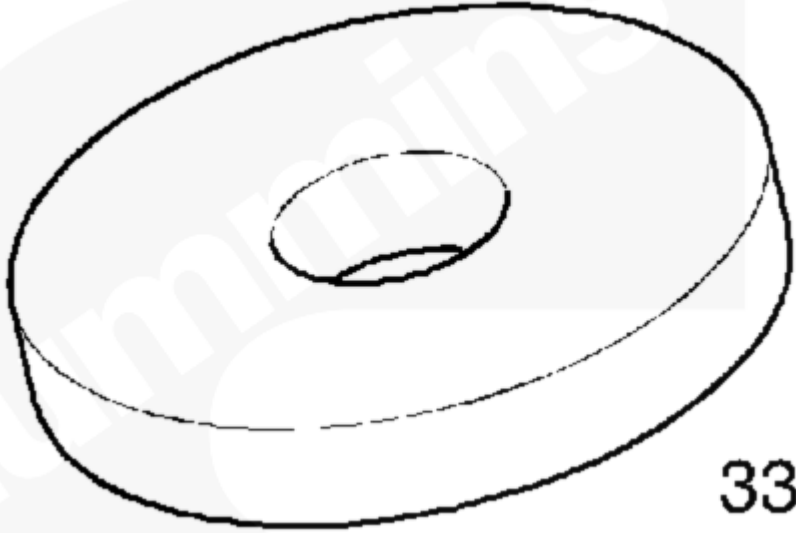
Tool Number
3375063
Centering Ring [6.8465 inch]
Used with bore bar, Part Number 3375061.


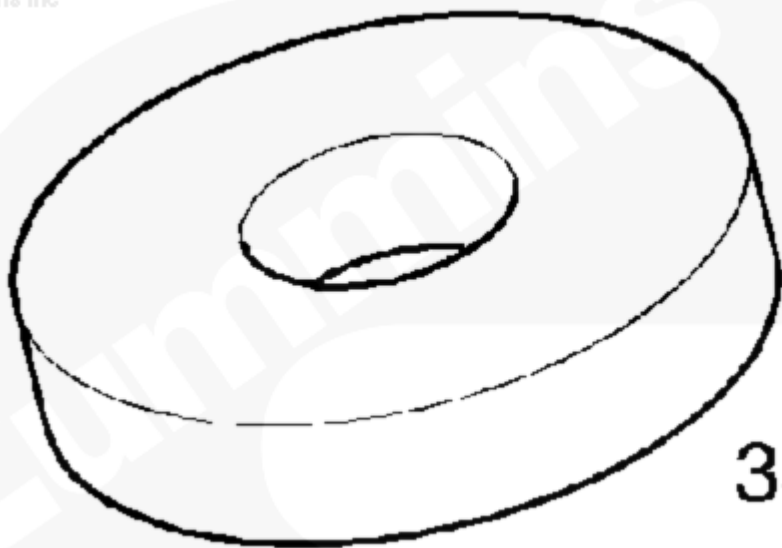
Tool Number

3375064

Centering Ring [6.8430 inch]

Used with bore bar, Part Number 3375061.

©Cummins Inc



3375064


Tool Number

3823647

Cam Bushing Installation/Removal Kit

Contains thin/thick wall driver, centering guides, and receiver spacer.

©Cummins Inc

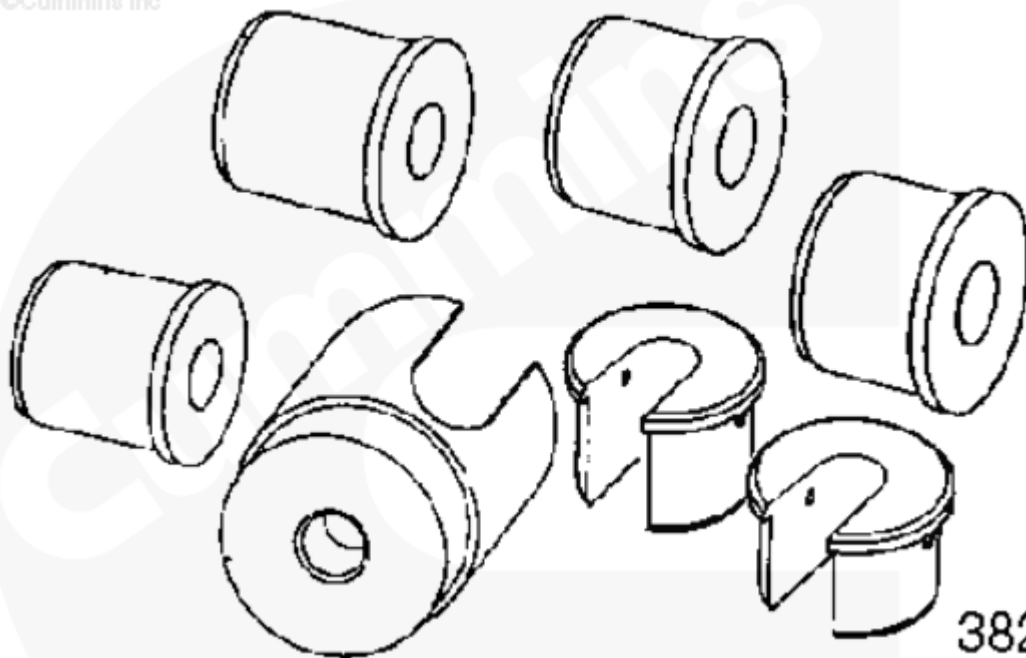

3824842


Tool Number

3823653

Cam Bushing Centering Guide Kit

Contains centering guides with and without bushings and cam bushing shaft.

©Cummins Inc

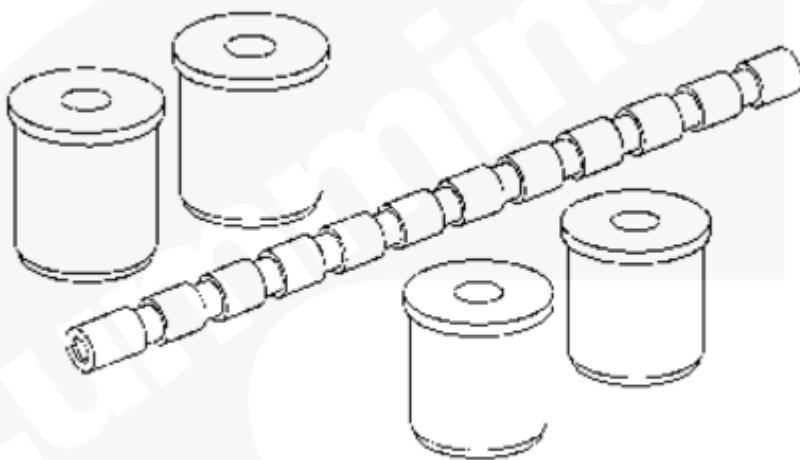

3823653


Tool Number

3823621

Hydraulic Actuator Kit

Contains hydraulic ram which provides the force necessary to install or remove the cam bushings.

©Cummins Inc

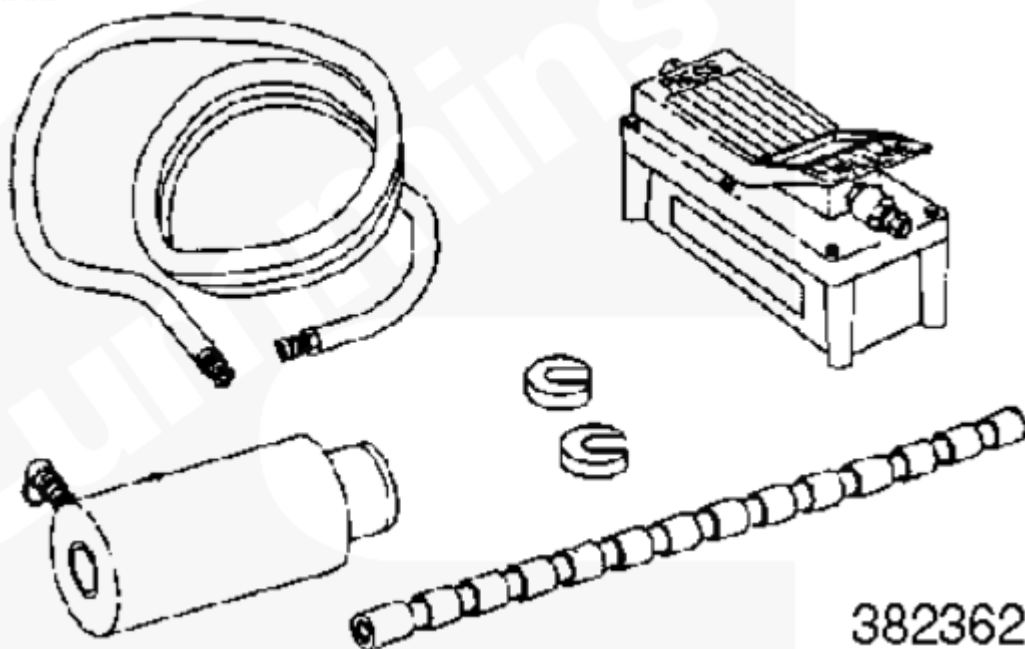

3823621


Tool Number

3376634

Cam Bushing Driver Set

Used to remove and/or install cam bushings in the cylinder block.

©Cummins Inc

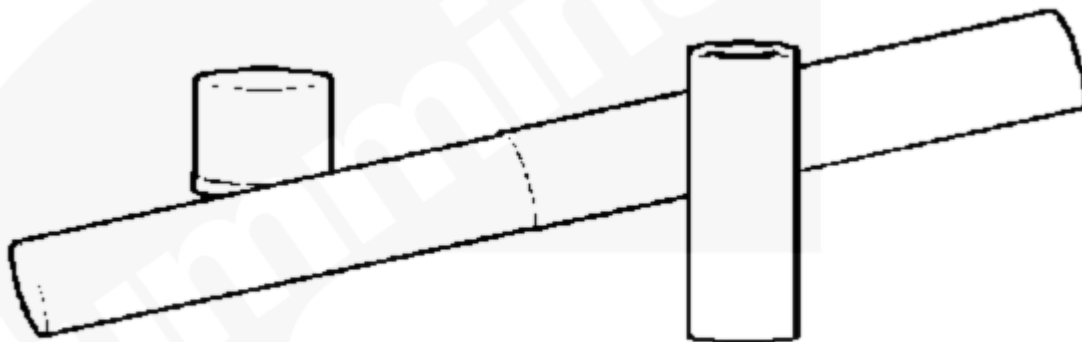

3376634


Tool Number

3375980

Cutter Plate

Used to resurface cylinder liner counterbore ledges of the cylinder block. Use with drive unit, Part Number 3376685.

©Cummins Inc

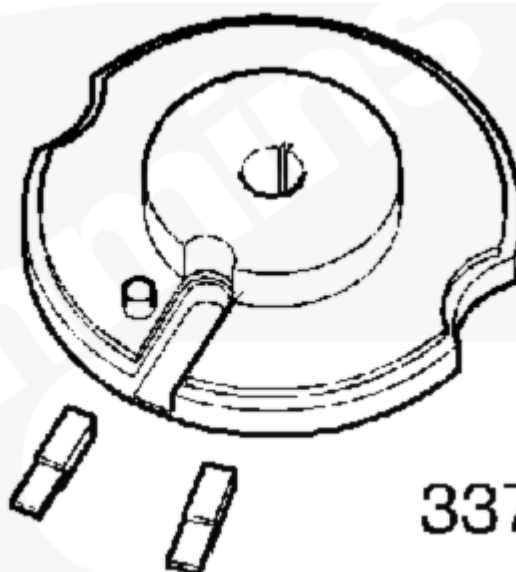

3375980


Tool Number

3376685

Drive Unit

Used to resurface cylinder liner counterbore ledges of the cylinder block. Use with adaptor plate, Part Number 3376687.

©Cummins Inc

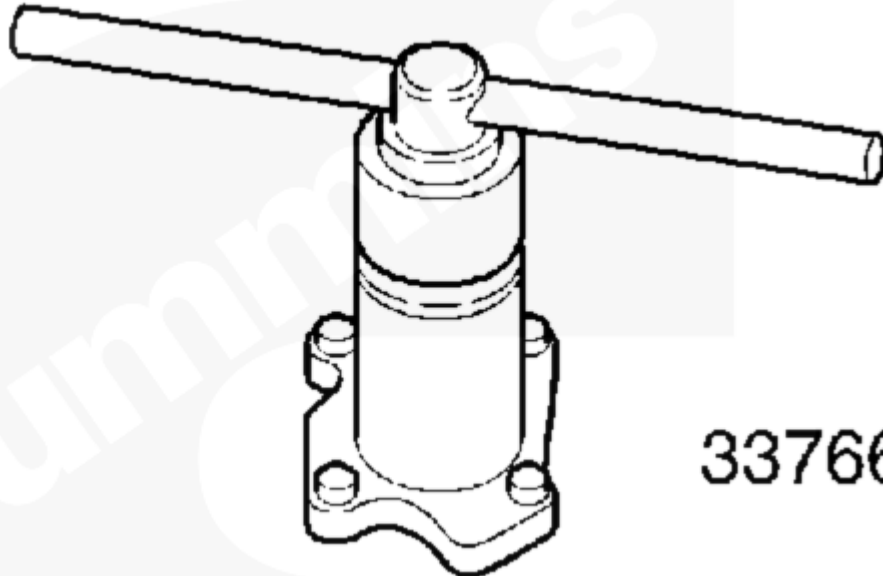

3376685


Tool Number

3376687

Adapter Plate

Used to resurface cylinder liner counterbore ledges of the cylinder block. Use with drive unit, Part Number 3376685.

©Cummins Inc

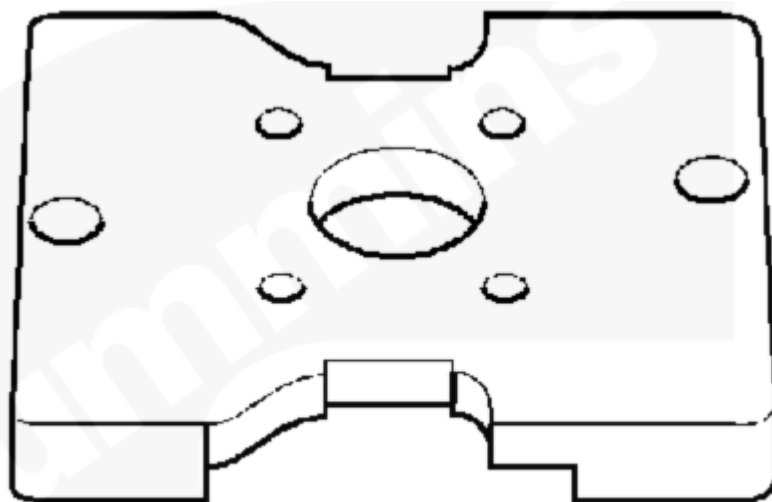

3376687


Tool Number

3377352

Base Plate and Micrometer Block Assembly

Comprised of micrometer block, base plate, setting standard, and stud adaptor.

©Cummins Inc

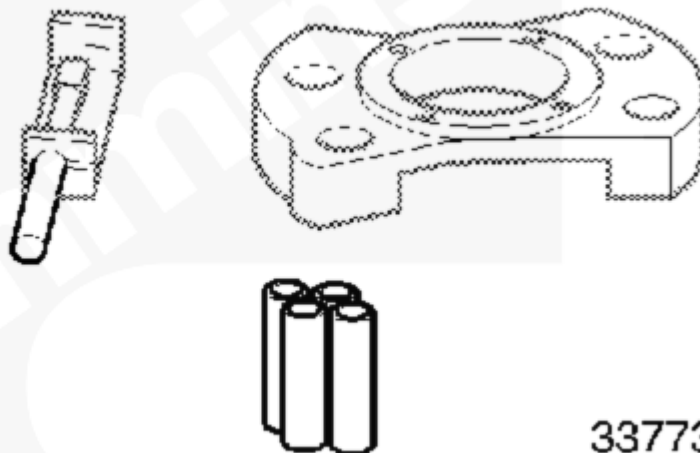

3377352


Tool Number

3823352

Counterbore Drive Unit

Comprised of universal drive, bushing driver handle, long and short bushing driver shaft, retaining compound, and Primer T™.

©Cummins Inc

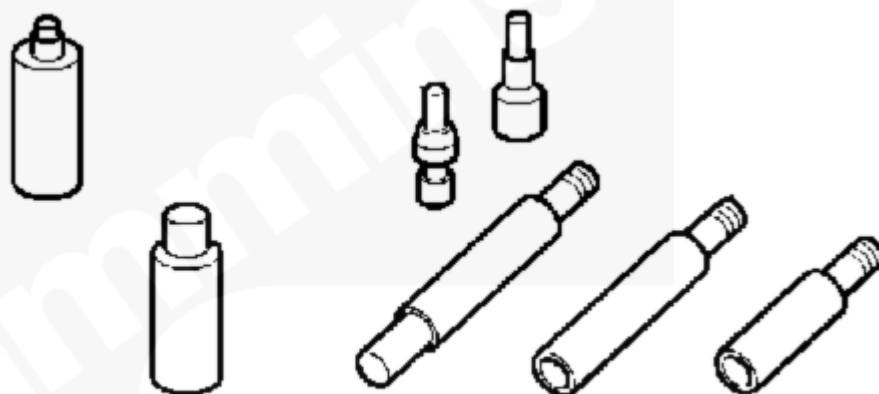

3823352


Tool Number

3377355

Cutter/Plate/Driver Assembly

Comprised of cutter assemblies, depth spacer blocks, and a cutter plate assembly.

©Cummins Inc

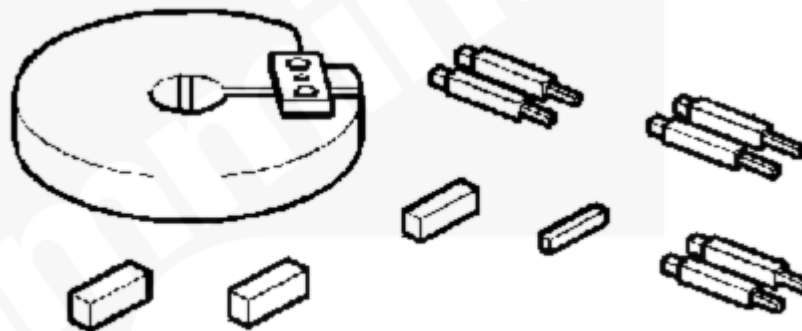

3377355


Tool Number

3376622

Driver/Plate Assembly

Comprised of cutter assembly, bushing and sleeve driver, guide plate, cutter holder plate, and cutter plate assembly with cutter key.

©Cummins Inc

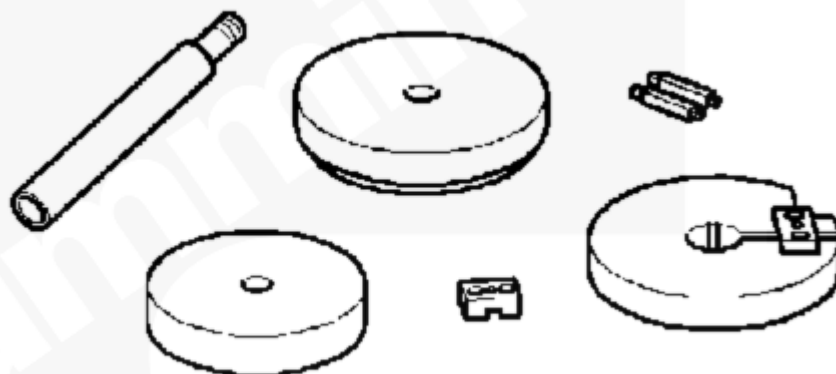

3376622


Tool Number

3375820

Cylinder Liner Counterbore Kit

Used to adapt older model counterbore tools, so that the tool will cut counterbores on cylinder blocks for oversize liners or repair sleeves.

©Cummins Inc

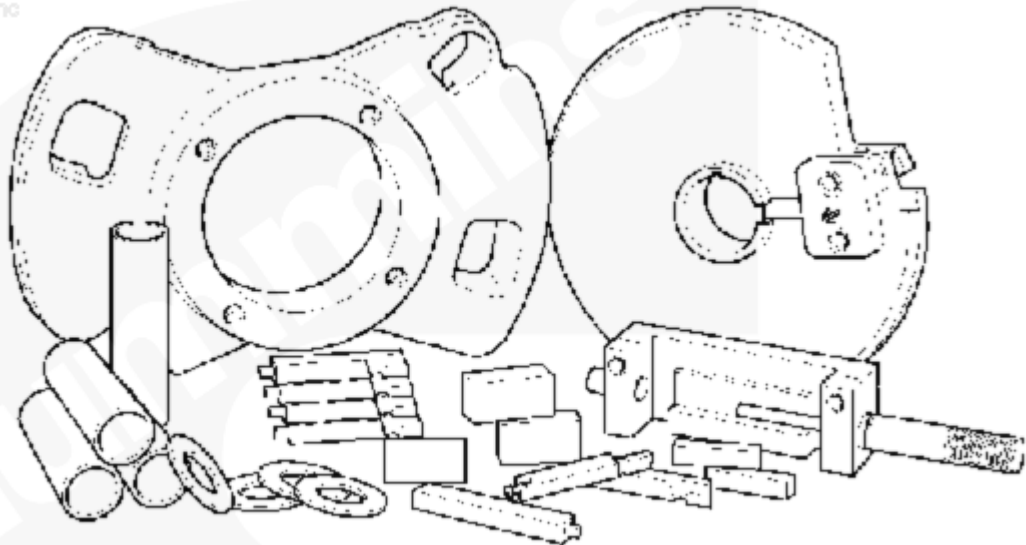

3375820


Tool Number

ST-1252

Cylinder Block Concentricity Gauge

Used to check alignment concentricity between cylinder liner upper counterbore and the lower packing ring bore.

©Cummins Inc

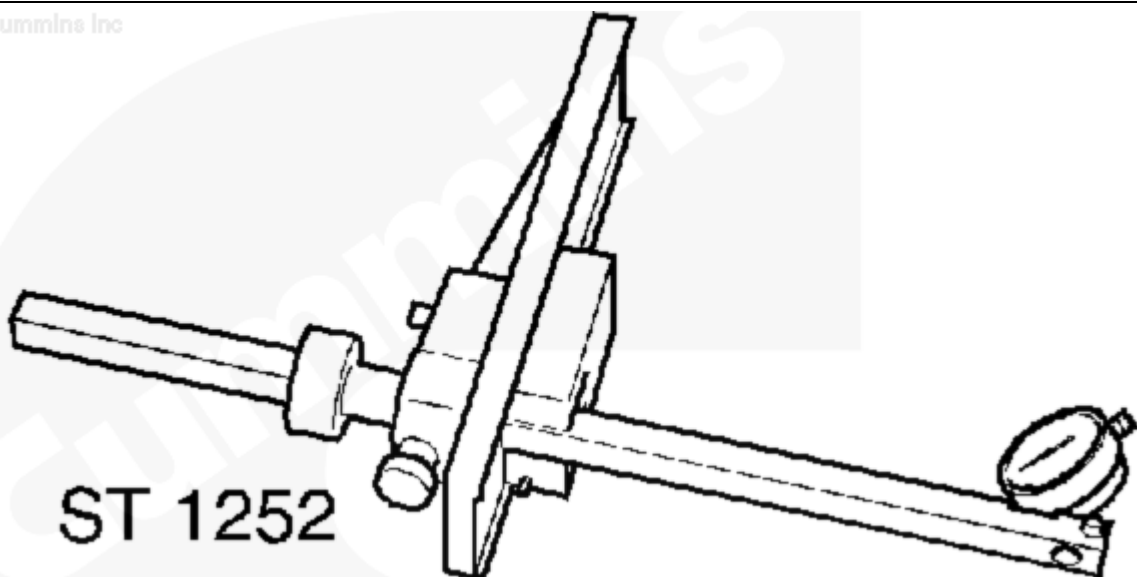


Tool Number

3163745

Liner Remover

Used with liner remover plate, Part Number 3162886, to remove the cylinder liner from the engine.

©Cummins Inc

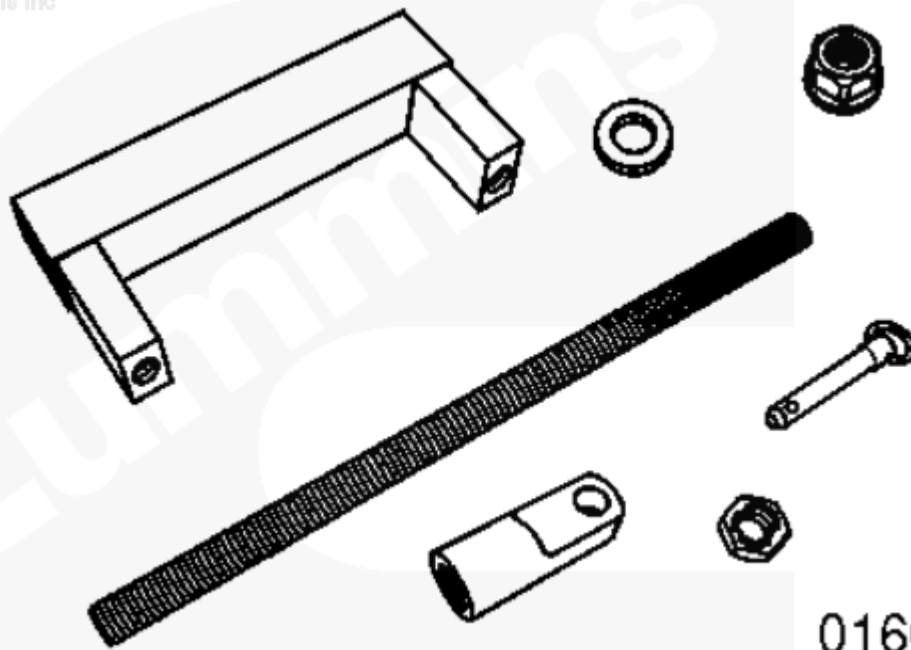

01600269


Tool Number

3375834

Gear Puller Assembly

Used to pull the crankshaft gear without heating the gear and without damage to the gear. Use with gear puller jaw, Part Number 3375835.

©Cummins Inc

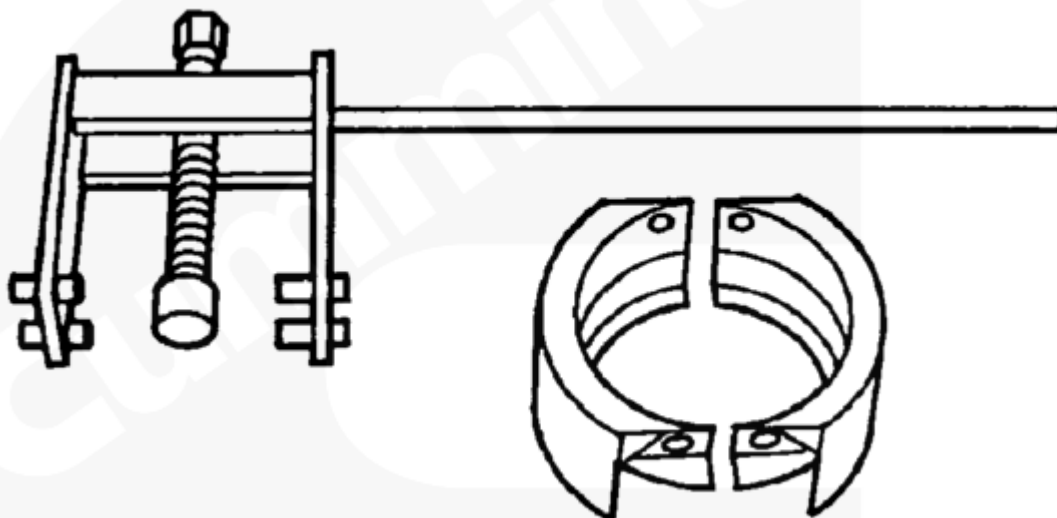

ks8togd


Tool Number

3165049

Gear Puller Assembly

Used to pull the crankshaft gear without heating the gear and without damage to the gear. Use with gear puller jaw, Part Number 3375835.

©Cummins Inc

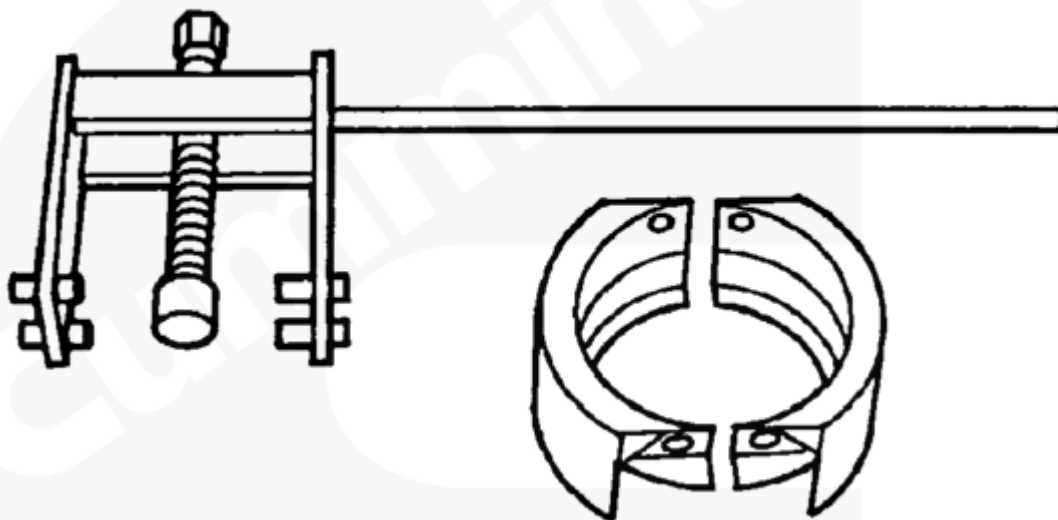

ks8togd


Tool Number

3375835

Gear Puller Jaw

Used with gear puller assembly, Part Number 3375834.

©Cummins Inc

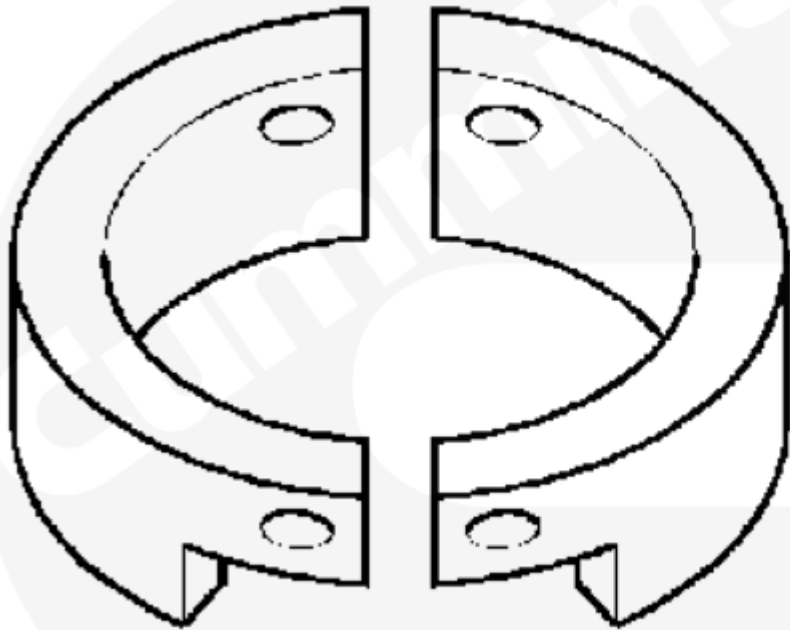**3375835**


Tool Number

ST-561

Connecting Rod Checking Fixture

Used to check the connecting rod length, bend, and twist.

©Cummins Inc

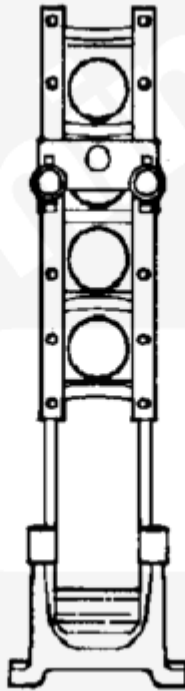**ST-561**


Tool Number

ST-1305-2

Mandrel, Piston Pin End Without Bushing

Fits in piston pin bore.

©Cummins Inc

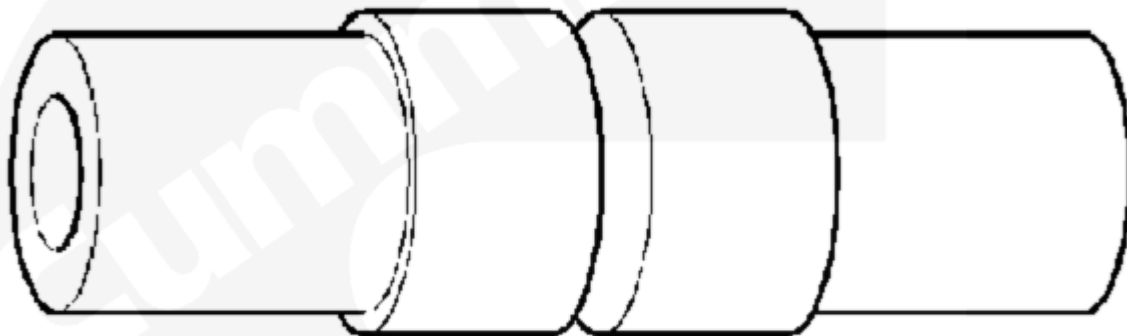

ST 1305-2


Tool Number

ST-1305-3

Mandrel, Piston Pin End With Bushing

Fits in piston pin bore.

©Cummins Inc

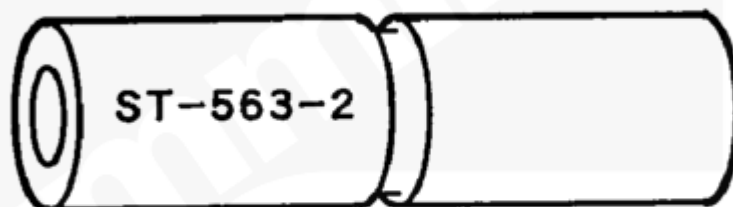

cx8togj

Tool Number

ST-1331

Mandrel, Crank Pin End

Large expanding mandrel fits in the crankpin bore.

©Cummins Inc

**ST 1331**


Tool Number

ST-560

Piston Ring Groove Wear Gauge

Used to gauge the wear on piston rings.

©Cummins Inc

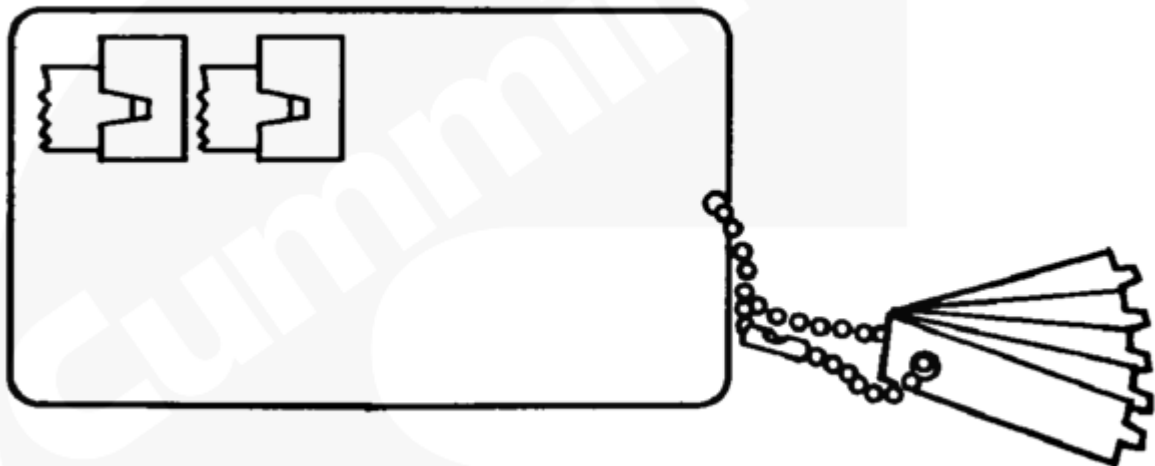

pi8togg


Tool Number

ST-1269

Piston Ring Expander

Designed to install piston rings on the piston without damage to the piston or piston rings.

©Cummins Inc

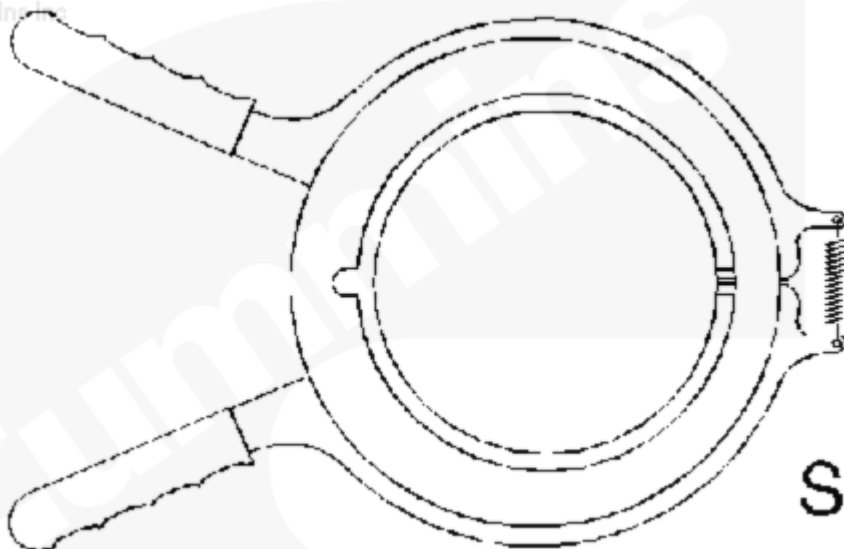

ST 1269


Tool Number

3375342

Piston Ring Compressor

Used to install the pistons, with rings installed, into the cylinder.

©Cummins Inc

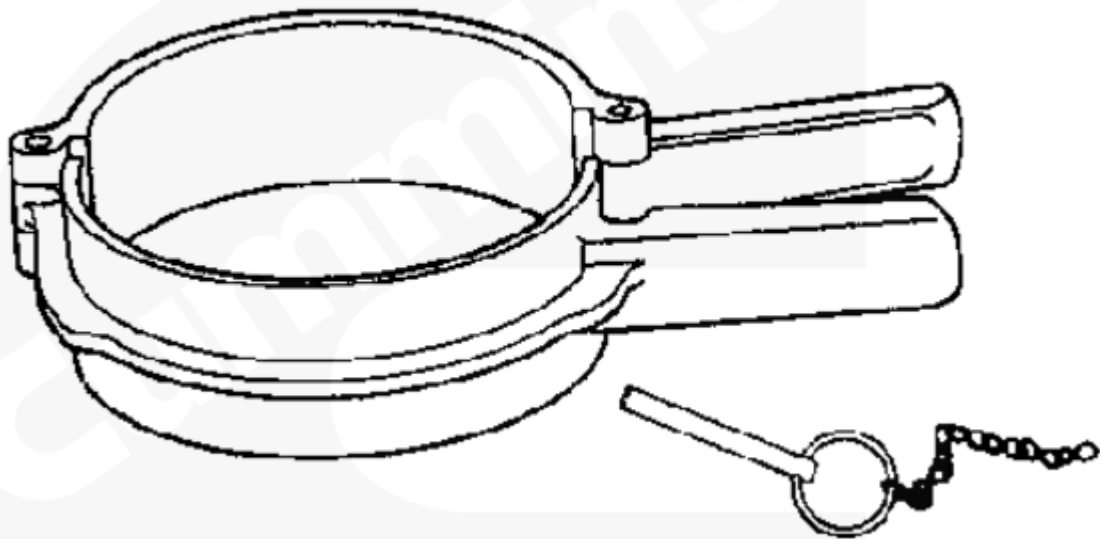

01600270


Tool Number

ST-598

Bushing Mandrel

Designed to install and/or remove the precision bushings in gear cover accessory drive bores.

©Cummins Inc

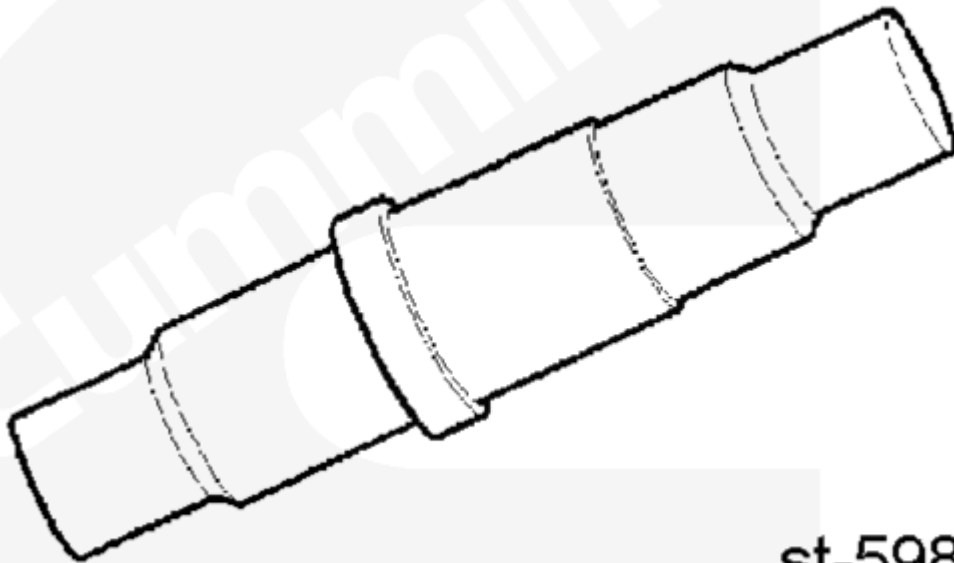

st-598


Tool Number

3823495

Depth Gauge Assembly

Used to measure liner protrusion and cylinder block counterbore depths.

©Cummins Inc

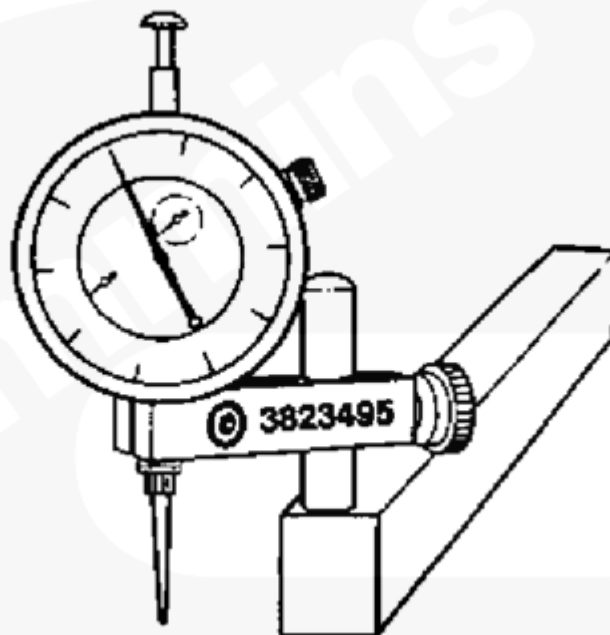
**3823495****Tool Number**

3164438

Depth Gauge Assembly

Used to measure liner protrusion and cylinder block counterbore depths.

©Cummins Inc

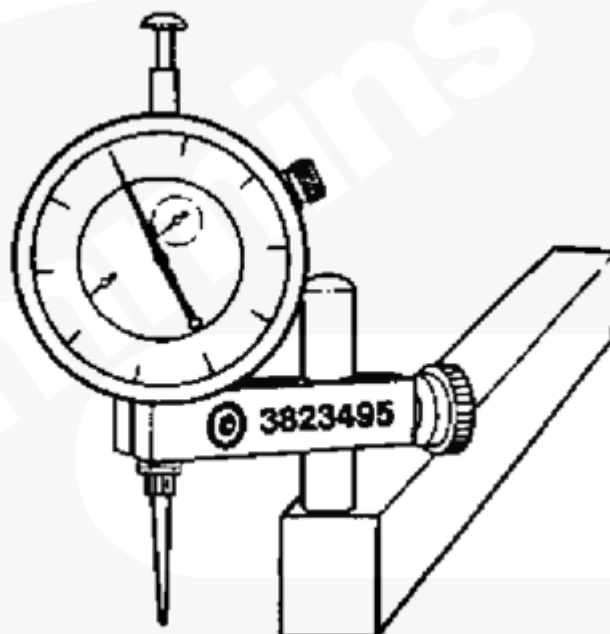**3823495**


Tool Number

ST-647

Puller

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

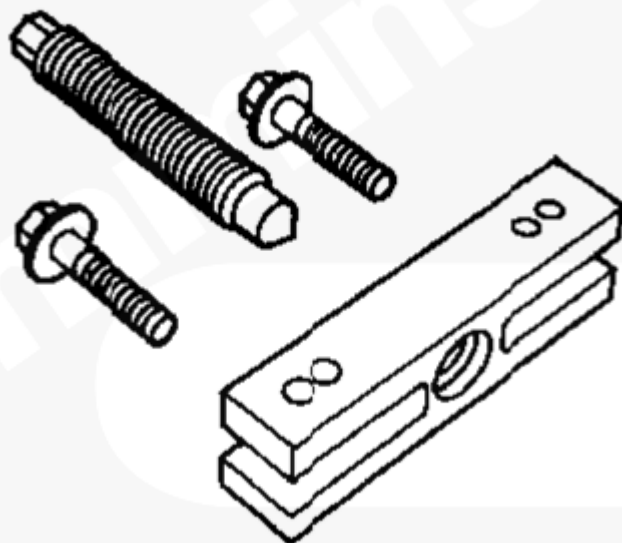

ad8toga


Tool Number

3163196

Torque Wrench Adapter

Used to hold the rocker lever or crosshead adjusting screw while tightening the locknut.

©Cummins Inc

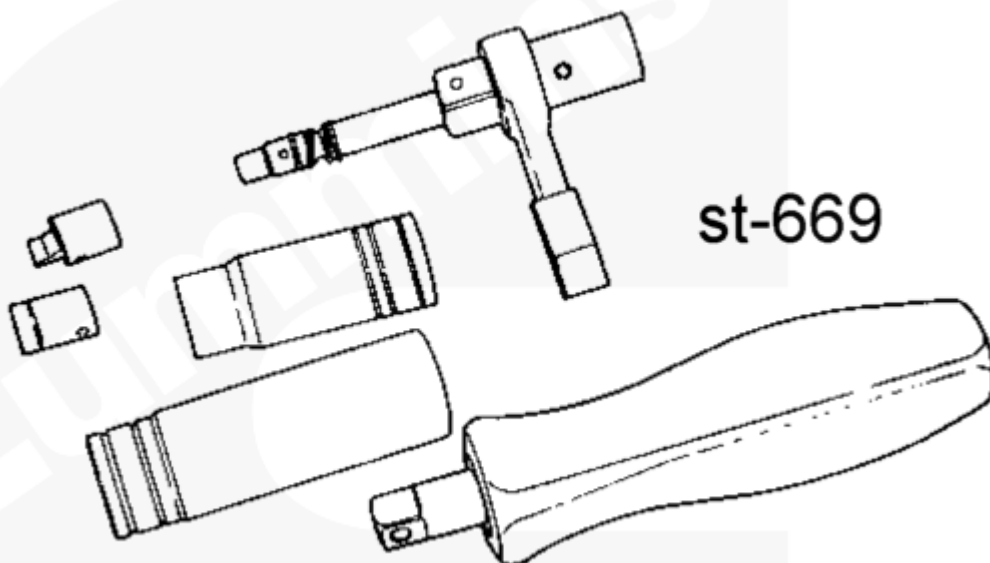


st-669

Tool Number

ST-1012

Hydrostatic Tester

Used to check for coolant leaks in the cylinder head. Requires shop air, a lifting hoist, a water tank, and the appropriate test adapter plate and o-ring.

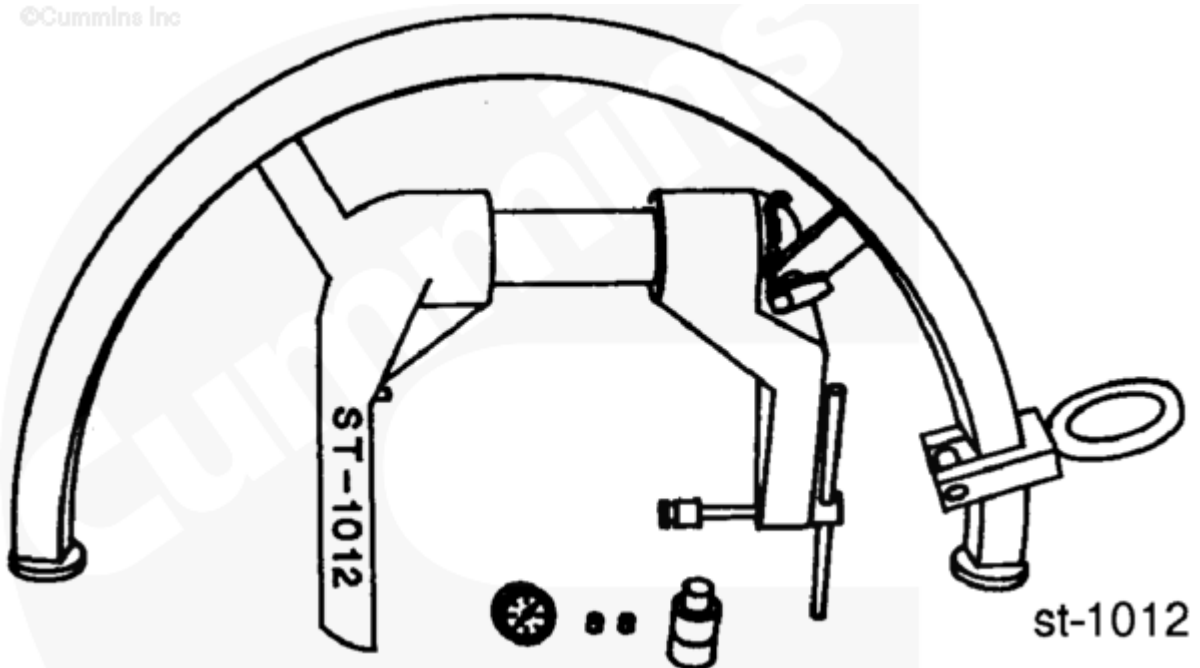



Tool Number

ST-1232

Drill Ream Fixture

Used to machine dowel hole to install oversize dowels in cylinder blocks and flywheel housings. Requires the use of a drill, reamer, and the appropriate drill/ream bushing set.

©Cummins Inc

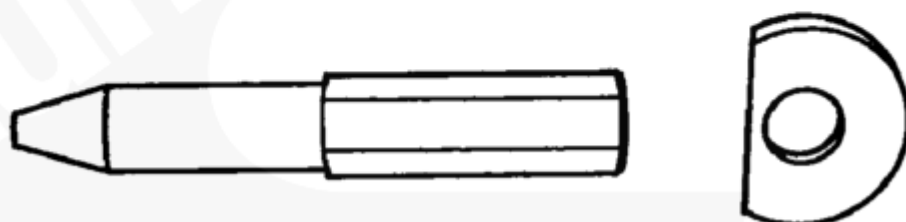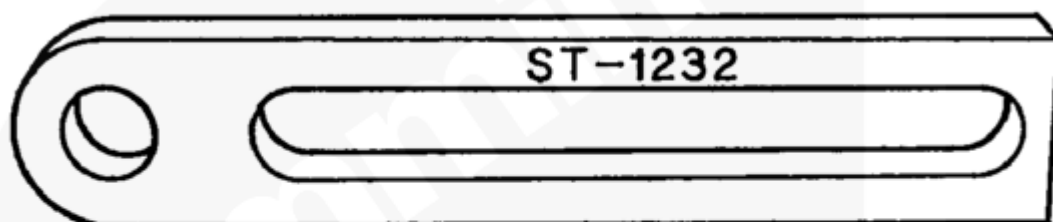


st-1232

Tool Number

5298874

Oil Seal Remover/Installer

Used to remove small bushings, oil seals, and bearings.

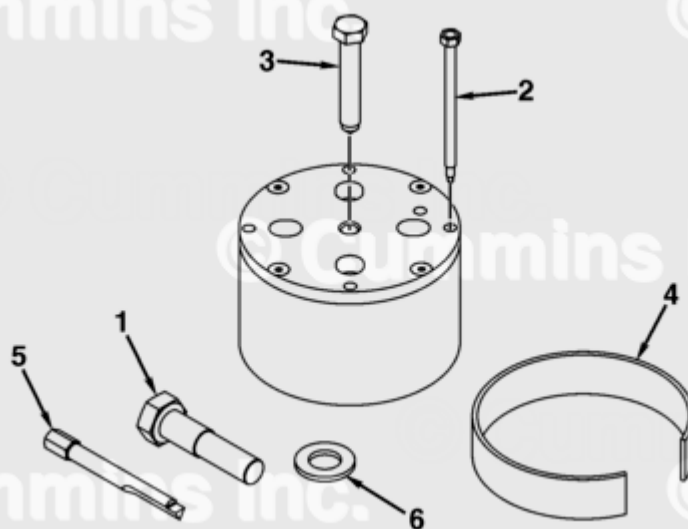


22s00008

Tool Number

5298874

Crankshaft Seal Replacer Kit

Used to replace the engine crankshaft front oil seal and wear sleeve.

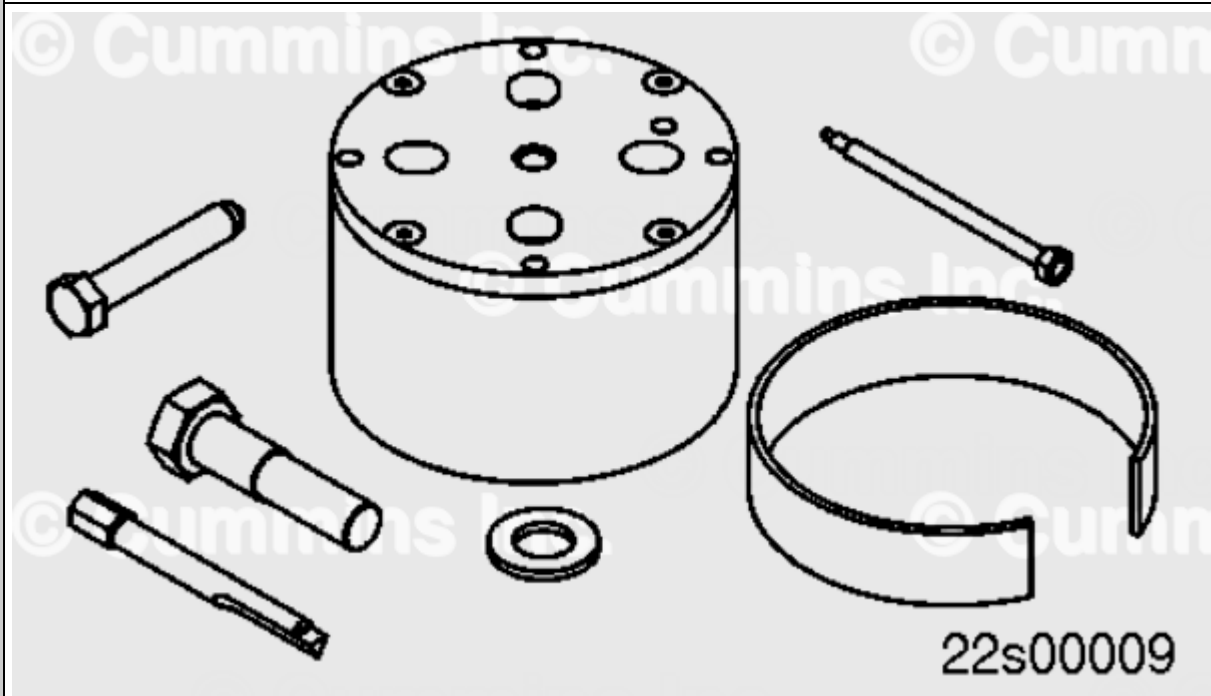


Tool Number

3824424

Crankshaft Seal Replacer Kit

Used to install the new thick wall (1.57 mm [0.062 in]) wear sleeve and oil seal assembly on the rear of the crankshaft. The kit installs wet or dry seal assemblies to the proper depth.

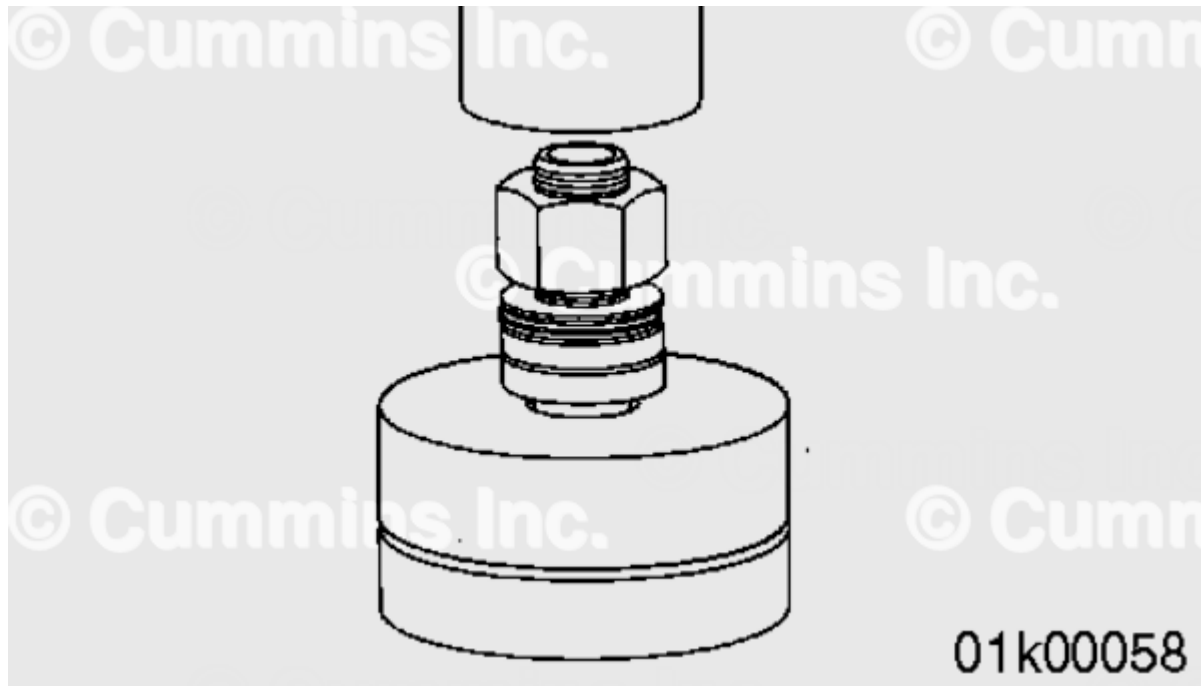


Tool Number

3375070

Water Test Adapter Plate

Used to check for coolant leaks in the cylinder head. Used with Part Number ST-1012 Hydrostatic Tester. Use with Part Number 3375071 Water Test Plate O-rings.

©Cummins Inc

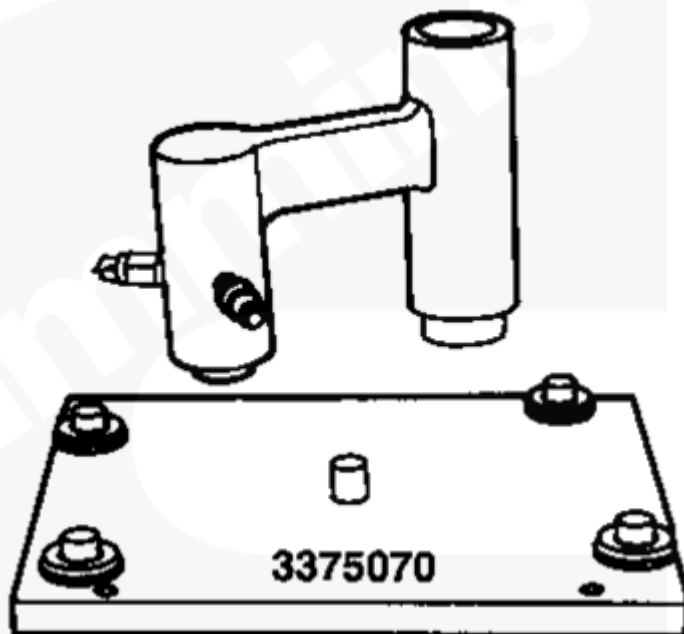


Tool Number

3375098

Connecting Rod Guide Pins

Special nylon pins used to protect the crankshaft journal by guiding the connecting rod during installation or removal.

©Cummins Inc

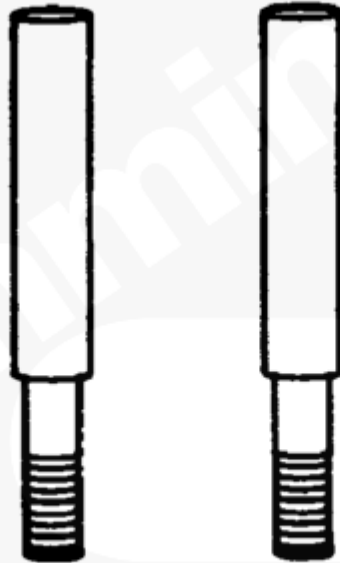


cx8togg

Tool Number

3375272

Engine Support Bracket Kit

Used to support the front of the engine to allow the front support or oil pan adapter to be removed.

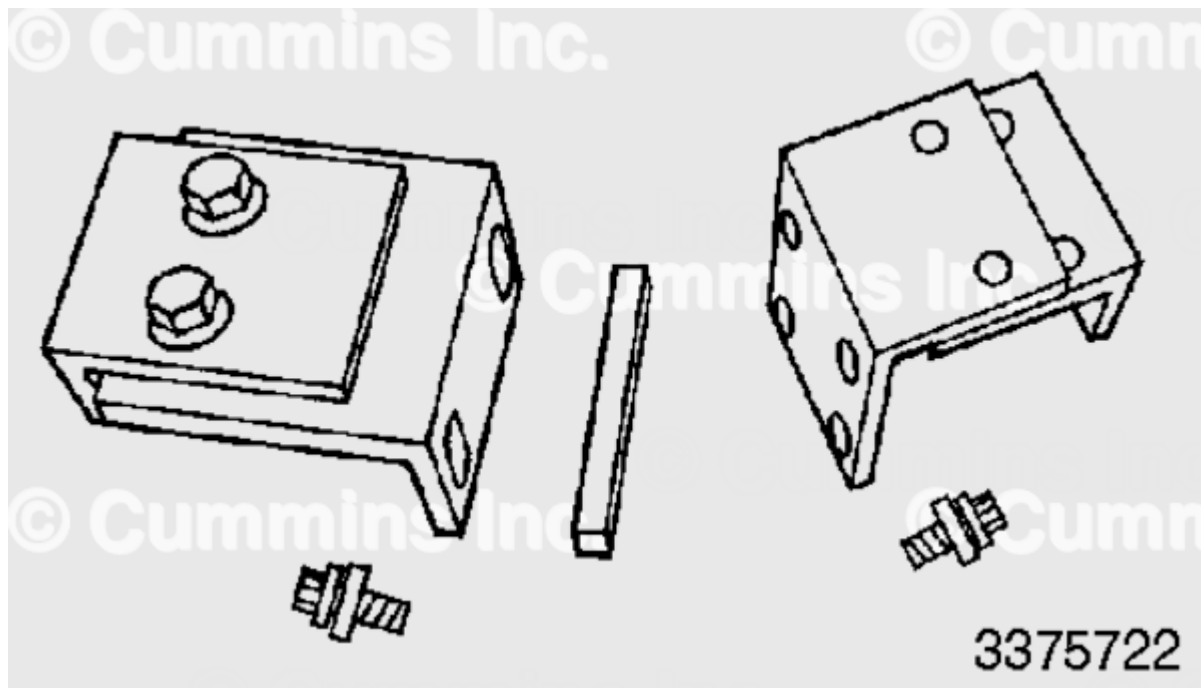


Tool Number

3375422

Liner Installation Tool

Used to install cylinder liners in engines.

©Cummins Inc

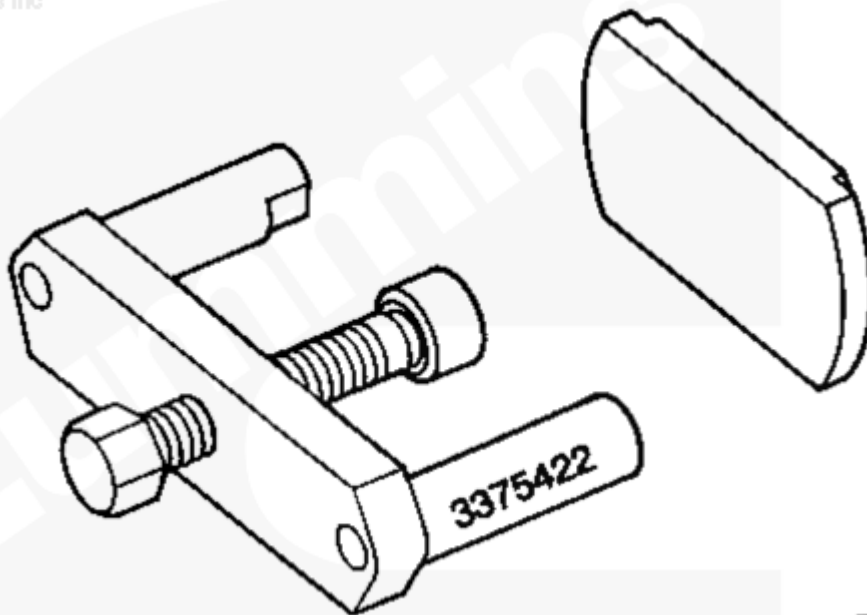
**3375422**

Tool Number

3824942

Injection Timing Tool

Used to check injection timing. The timing fixture is designed to determine the push tube travel in relation to the piston travel.

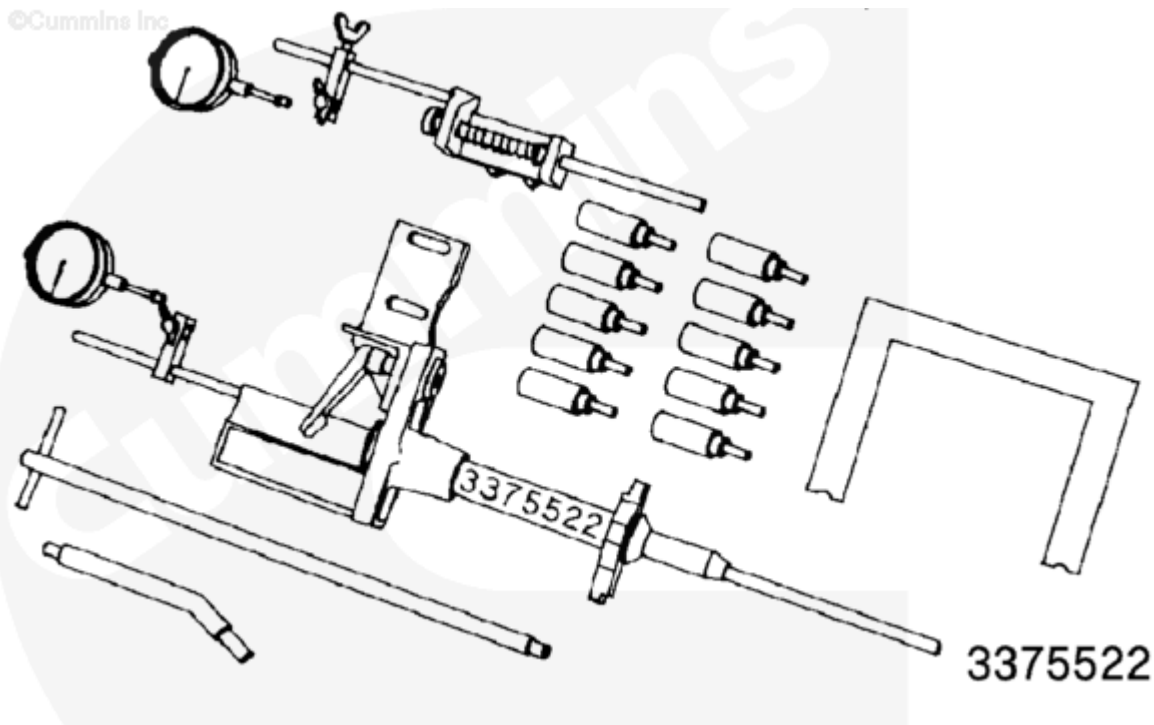


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

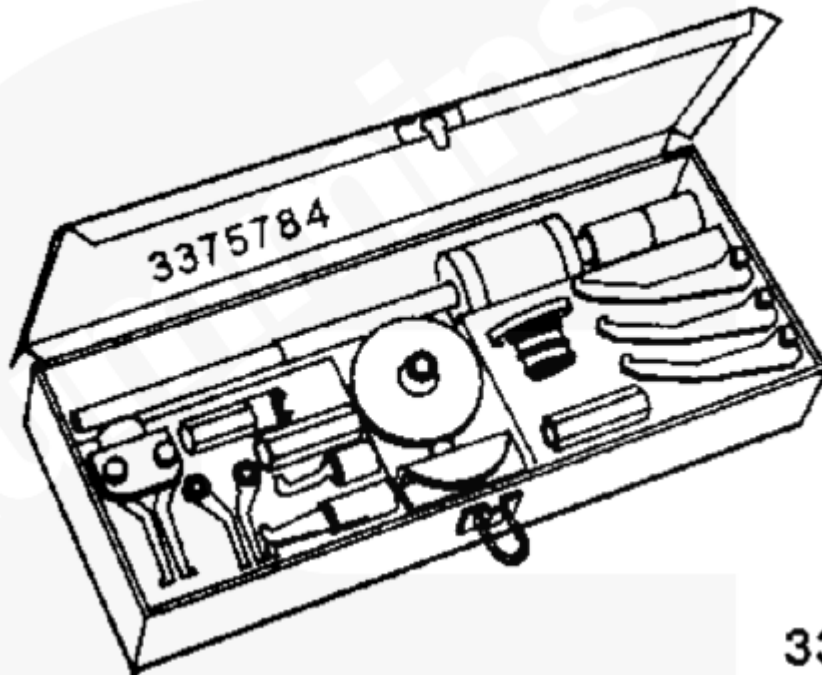**3375784**


Tool Number

3822566

Engine Blow-by Tool

Used to measure crankcase pressure by allowing a specific flow of gas through a precision (0.302 inch) orifice. Used with a water manometer or gauge.

©Cummins Inc

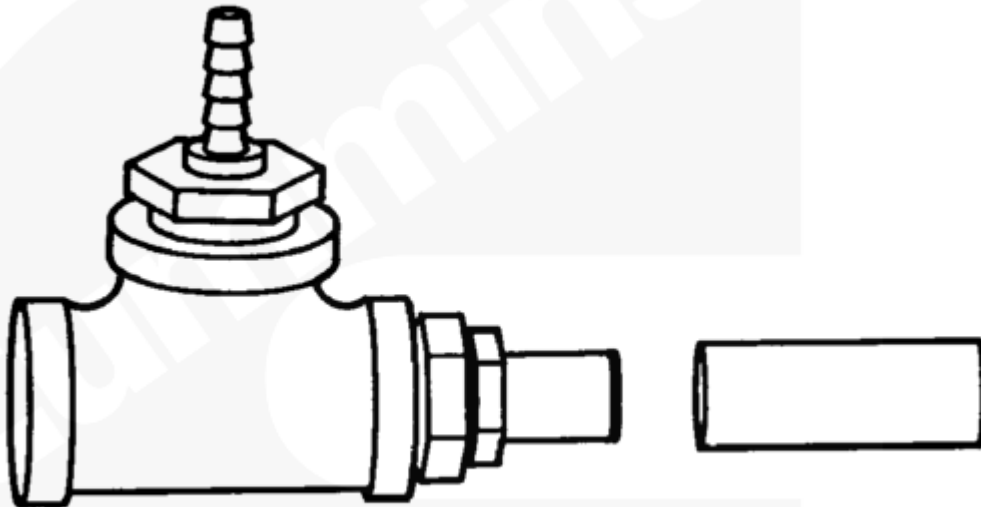

eg8toge


Tool Number

3375960

Valve Spring Compressor

Used to compress the valve spring to allow the valve to be removed or installed. This tool is air operated.

©Cummins Inc

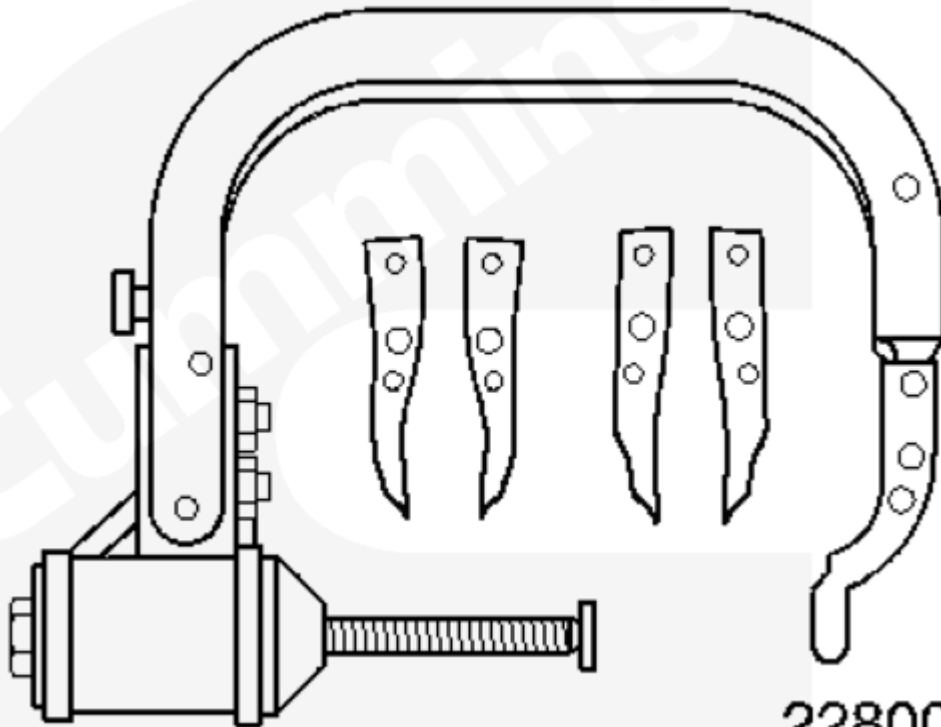

22800430


Tool Number

3376015

Universal Liner Puller

Used to remove cylinder liners from engines.

©Cummins Inc

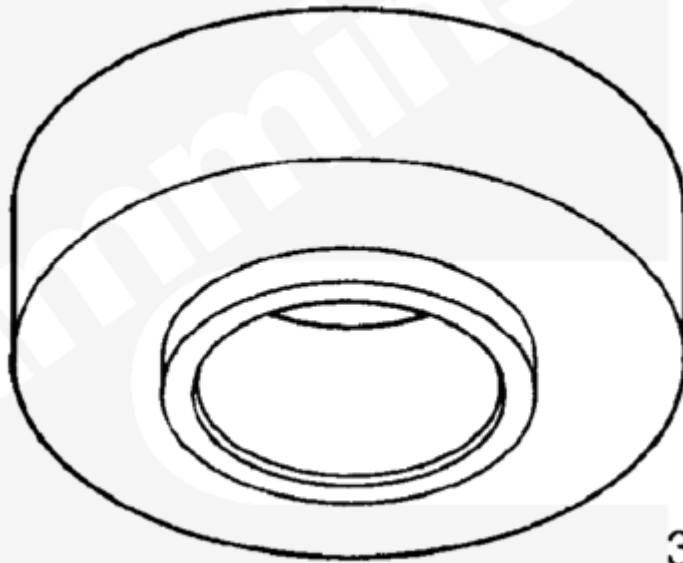

3376105


Tool Number

3164438

Gauge Block

Used to measure cylinder liner protrusion. (Use with ST-547-3 indicator)

©Cummins Inc

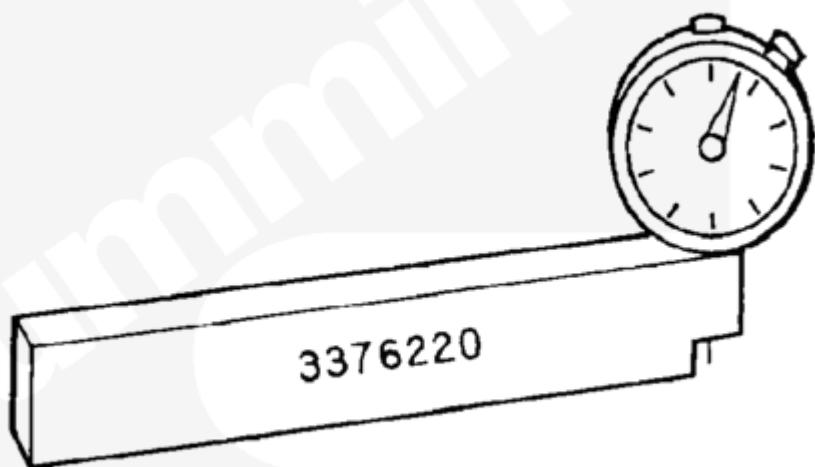

3376220


Tool Number

3376280

Camshaft Pilot

Used to install camshafts without damaging the camshaft bushings or camshaft.

©Cummins Inc

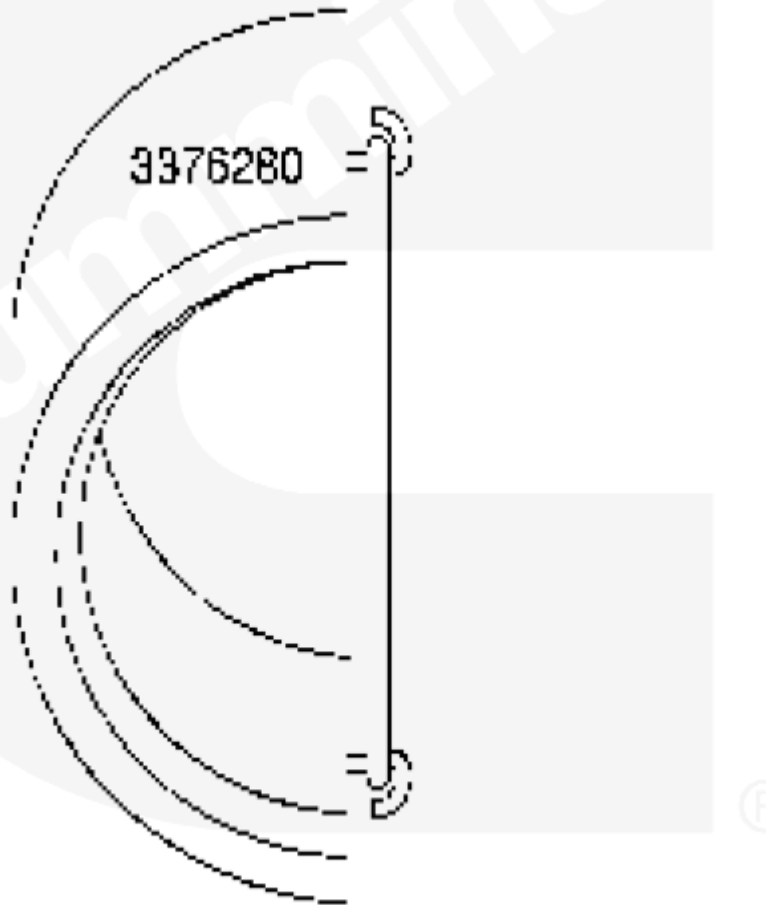


Tool Number

3376326

Pulley Installation Tool

Used to install the alternator and accessory drive pulleys.

©Cummins Inc

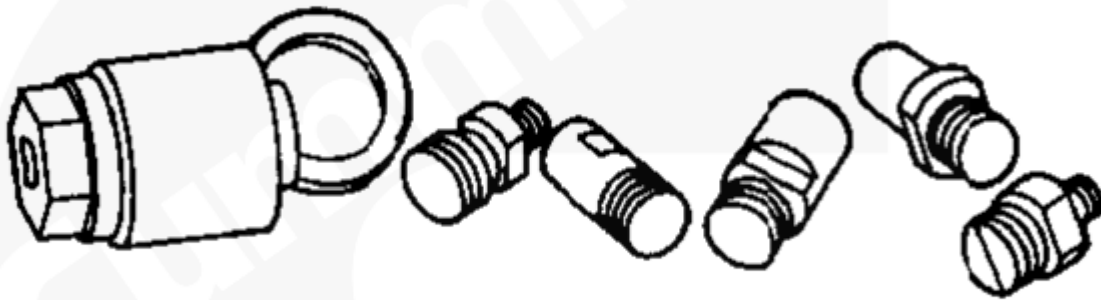


ad8togb

Tool Number

3376592

Torque Wrench

Inch pound torque wrench used to tighten the valve lash adjusting screw. This torque wrench does not require a screwdriver attachment.

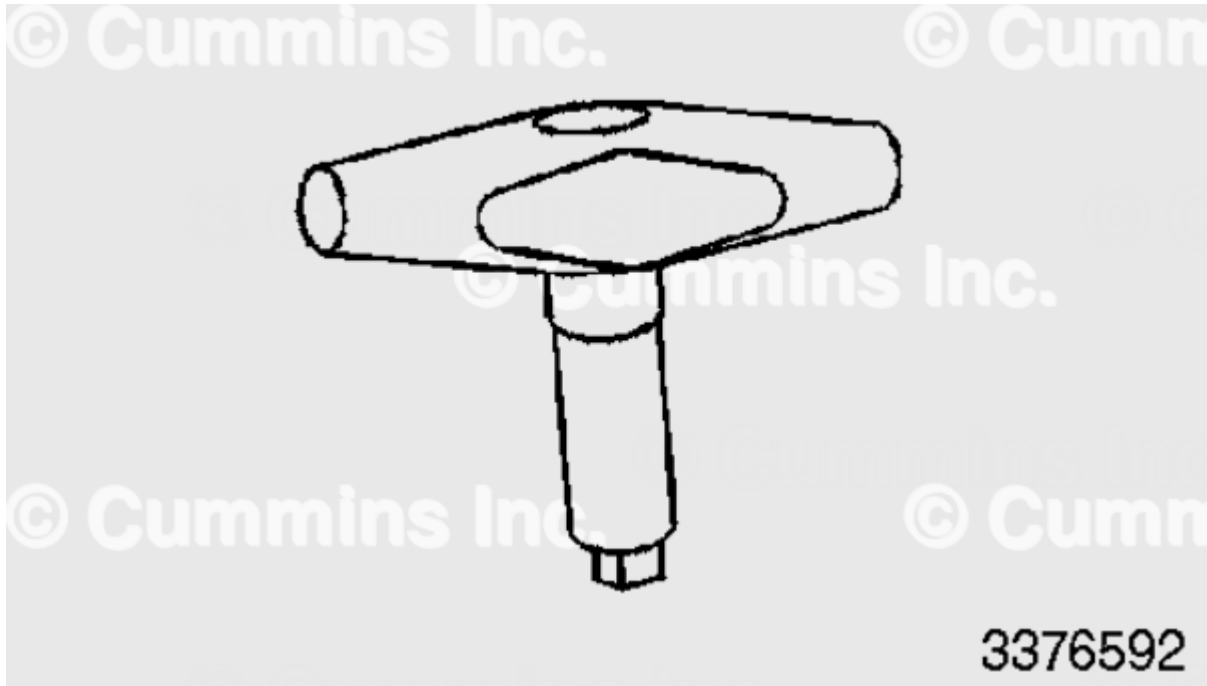


Tool Number

3376637

Camshaft Bushing Driver

Used to install and remove camshaft bushings. Includes slide hammer and extension shaft.
Used with Part Number 3376635, Camshaft Bushing Mandrel.

©Cummins Inc

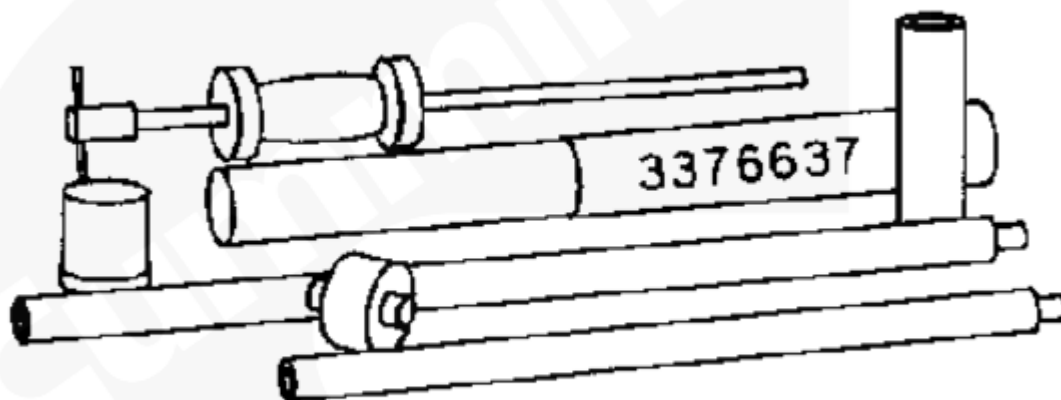

3376637

Tool Number

3823332

Dial Indicator Extension - Short

Used to check and adjust injector travel on the engines that contain Step Timing Control (STC).
Used with Part Number 3375004, Injector and Valve Adjustment Kit.

©Cummins Inc



22600357

Tool Number

3164067

Cummins® Sealant

Used to prevent coolant or oil leaks. This is a room temperature vulcanizing silicone rubber adhesive and sealant material having high heat and oil resistance and low compression set.

©Cummins Inc

**3377132**


Tool Number

3822570

Engine Blow-by Tool

Used to measure crankcase pressure by allowing a specific flow of gas through a precision (0.354 inch) orifice. Used with a water manometer or gauge.

©Cummins Inc

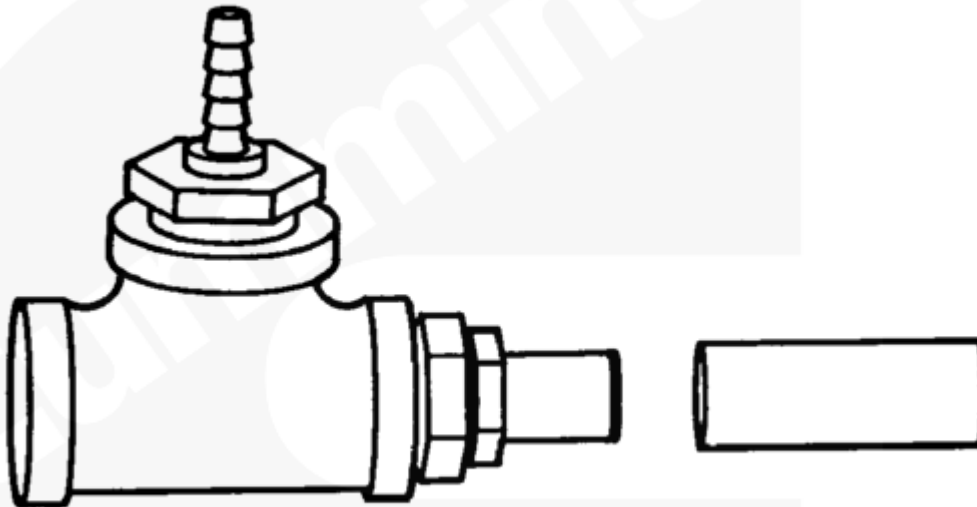

eg8toge


Tool Number

3822571

Engine Blow-by Tool

Used to measure crankcase pressure by allowing a specific flow of gas through a precision (0.406 inch) orifice. Used with a water manometer or gauge.

©Cummins Inc

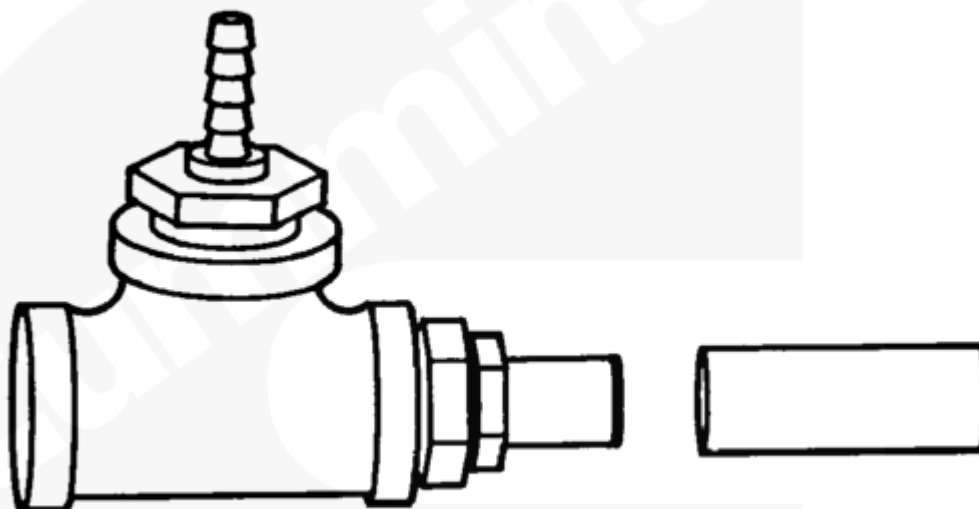

eg8toge


Tool Number

3822574

Rocker Lever Actuator

Used to depress the injector rocker lever to check or set injector travel.

©Cummins Inc

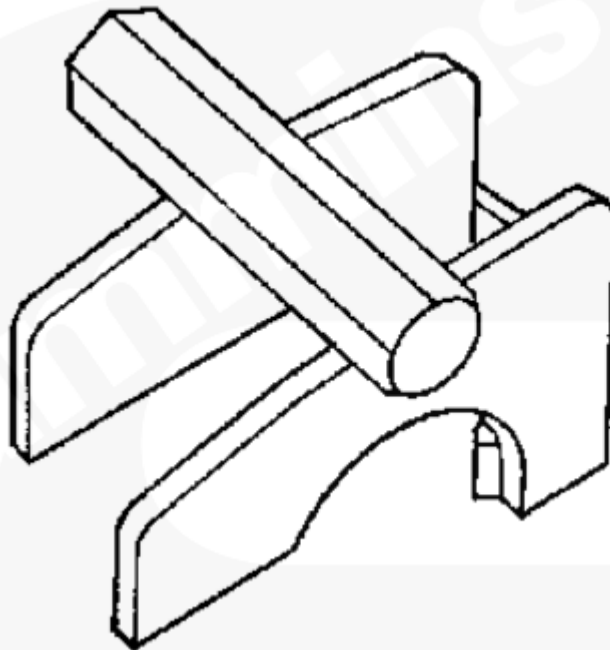

3822574

Tool Number

3823348

STC Tappet Adjusting Tool

Used to set overhead on STC engines.

©Cummins Inc



3822648


Tool Number

3822764

Connecting Rod Bolt Measuring Tool

Used to measure the amount of rod bolt stretch during assembly on KV series engines to assure correct rod bolt clamping load.

©Cummins Inc

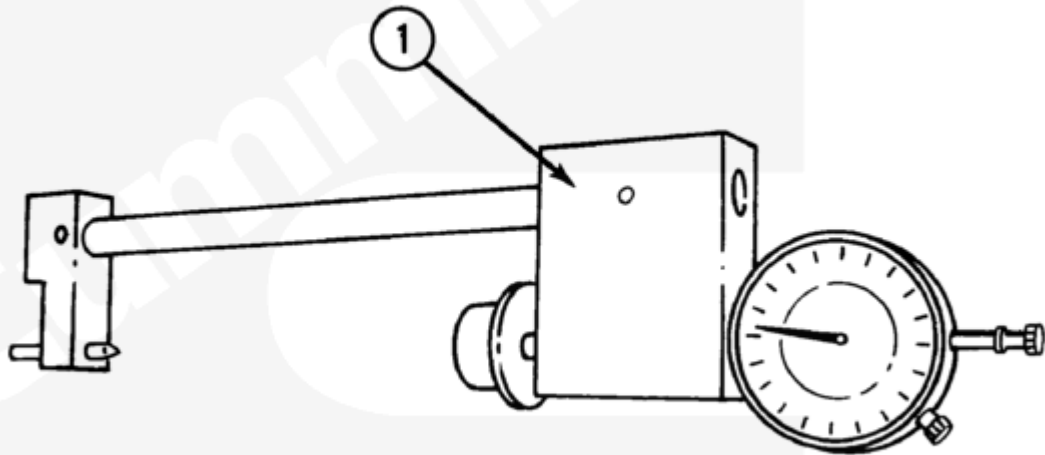

cx6toga


Tool Number

3823258

Scotch-Bright™ 7448

Used to clean carbon from the upper liner bores, to remove rust and corrosion, and scuffs from surfaces.

©Cummins Inc

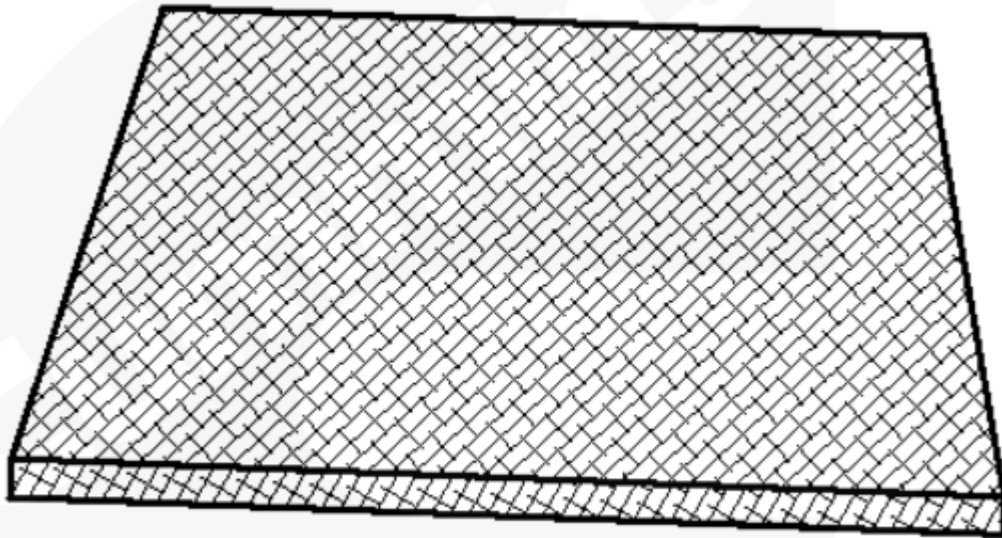

01600272

Tool Number

3375957

Nylon Lift Slings (50.8 by 1828 mm [2 in by 6 ft])

Used to aid in the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3375958

Nylon Lift Slings 25.4 by 1828 mm [1 in by 6 ft]

Used to aid in the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3163086

Lubricant

Lubriplate™ 105.

©Cummins Inc




22800554

Tool Number

3164794

Torque Wrench

Used to tighten capscrews to 13 to 136 N•m [10 to 100 ft-lb].

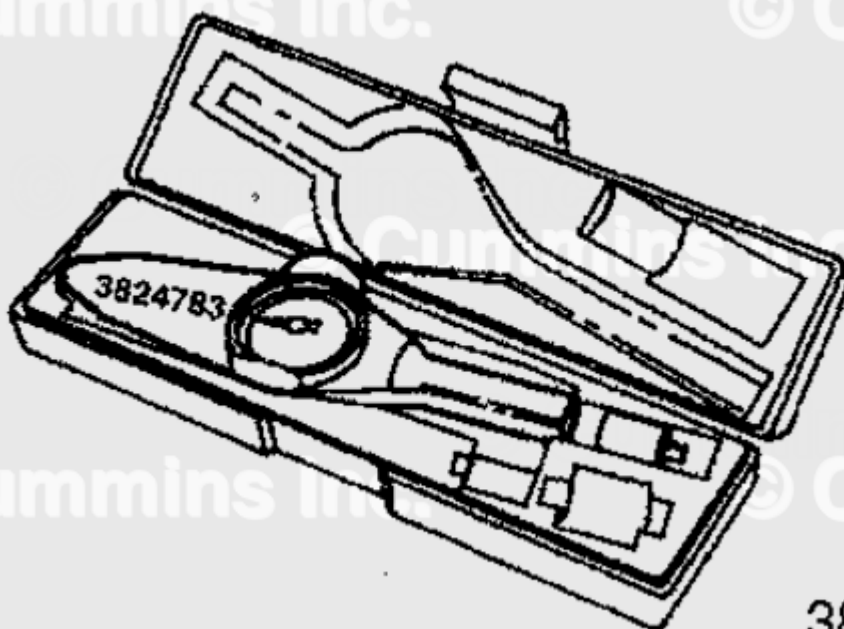


3824783

Tool Number

3164798

Torque Wrench


Used to tighten capscrews to 136 to 813 N•m [100 to 600 ft-lb].

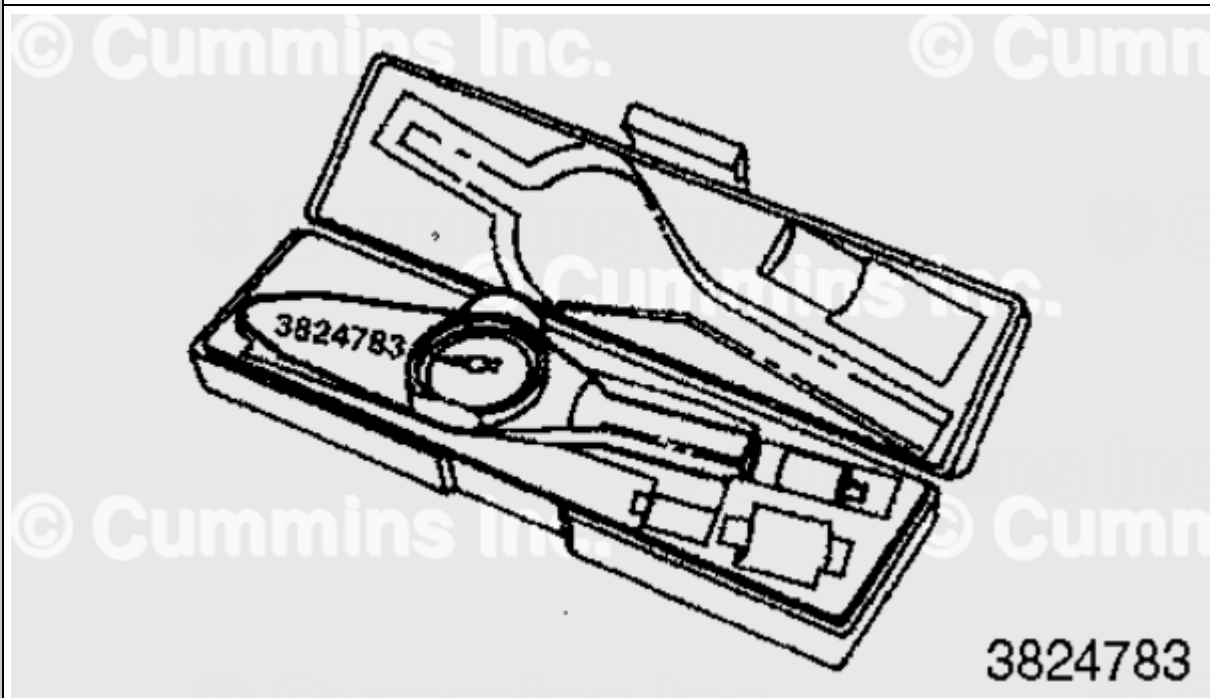**Tool Number**

4919357

Main Bearing Cap Puller

Used to remove main bearing caps.

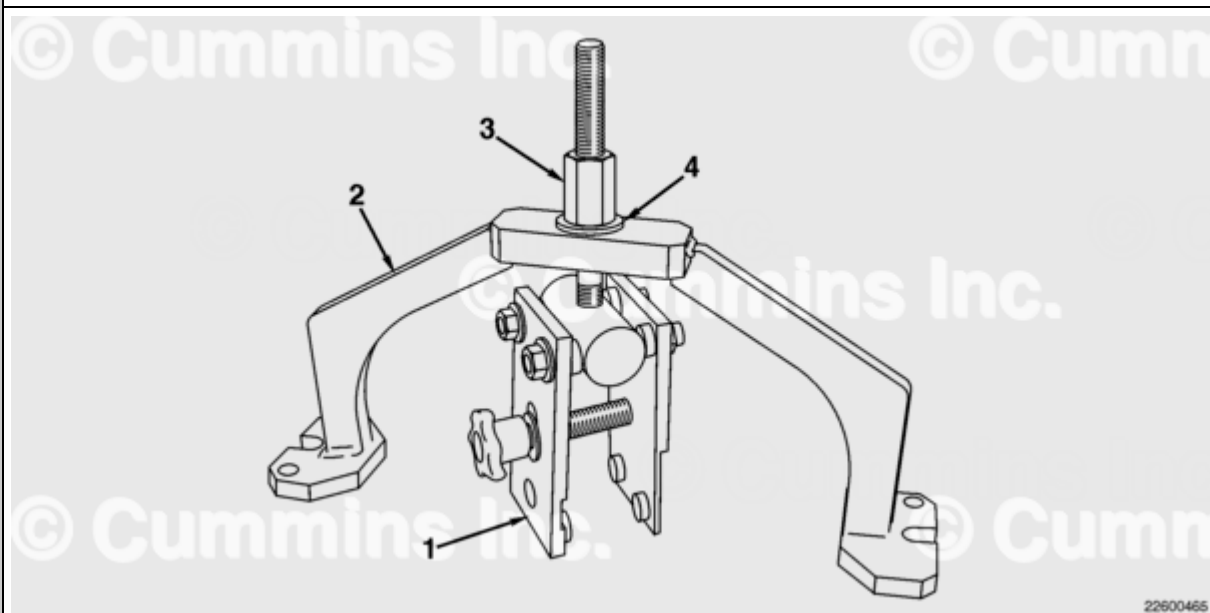


Tool Number

5573467

Seal Installer

Used to assemble accessory drive oil seals into the front gear cover.

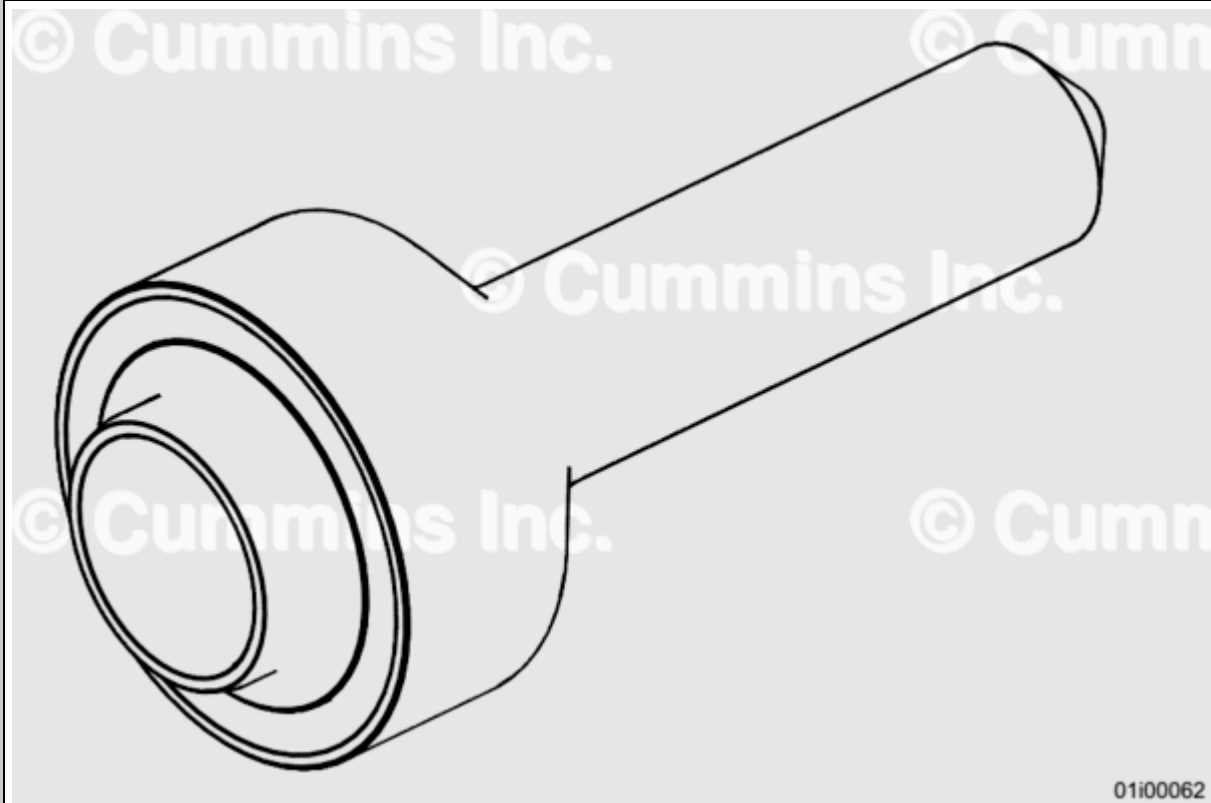

Last Modified: 20-Sep-2022
