

Trainings ▾

Cooling System


Tool Number

ST-647

Gear Puller

Used to remove the water pump pulley and impeller.

©Cummins Inc

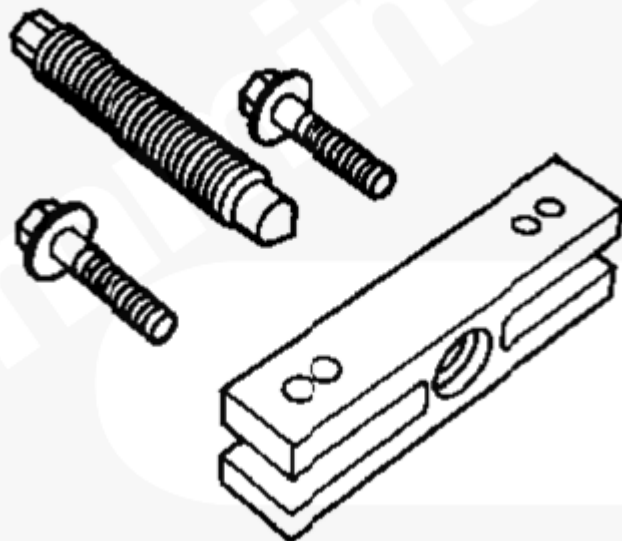

ad8toga

Tool Number

3376326

Pulley Installation Tool

Used to install drive pulleys.

©Cummins Inc



ad8togb

Tool Number

3375318

Water Pump Bearing Mandrel

Used to press the bearing and shaft into the water pump body.

©Cummins Inc



3375318


Tool Number

3375319

Water Pump Bearing Mandrel

Used to install the front water pump oil seal into the water pump body.

©Cummins Inc

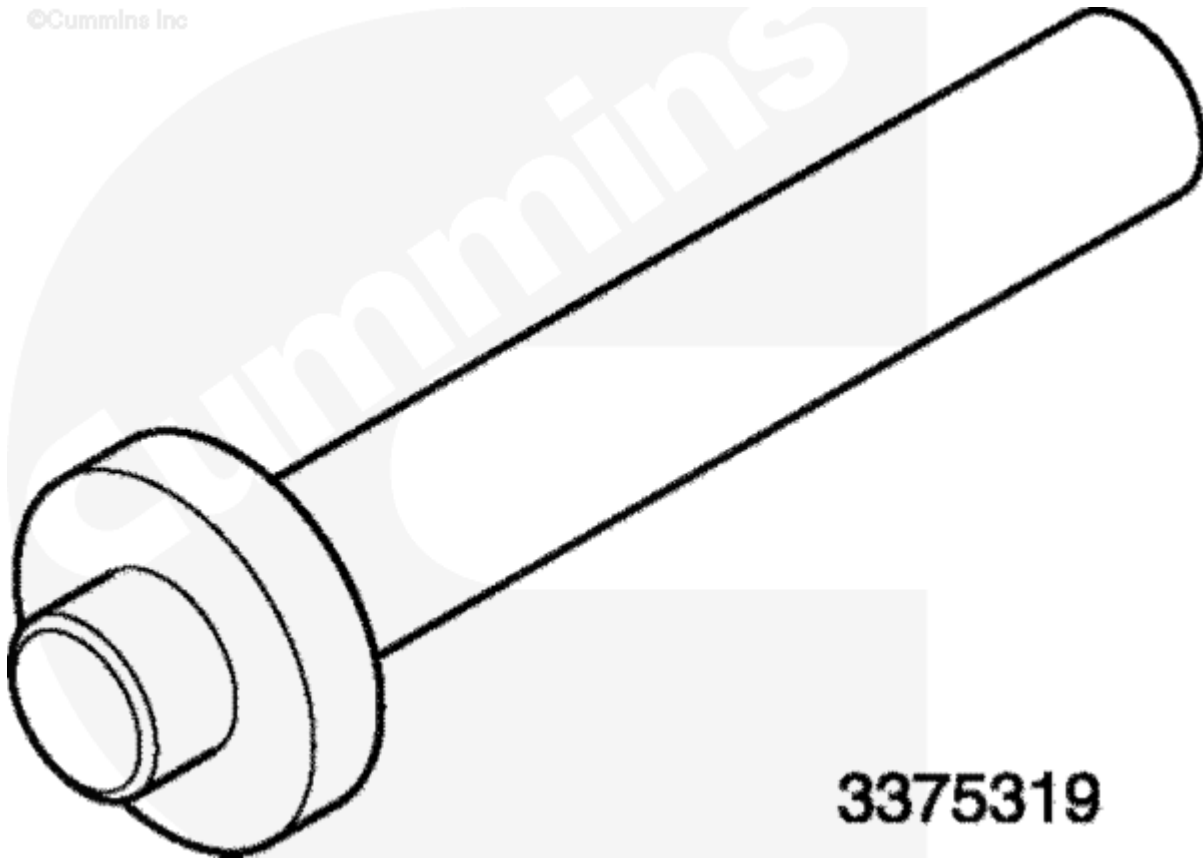


Tool Number

3375326

Bearing Separator

Used to hold the bearing when removing it from the shaft.

©Cummins Inc

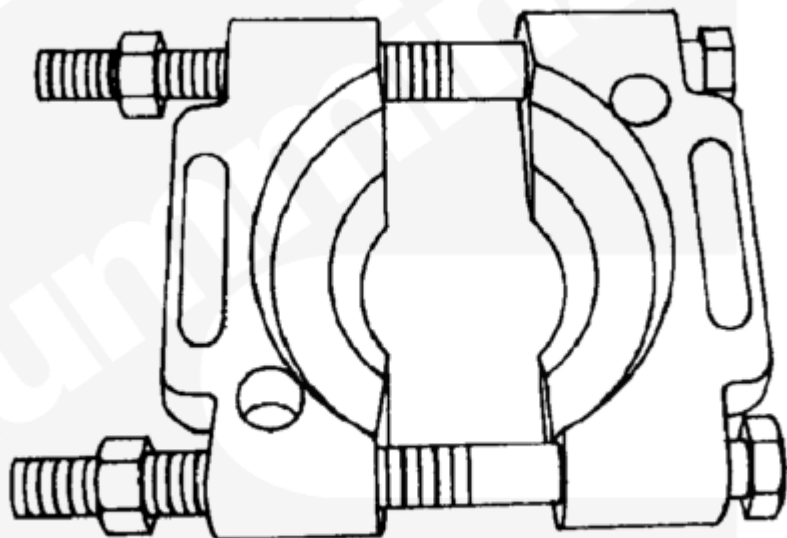

3375326


Tool Number

3375411

Thermostat Seal Driver

Used to install thermostat seal.

©Cummins Inc

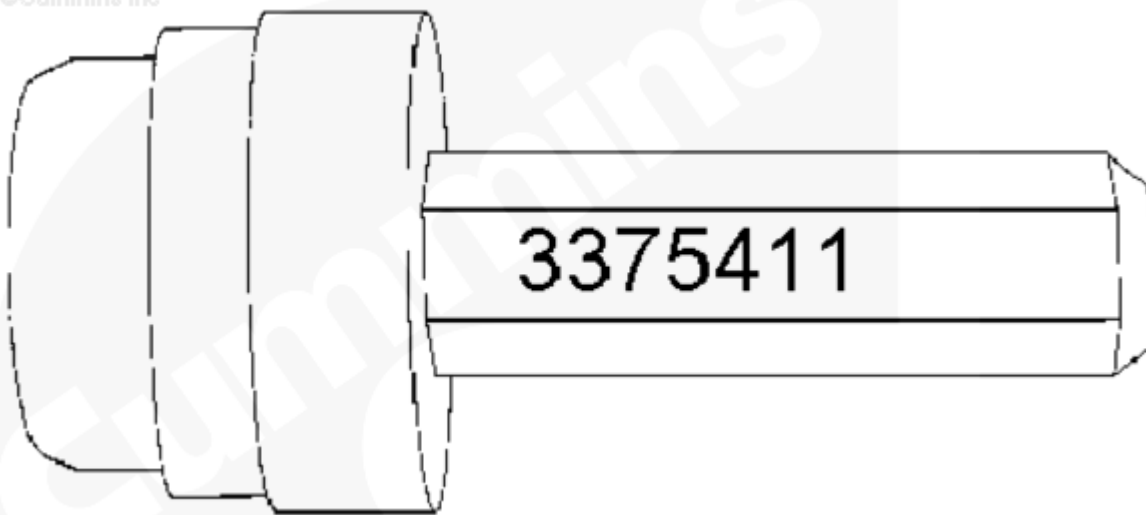


Tool Number

3824836

Water Pump Seal Installer

Used to install and position the seal onto the water pump drive shaft without damage to the seal.

©Cummins Inc

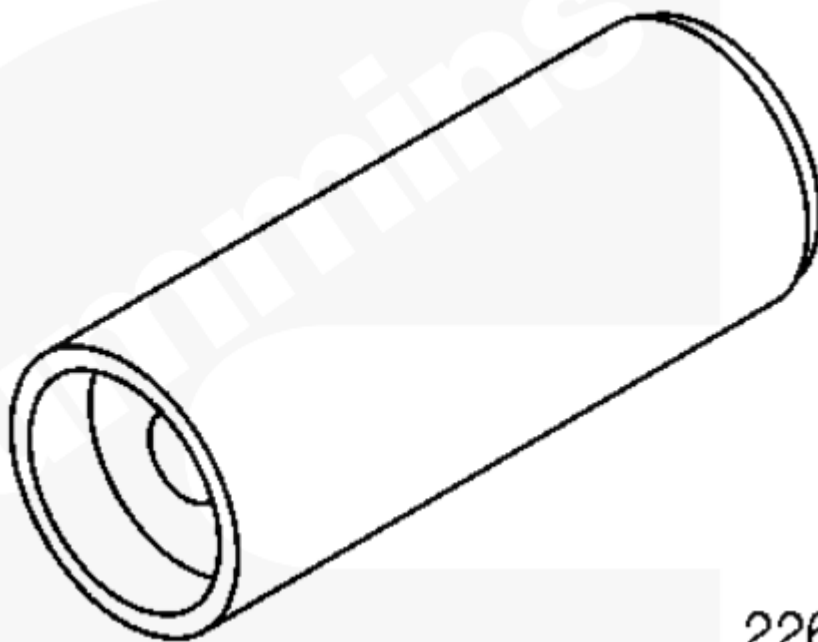

22600220

Tool Number

3375066

Pipe Sealant

Used when installing pipe plugs or cup plugs on the engine in order to prevent leaks.

©Cummins Inc



ew8togc


Tool Number

3377462

Digital Optical Tachometer

Used to measure the rpm of the fan.

©Cummins Inc

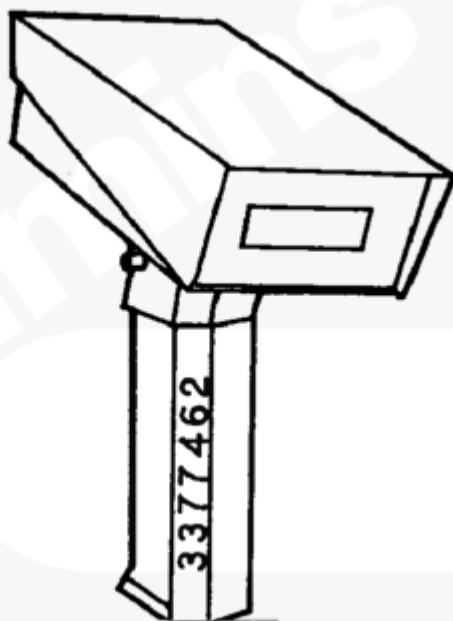

3377462,


Tool Number

3377464

Reflective Tape

Used with optical tachometer, Part Number 3377462, to measure the rpm of the fan.

©Cummins Inc

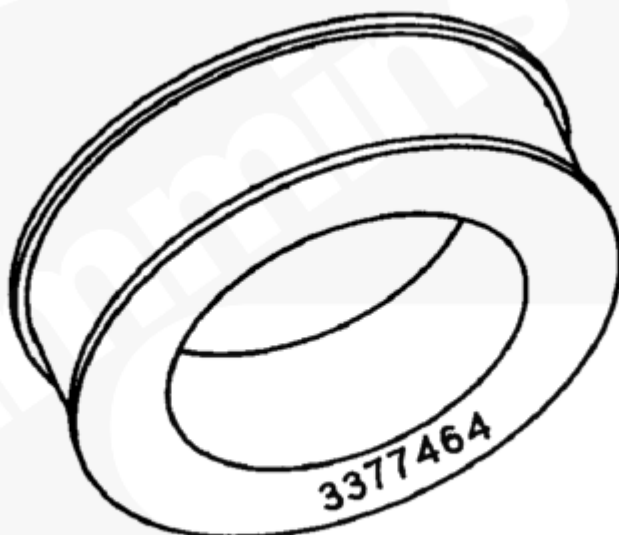

3377464

Tool Number

CC-2602

Cooling System Test Kit - Fleetguard®

Used to measure supplemental cooling additive (SCA) concentration.

©Cummins Inc



08600205


Tool Number

1650

Snap-On Pry Bar

Used to remove thermostat seals.

©Cummins Inc

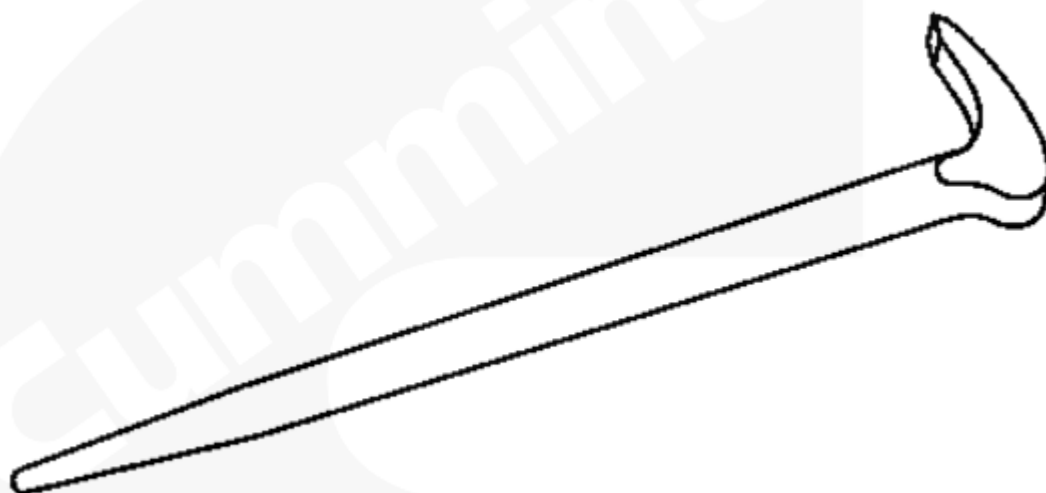

22600221

Tool Number

3164794

Torque Wrench

Used to tighten capscrews 13 to 136 N•m [10 to 100 ft-lb].

