


Trainings ▾

Engine Dataplate

The engine dataplate shows specific information about the engine. The engine serial number (ESN) (1), controls parts list (CPL) (2), model (3), and horsepower and rpm ratings (4) provide information for ordering parts and service needs.

Note : The engine dataplate must not be changed unless approved by Cummins Inc.

The engine dataplate for the older K38 and K50 engines is located on the rear of the right bank side of the engine. The dataplate on the present K38 and K50 engines is located on the left bank side of the front gear cover. Refer to Procedure 100-002 (Engine Diagrams) in Section E.
([/qs3/pubsys2/xml/en/procedures/28/28-100-002-om.html](http://qs3/pubsys2/xml/en/procedures/28/28-100-002-om.html))

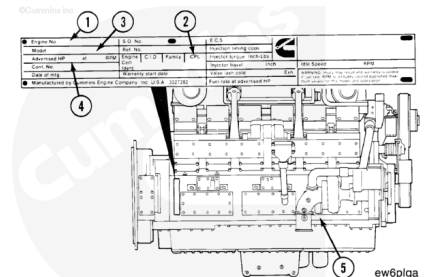


Cummins® Engine Nomenclature

The model name provides identification data for the engine. See the illustration for the model name identification.

The application codes are:

- C = Construction**
- D = Generator-Drive**
- F = Fire Pump**
- G = Generator Set**
- L = Locomotive**
- M = Marine**
- P = Power Unit**
- R = Railcar**

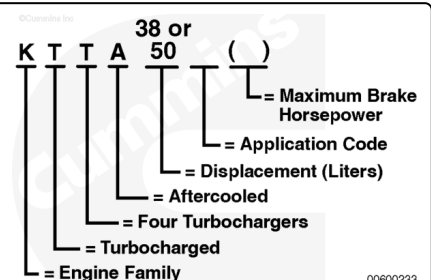


Fuel Pump Dataplate

with Mechanically Actuated Injector

Note : Calibration of the fuel pump requires special equipment and must be performed at a Cummins® Authorized Repair Location.

The fuel pump dataplate is located on the top of the fuel pump.


The fuel pump dataplate provides information for fuel pump calibration.

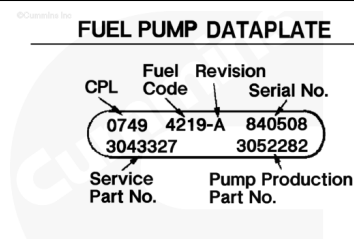

with Electronically Actuated Injector

The Cummins® Modular Common Rail System dataplate is located on the side of the high pressure fuel pump. The dataplate contains the following information.

1. Serial Number
2. Date Code
3. Cummins® Part Number.

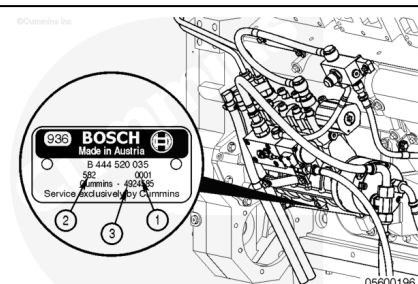


ECM Dataplate

with Mechanically Actuated Injector

The external dataplate is located on the top of the electronic control module (ECM).

The dataplate contains the following:

- Part number
- Serial number
- Manufacturer date code
- Supplier identifier
- Input voltage rating of the electronic control module (ECM).

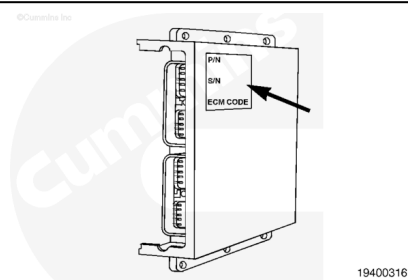

with Electronically Actuated Injector

The electronic control module (ECM) dataplate shows information about the ECM and how the ECM was programmed. The dataplate is located on the front of the ECM.

The following information is found on the ECM dataplate:

1. ECM part number (PN)
2. ECM serial number (SN)
3. ECM data code (DC)
4. Engine serial number (ESN)
5. ECM code (identifies software in the ECM).

Note : Have the ECM code from the engine available when communicating with a Cummins™ Authorized Repair Location.

