


Trainings ▾

General Information

⚠ CAUTION ⚠

Do not allow the engine to run out of fuel. A loss of fuel supply can cause damage to the fuel pump and injectors

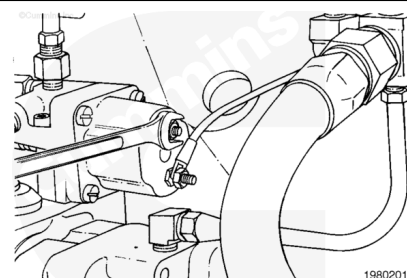

Mechanically Actuated Injector

Note : Engines equipped with a Prelub™ system are self priming and will not require the following procedure.


Complete the following steps after each oil change, or after the engine has been shut down for more than 5 days to make sure the engine receives the correct oil flow through the lubricating oil system.

1. Disconnect the electrical wire from the fuel pump solenoid valve.
2. Use the starting motor to rotate the crankshaft until the oil pressure is indicated on the gauge or the warning lamp goes out.
3. Connect the electrical wire to the fuel pump solenoid valve. Refer to Procedure 018-006 (Engine Component Torque Values) in Section V.
(/qs3/pubsys2/xml/en/procedures/28/28-018-006-om-ng.html)
4. Start the engine; refer to Procedure 101-014 (Normal Starting Procedure) in Section 1.
(/qs3/pubsys2/xml/en/procedures/28/28-101-014.html)

Electronically Actuated Injector

Note : This procedure will cause fault codes for the unplugged sensors to be logged. They will go inactive and have no effect on engine operation after the sensors are connected.

Note : Engines equipped with a Prelub™ system are self priming for the lubricating system and will use the following procedure to prime only the engine fuel system.

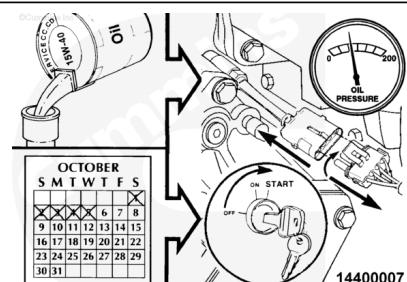

- Disconnect the engine speed sensor and the camshaft position sensor. Engines with mechanical injectors have **only** the engine speed sensor.
- For engines with MCRS fuel systems, cycle the keyswitch on and allow the fuel priming pump to operate for 2 minutes. Repeat this step one time to make sure the fuel system is fully primed.
- Use the starting motor to rotate the crankshaft until the oil pressure is indicated on the gauge or the warning light goes out.

Connect the sensors.

Start the engine. Refer to Procedure 101-014 (Normal Starting Procedure) in Section 1.

(/qs3/pubsys2/xml/en/procedures/28/28-101-014.html)

