

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Close the fuel supply valve. See equipment manufacturer service information.
- Disconnect the batteries. See equipment manufacturer service information.
- Disconnect the driveline. See equipment manufacturer service information.
- Remove the flywheel. Refer to Procedure 016-005 in Section 16.
(/qs3/pubsys2/xml/en/procedures/100/100-016-005.html)

Remove

Drill two 3-mm [0.12-in] holes, 180 degrees apart, through the outside metal of the rear crankshaft seal.


Note : Make sure not to damage the crankshaft when drilling the holes.

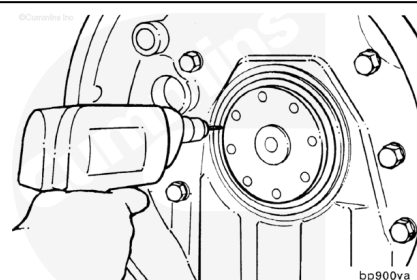

Install a Number 10 sheet metal screw into a slide hammer, Part Number 3823822.

Install the screw/slide hammer into the hole in the rear crankshaft seal.

Remove the seal.

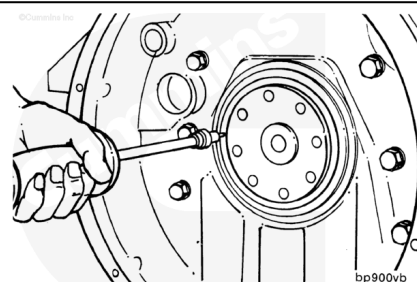


Clean

⚠ CAUTION ⚠

The seal lip and the sealing surface on the crankshaft must be free from all oil residue to prevent seal leaks.

Use Scotch-Brite™ 7448, Part Number 3823258, and a soft cloth to clean and dry the rear crankshaft sealing surface.

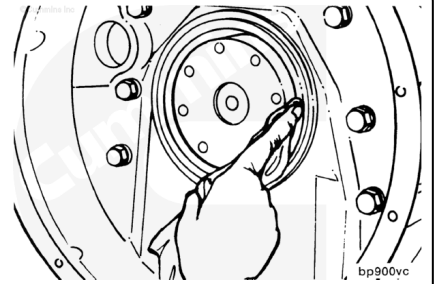


Install

Note : There are two rear seal configurations used:

- One for dry flywheel housings (1)
- One for wet flywheel housings (2).


Note : The seal for dry flywheel housings has an aluminum case with a urethane coating. The seal for wet flywheel housings has a steel case with a silicone coating. See the appropriate C Series Parts Catalog for the correct part number.

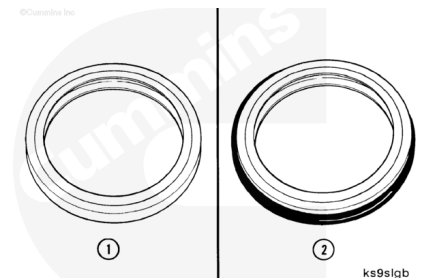

Install the pilot and seal from the seal replacement kit onto the crankshaft.


Note : For wet flywheel housings, apply a coat of mild soap to the outside of the seal case.

Note : For dry flywheel housings, nothing is required on the outside of the seal case.

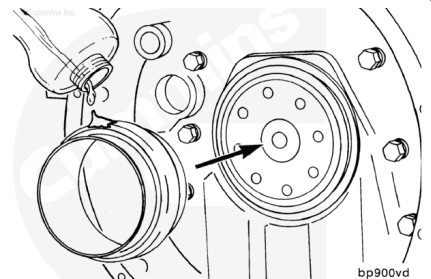

Push the seal onto the pilot and into the bore of the flywheel housing.


Remove the pilot.

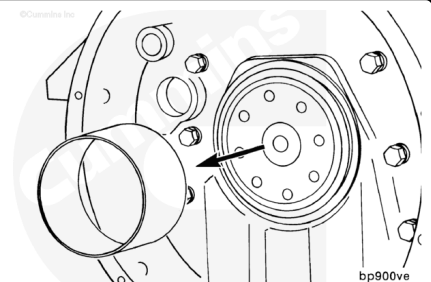

Note : Make sure the seal is completely installed into the rear housing.

Use the installation tool from the seal replacement kit to install the seal to the correct depth.

To prevent damage to the seal, hit the installation tool alternately at the 12-o'clock, 3-o'clock, 6-o'clock and 9-o'clock positions.

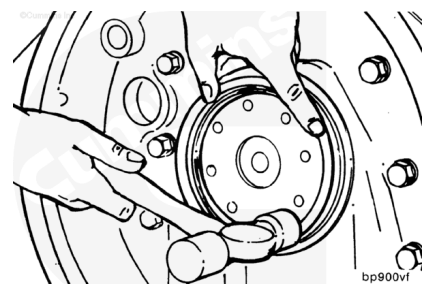

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the flywheel. Refer to Procedure 016-005 in Section 16. (</qs3/pubsys2/xml/en/procedures/100/100-016-005.html>)
- Install the driveline. See equipment manufacturer service information.
- Connect the batteries. See equipment manufacturer service information.
- Open the fuel supply valve. See equipment manufacturer service information.
- Operate the engine until the coolant reaches 82°C [180°F], and check for leaks and proper operation.