

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>) in Section 13.
- Remove the fan and fan shroud, if necessary.
- Remove the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>)



Remove

Note : Some engines use four damper capscrews while others use five damper capscrews.


Remove the vibration damper.

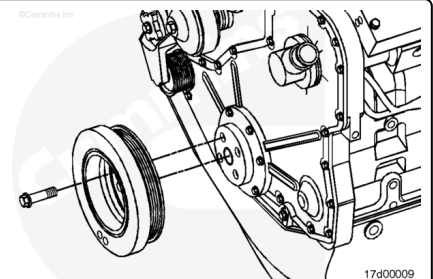

Inspect for Reuse


Check the index lines (A) on the damper hub (B) and the inertia member (C). If the lines are more than 1.59 mm [1/16 in] out of alignment, replace the damper.

Inspect the vibration damper hub (B) for cracks. Replace the damper if the hub is cracked.

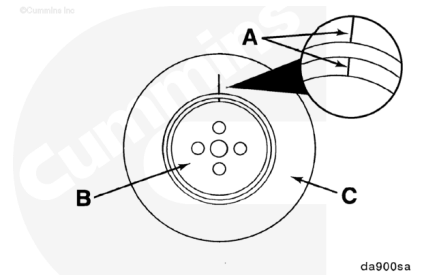

Inspect the rubber member for deterioration. If pieces of rubber are missing or if the elastic member is more than 3.18 mm [1/8 in] below the metal surface, replace the damper.

Look for forward movement of the damper ring on the hub. Replace the damper if any movement is detected.

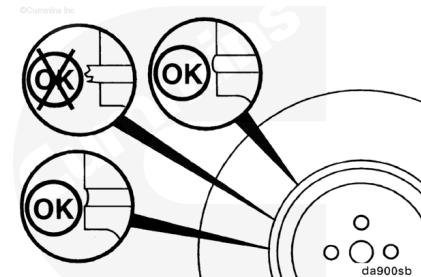

Install


Note : Some engines use four damper capscrews while others use five damper capscrews.

Install the vibration damper.

Tighten the capscrews in a star pattern.

Torque Value:

1. 200 n•m [148 ft-lb]

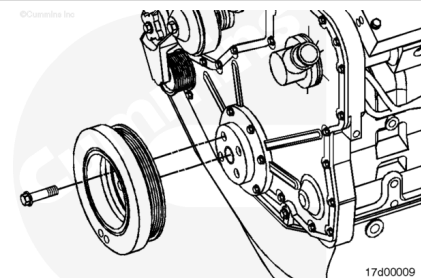

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



- Install the fan drive belt. Refer to Procedure 008-002 in Section 8. (/qs3/pubsys2/xml/en/procedures/100/100-

008-002.html)

- Install the fan and fan shroud, if removed.
- Connect the batteries. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>) in Section 13.
- Start the engine and check for proper operation.

Last Modified: 03-Mar-2020
