

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>)




Remove

Remove the six capscrews.

Note : The crankshaft speed indicator ring is part of the vibration damper assembly and must not be removed from the vibration damper.


Remove the vibration damper/crankshaft speed indicator ring assembly.

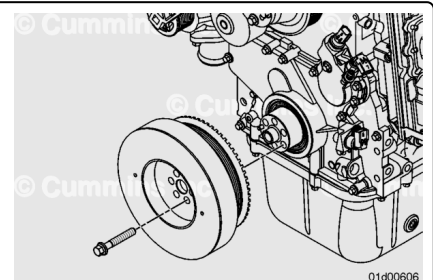

Clean and Inspect for Reuse

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

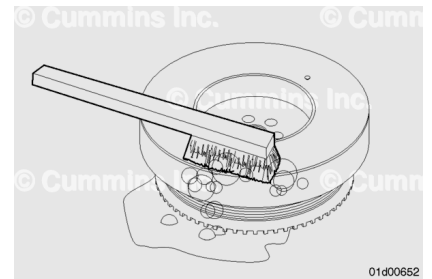

Use soapy water to clean any oil from the vibration damper/crankshaft speed indicator ring assembly.

Dry the vibration damper/crankshaft speed indicator ring assembly with compressed air.


Inspect the crankshaft speed indicator ring for missing teeth, cracks, or damaged surfaces. If any damage is found, the entire vibration damper/crankshaft speed indicator ring assembly **must** be replaced.

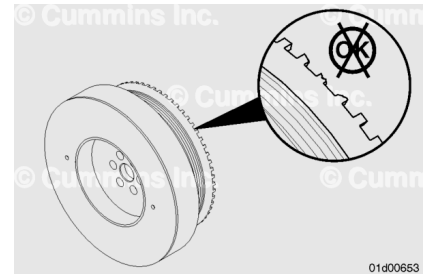

Check the mounting web for cracks.

Check the housing for dents or raised surfaces.

Replace the damper if damage is found.

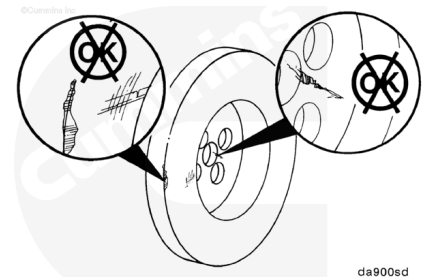


Note : The viscous damper is filled with a silicone fluid. After many hours of use, the silicone fluid can become thicker and expand.


To determine if the damper thickness is correct, remove the paint from the damper in four locations on either side of the damper.

Measure and record the thickness of the damper in four places. Measure the thickness at 80.65 mm [3.175 in] from the outside of the damper.

Replace the damper if its thickness varies by more than 6.35 mm [0.25 in].

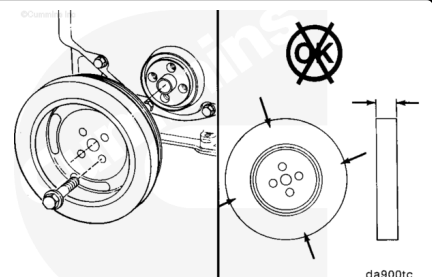

Spray the damper with spot check developer, type SKD-S2, or equivalent.

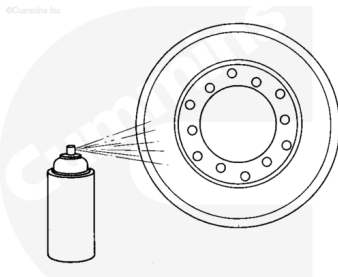


da800se

Install

Note : Align the vibration damper/crankshaft speed indicator ring assembly with the index pin located on the nose of the crankshaft.

Lubricate the capscrews with clean engine oil.

Install the vibration damper/crankshaft speed indicator ring assembly.

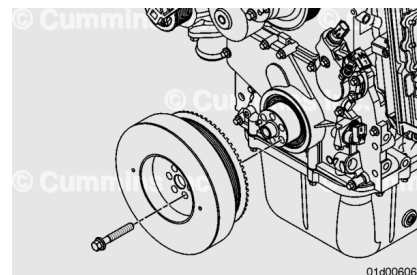


01d00606

Tighten the six vibration damper capscrews in a criss-cross pattern.

Torque Value:

1. 50 N•m [37 ft-lb]
2. Rotate 90 degrees

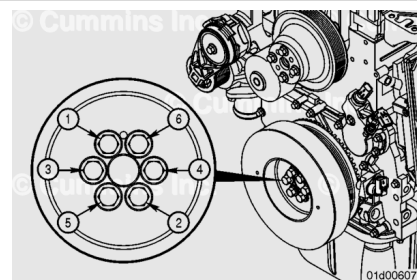


01d00607

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

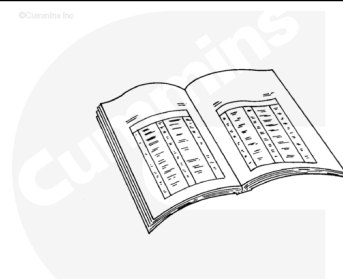

ck800wa

- Install the drive belt. Refer to Procedure 008-002 in Section 8. (/qs3/pubsys2/xml/en/procedures/100/100-

008-002.html)

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for noise and proper operation.

Last Modified: 26-Apr-2017
