


Trainings ▾

Inspect for Reuse

Measure the inside diameter of the valve guide bore in the cylinder head.

mm		in
15.931	MIN	0.6272
15.971	MAX	0.6288

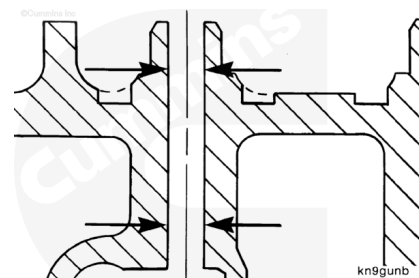

If the valve guide bore is worn larger than the maximum specified, the cylinder head **must** be replaced.

Inspect the valve guides for scuffing, scoring, chips, or cracks.

Measure the valve guide inside diameter.

mm		in
9.539	MIN	0.3755
9.559	MAX	0.3763

