


Trainings ▾

Inspect for Reuse

Inspect the valve seats for cracks and burn spots.

Note : Service valve seats are available for valve seats that can **not** be ground within specification.


Note : If a valve seat can **not** be cleaned up by grinding it, the valve seat **must** be replaced; refer to the Shop Manual, C Series Engines, Bulletin 3666008.

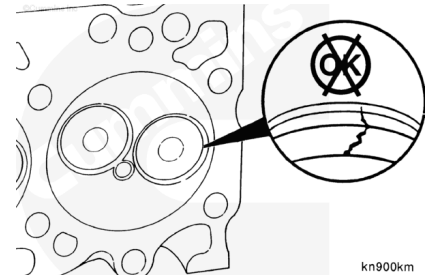

Grind


Use valve seat grinding machine, Part No. ST-685, and valve guide arbor set, Part No. 3375946, to grind the valve seat inserts.

Grind the valve seats at a 30-degree angle.

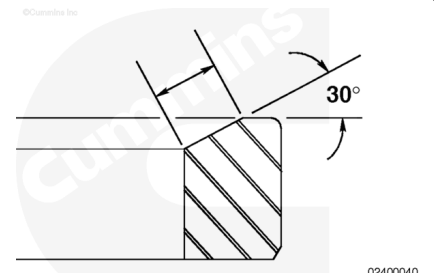


Measure the valve seat width.

	mm		in
Intake	3.05	MIN	0.120
	3.55	MAX	0.140
Exhaust	1.52	MIN	0.060
	2.54	MAX	0.100

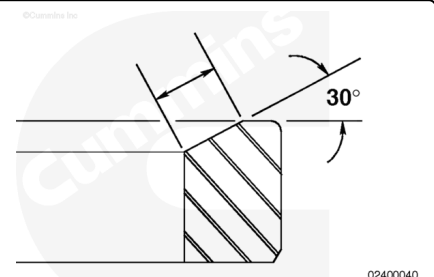

If the width of the valve seat is **not** within specifications, remove surface material on the inner diameter and the outer diameter to decrease the width of the seat.

Note : If the valve seat specifications are not obtained by grinding the valve seat, the insert must be replaced.

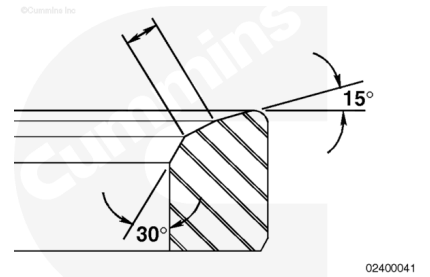

Measure the valve-seat-to-valve-guide concentricity.

mm		in
0.05	MAX	0.002

