


Trainings ▾

General Information

External head gasket leaks can be detected visually. Liquid soap can be used to locate external leaks.


Define a leak as follows:

- Lubricating oil
- Coolant
- Compression.

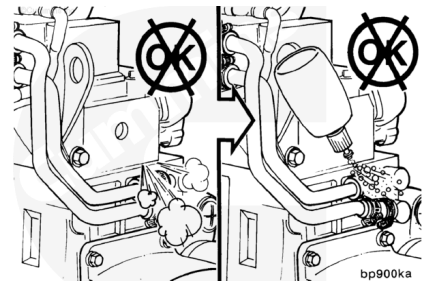


Internal head gasket leaks can be detected by performing a compression check; refer to Procedure 014-012 (</qs3/pubsys2/xml/en/procedures/41/41-014-012.html>).

If the compression is found to be low on adjacent cylinders and the pressure can **not** be increased by oiling the piston rings, the head gasket is probably leaking between cylinders.

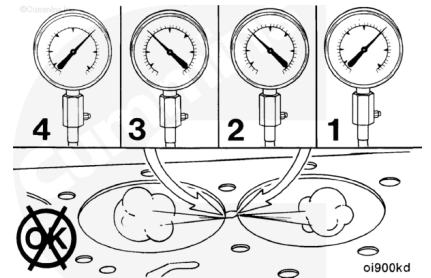

Low compression on a single cylinder can be caused by a compression leak into a coolant passage.

Note : A compression leak into a coolant passage can result in coolant in the cylinder.

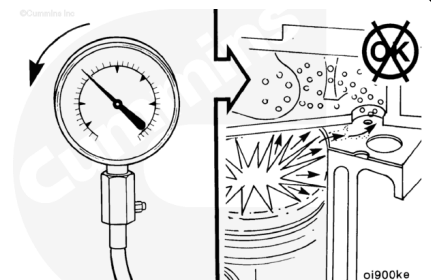

A compression leak into the cooling system can normally be detected by a loss of coolant. Coolant will be blown from the cooling system because of the extra pressure in the system.

Service Tip: Remove the drive belt from the water pump. Run the engine for 1 to 2 minutes and check for coolant being blown from the cooling system.

