



Trainings ▾

Adjust


Remove the air crossover tube from the engine if equipped.

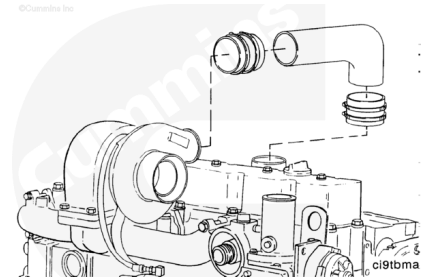

Disconnect the support clamps, hose clamp, and wastegate sensing line. Remove the crankcase vent tube and any other parts that would prevent removal of the valve cover.

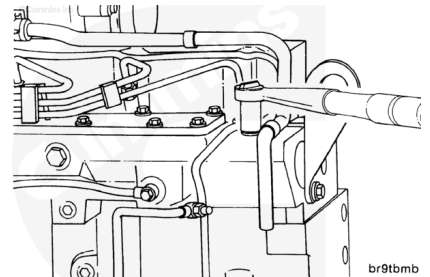


Remove valve cover.

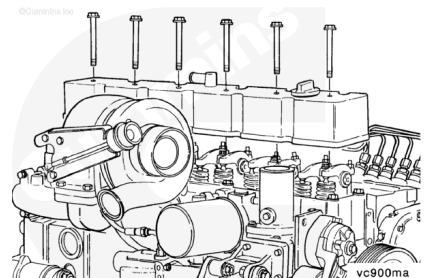


Locate top dead center for cylinder Number 1 by rotating the crankshaft slowly while pressing on the engine timing pin.

The barring gear inserts into the flywheel housing and engages the flywheel ring gear. The engine can then be rotated by hand using a 127-cm [1/2-in] ratchet or breaker bar.

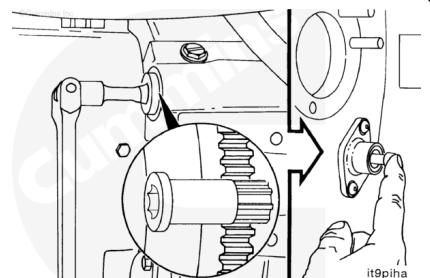


When the engine timing pin engages the hole in the camshaft gear, cylinder Number 1 is at top dead center on the compression stroke.

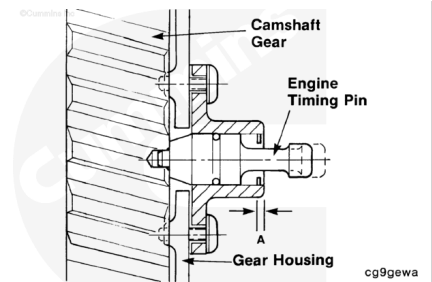

⚠ CAUTION ⚠

Be sure to disengage the engine timing pin after locating top dead center to prevent damage to the engine timing pin.

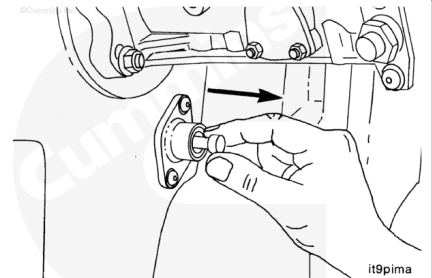


Intake clearance: 0.30 mm [0.012 in].

Exhaust clearance: 0.61 mm [0.024 in].

Check/set valves with engine cold - below 60°C [140°F].

Note : The clearance is correct when some resistance is “felt” when the feeler gauge is slipped between the valve stem and the rocker lever.

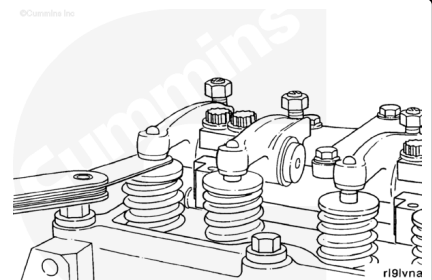


Locate top dead center for cylinder Number 1.

Check/adjust the valves indicated for STEP A (I = intake; E = exhaust).

After tightening the rocker lever locknut, check the valve clearance to make sure the valve clearance has **not** changed.


Torque Value: 24 n•m [212 in-lb]

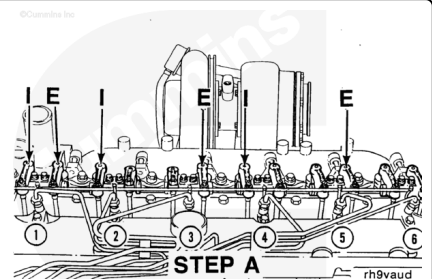

⚠ CAUTION ⚠

Be sure the engine timing pin is disengaged to prevent damage to the engine timing pin.


Mark vibration damper and rotate the crankshaft 360 degrees.

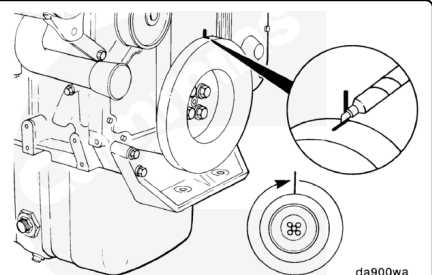

Set the valves indicated for STEP B.

After tightening the rocker lever locknut, check the valve clearance to make sure the valve clearance has **not** changed.


Torque Value: 24 n•m [212 in-lb]

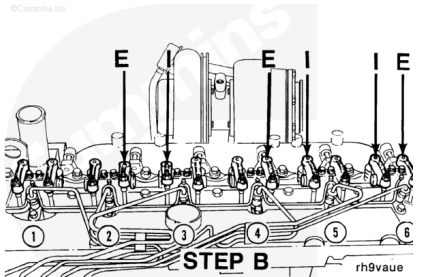

Note : If the seal is **not** damaged, it can be used again.
If the seal is damaged, install a new seal.


Install the rubber seal into the groove in the valve cover. Start the installation at the overlap area shown in the illustration. Do **not** stretch the rubber seal.

If the seal has more overlap than shown in the illustration, trim the length to provide the correct overlap.

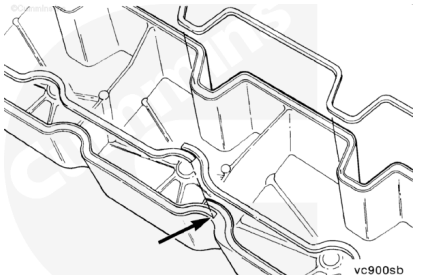


Install new sealing o-rings on the capscrews.
Install the valve cover and wastegate sensing tube.

Torque Value: 24 n•m [212 in-lb]

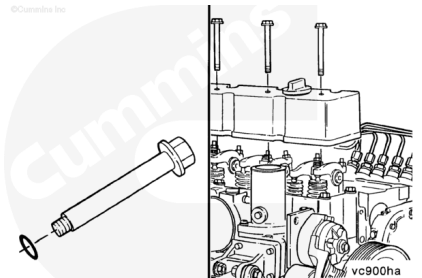

Install the crankcase vent tube, and secure with the support clamps and hose clamp.

Torque Value:	
A =	24 N•m [212 in-lb].
B =	43 N•m [32 in-lb].

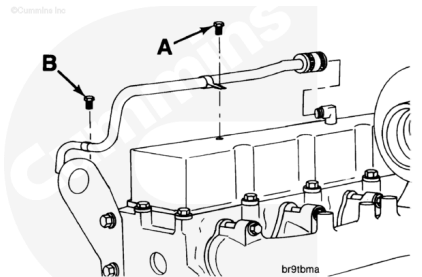

Install the air crossover tube and any other parts previously removed to gain access to the valve cover.

