

Trainings ▾


Initial Check

Note : A bimetallic strip on the filter head acts as a thermostat. The fuel heater will turn on at approximately 1°C [34°F] and turn off at approximately 18°C [65°F].


Remove the 2-pin connector from the fuel heater. Check for the proper voltage at the fuel heater connector.

Fuel Heater - Voltage 12 VDC

Note : If the voltage is not within specifications, refer to the OEM's troubleshooting and repair manual.

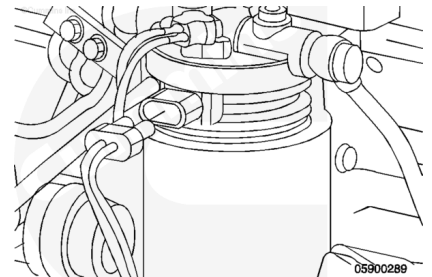


Use a multimeter to check the continuity of the fuel heater. Place the multimeter leads across the pins of the fuel heater; if the heater circuit is open, replace the fuel heater.

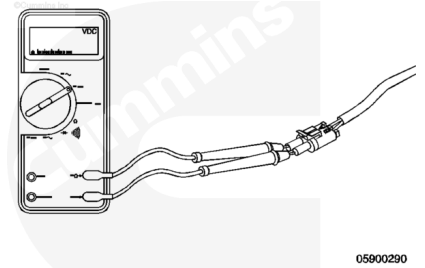


Remove

Disconnect the 2-pin connector from the fuel heater.

Disconnect the connector from the water-in-fuel sensor.

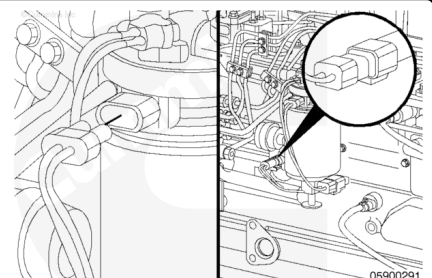

Push on the fuel drain valve for approximately 5 seconds to reduce fuel spillage during filter removal.

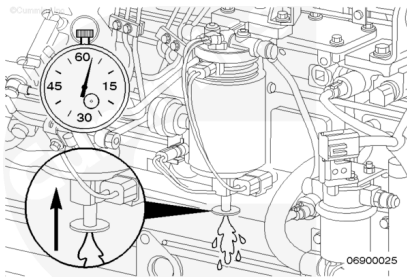


Remove the fuel filter.

Remove the fuel filter spud.

Remove the fuel heater from the filter head.

Note : The fuel heater should pull off the fuel filter head.

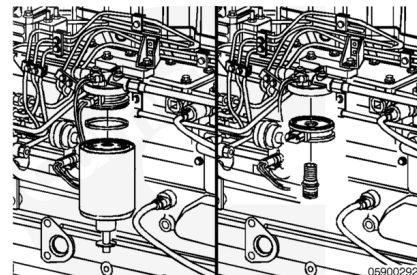


Install

Install the fuel heater to the filter head.

Install the fuel filter spud.

Install the fuel filter.

Note : The fuel heater should push onto the fuel filter head with hand-pressure.

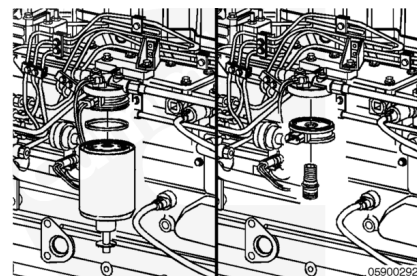

Connect the fuel heater 2-pin connector.

Connect the water-in-fuel sensor connector.

