


Trainings ▾


Adjust

RSV Governor Solenoid

Idle speed adjustment for engines with RSV governors requires the setting of both the low-idle speed screw (1) and the bumper spring screw (2).

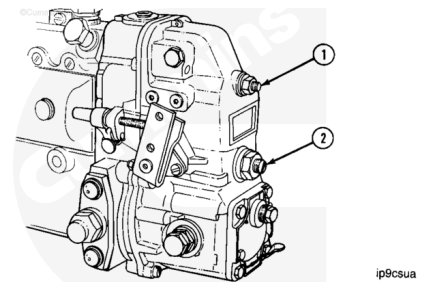

Loosen the locknut and back out the bumper spring screw until there is no change in engine speed.

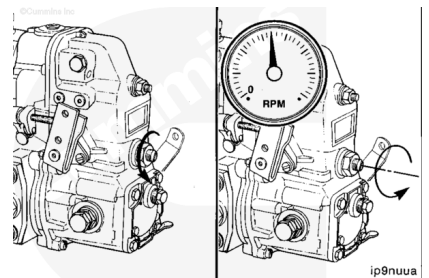


Loosen the locknut and adjust the idle speed screw to 40 to 50 rpm less than the desired speed.

Turn the idle speed screw:

Counterclockwise to decrease rpm

Clockwise to increase rpm.

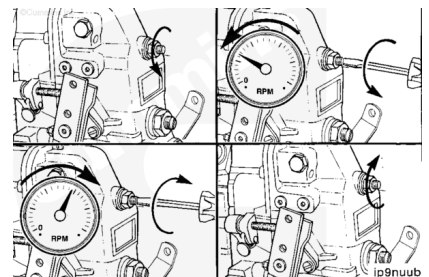


Tighten the locknut.

Torque Value: 8 n•m [72 in-lb]

Turn the bumper spring screw **clockwise** until the desired idle speed is obtained.

Tighten the locknut.

Torque Value: 8 n•m [72 in-lb]

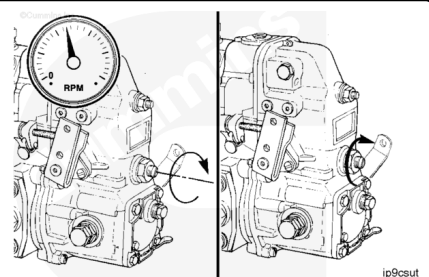


RQVK Governor Solenoid

Idle speed adjustment on fuel injection pumps with RQV or RQVK governors requires setting **only** the stop screw.

Turn the idle stop screw:

Counterclockwise to raise the rpm

Clockwise to decrease the idle speed.

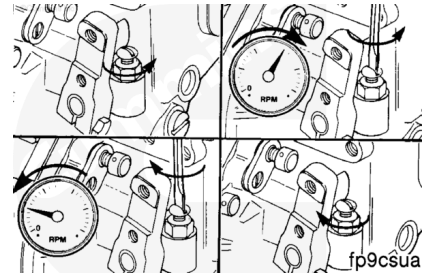

Loosen the locknut and turn the idle speed screw to the desired idle speed.

Tighten the locknut.

Torque Value: 8 n•m [72 in-lb]

