


Trainings ▾

Test


Remove the fuel drain hose.

Install the adapter, Part Number ST-434-2, and pressure gauge, Part Number ST-1273, between the fuel drain hose and the engine fuel drain fitting.

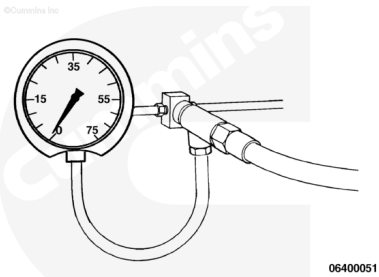


Start and operate the engine at high idle, no load.

mm-hg		in-hg
508	MAX	20.0

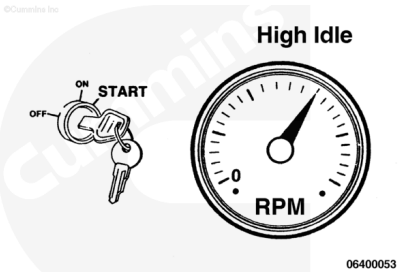

If the fuel drain line restriction is above specifications, inspect the fuel drain line. Refer to Procedure 006-013 (</qs3/pubsys2/xml/en/procedures/41/41-006-013.html>).

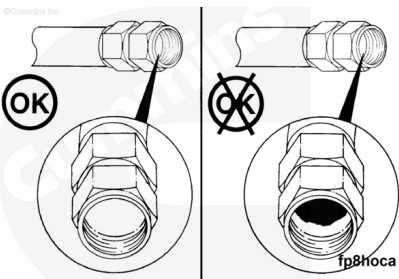

Remove the gauge.

Install the fuel drain line.

Tighten the fuel drain line.

Torque Value: 23 n·m [204 in-lb]

