


Trainings ▾


General Information

Filtration and separation of water from the fuel is important for trouble-free operation and long life of the fuel system. Some of the clearances between the fuel injection pump parts are very close. For this reason the parts can easily be damaged by rust formation, contaminants, or loss of the lubricating film of the fuel.


Note : Make sure to use the correct fuel filter element for your engine.

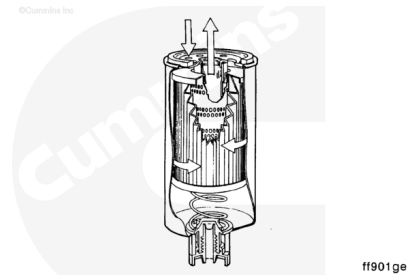


The fuel filter element has a valve that **must** be opened daily to drain any collected water.

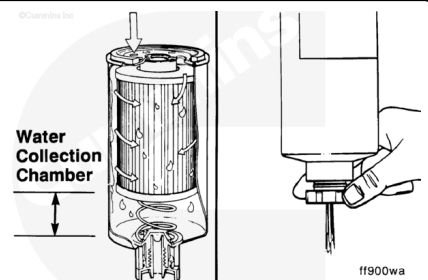

A dual water separator/filter adapter provides additional filtering capacity. The fuel flows through the adapter to a larger combination fuel/water separator filter, and back to the fuel filter for final filtering.

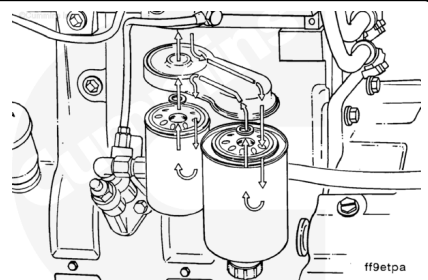

Regular maintenance, including draining moisture from the fuel/water separator and filter and supply tanks, is essential to keep water out of the fuel system.

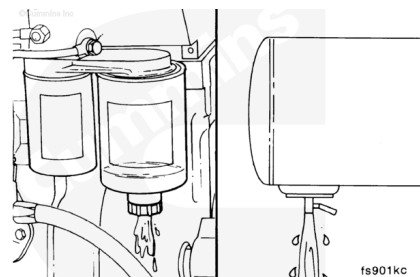


Preparatory Steps

Clean all debris from the fuel filter.


©Cummins Inc.

Remove

Remove the combination water separator/fuel filter with filter wrench, Part Number 3376807.

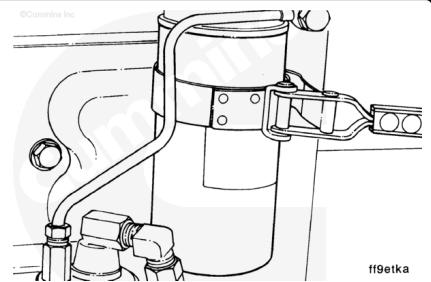

Remove the two fuel filters from the dual-filter adapter, if equipped, with filter wrench, Part Number 3376807.

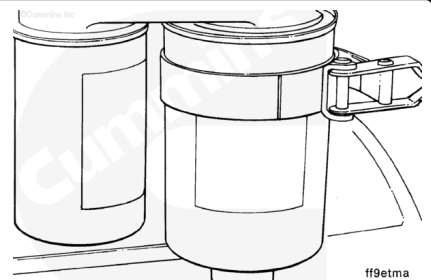

Install

Lubricate the fuel filter gasket with clean engine oil.


Fill the fuel filter with clean diesel fuel.

©Cummins Inc.



Install the fuel filter on the filter head.

Turn the filter until the gasket contacts the filter head surface.

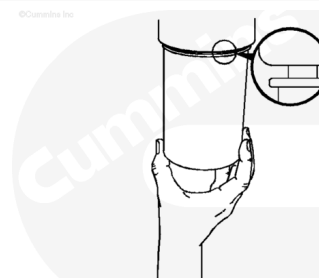


07200039

⚠ CAUTION ⚠

Mechanical overtightening of the fuel filter can distort the threads and damage the fuel filter.

Tighten the fuel filter an additional 1/2 to 3/4 of a turn after the gasket contacts the fuel filter head surface, or as specified by the fuel filter manufacturer.

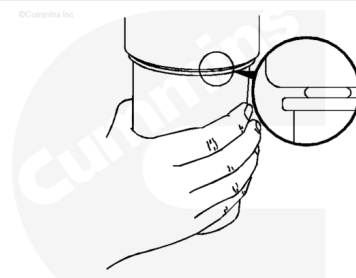

07200040