


Trainings ▾

Clean


Clean the area around the fuel filter head.

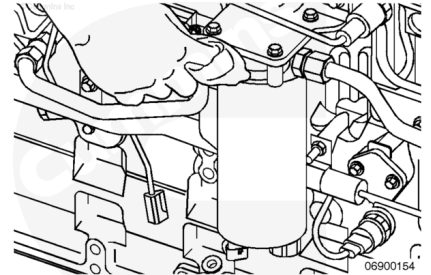

Remove

75- to 80-mm and 90- to 95-mm Wrenches


Remove the fuel filter. Clean the gasket surface of the fuel filter head.

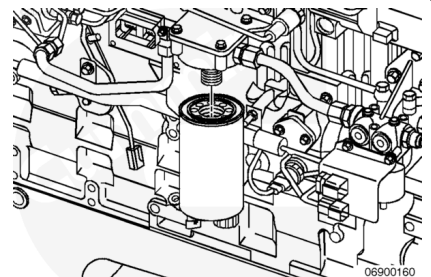

Install


Replace the o-ring.

Fill the new fuel filter(s) with clean fuel, and lubricate the o-ring seal with clean lubricating engine oil.

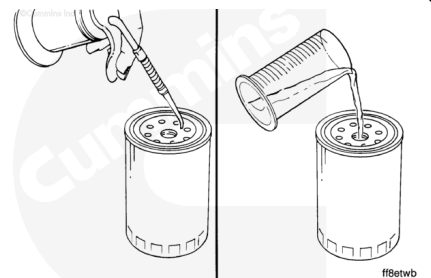

⚠ CAUTION ⚠


To reduce the possibility of fuel leaks, make sure the fuel filter is installed tightly but not too tightly. Mechanical overtightening will damage the fuel filter.

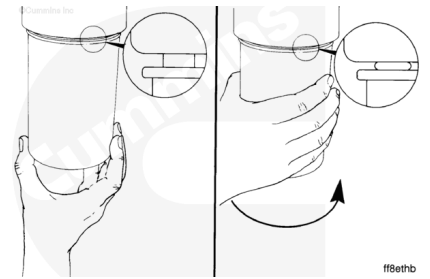

Install the fuel filter as specified by the filter manufacturer.

Prime


Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the fuel filters or fuel injection pump supply line will be vented automatically if the fuel filter is changed in accordance with the instructions.

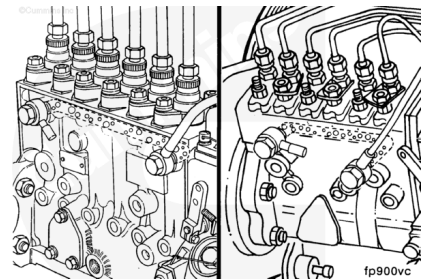

Note : Manual bleeding is required if:

- The fuel filter is **not** filled prior to installation
- Fuel injection pump is replaced
- High-pressure fuel line connections are loosened or fuel lines replaced
- Initial engine start up or start up after an extended period of no engine operation occurs
- Vehicle fuel tank has been run until empty.


Open the bleed screw.

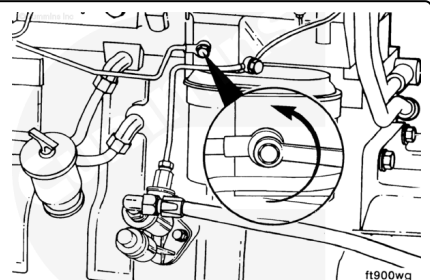

Operate the plunger on the fuel transfer pump until the fuel flowing from the fitting is free of air.


Tighten the bleed screw.

Torque Value: 9 n•m [80 in-lb]

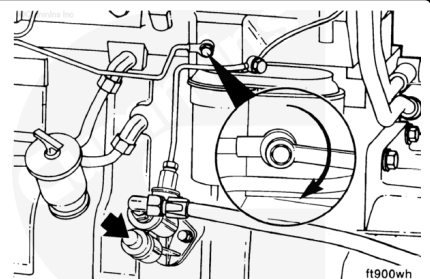

⚠ WARNING ⚠

The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.

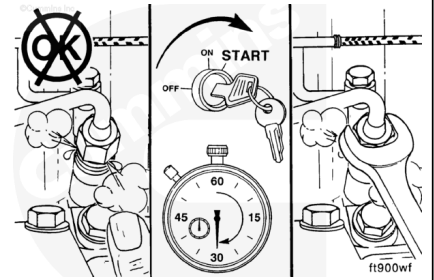

17-mm (PES.A, PES.MW) and 19-mm (PES.P) Wrenches

Loosen the fittings at the injectors, and crank the engine to allow entrapped air to vent from the lines. Tighten the fittings.

⚠ WARNING ⚠

It is necessary to put the engine in the run position. Because the engine could start, be sure to follow all the safety precautions. Use the normal engine starting procedure.

Start the engine and vent one line at a time until the engine runs smoothly.

Note : Do not engage the starter for more than 30 seconds each time when it is used to vent the system: Wait 2 minutes between engagements.

