


Trainings ▾

Preparatory Steps

Low Pressure Fuel Line(s)

Clean any debris from the fittings.


Note : Thoroughly clean all fittings and components before removal. Make sure that the debris, water steam, or cleaning solution does not get inside the fuel system.

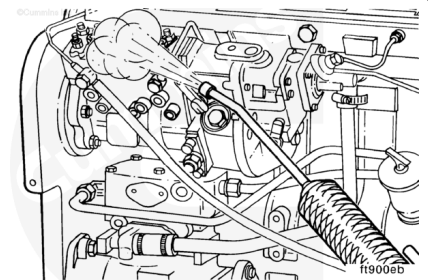


Remove

In-line Fuel Injection Pumps


Remove the fuel line from the piston-style fuel transfer pump.

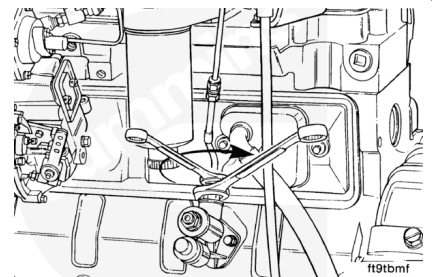

Remove the fuel drain manifold line at the fuel filter head.

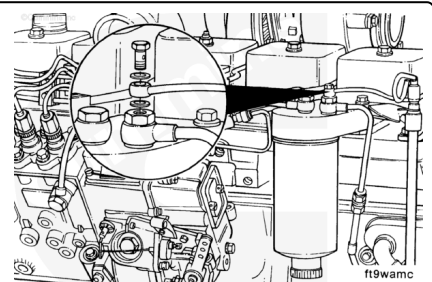


Remove the fuel line from the filter head.

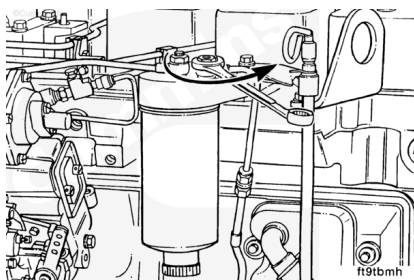


Bosch® In-line

Remove the banjo capscrew and sealing washers at the fuel filter head.

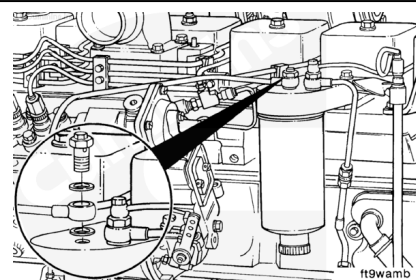

Remove the banjo capscrew and copper sealing washer at the fuel injection pump inlet.

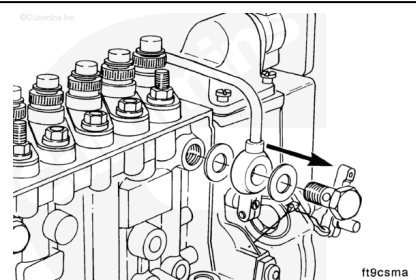


Install

⚠ CAUTION ⚠

Do not overtighten the fuel supply line fittings. A fuel leak can occur.

Install the fuel line between the fuel lift pump and the fuel filter head. Use two wrenches to tighten the connection on the fuel lift pump.


Torque Value: 24 n•m [18 ft-lb]

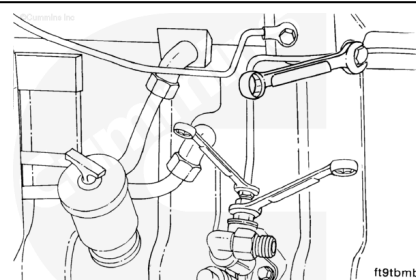

Vent

⚠ WARNING ⚠

The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.

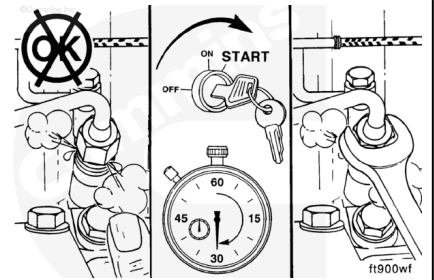


Vent the high-pressure fuel lines. Loosen the fitting at the injector Number 1. Place the fuel control in the RUN position. Crank the engine so air can bleed from the fuel lines then tighten the fitting.

Torque Value: 30 n•m [22 ft-lb]

⚠ WARNING ⚠

The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.

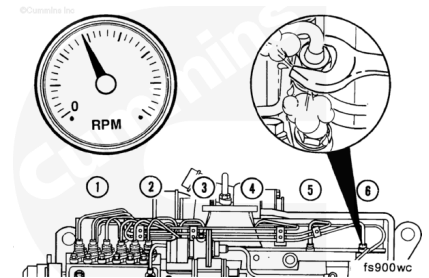

Vent each high-pressure line separately until the engine runs smoothly.