


Trainings ▾

Remove

19-mm Wrench

Remove the pressure relief valve and copper sealing washers.

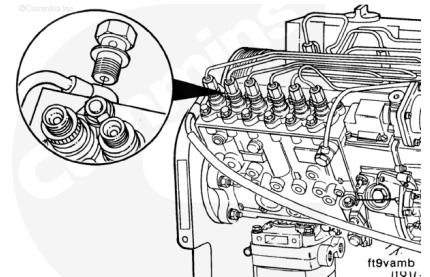

Clean


Thoroughly flush the high-pressure relief valve with cleaning solution.



Inspect for Reuse

Note : A sticky check ball will result in low engine power.

Use a small screwdriver to verify that the check ball is **not** sticking in the high-pressure relief valve assembly.

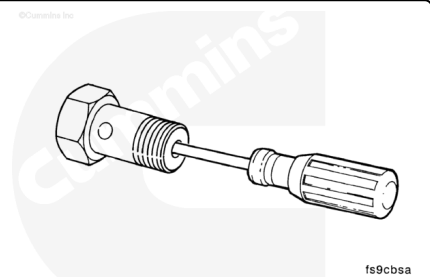

Install

Install the high-pressure relief valve assembly in the reverse order of removal.

Note : Make sure to replace the used sealing washers with new sealing washers.

